



for Ste **12VT**

Use and maintenance Manual

Ed. 12/2017– Rev. fs3
Code: SO-0054
Serial n°: 12VT_____

Original Instruction



SOCAGE

CUSTOMER SERVICE SRL



Ordini ricambi: **vendite@cs.socage.it**
Servizio Tecnico: **tecnico@cs.socage.it**

ASSISTENZA TECNICA • POST VENDITA

**PROFESSIONALITÀ ED
EFFICIENZA A DISPOSIZIONE
DEL CLIENTE**



**TECHNICAL
SUPPORT**



**PRESENZA SU
TERRITORIO NAZIONALE
ED INTERNAZIONALE**

**RIPARAZIONI E
MANUTENZIONI**



FORMAZIONE

**DISPONIBILITÀ E
RAPIDITÀ DI RISPOSTA**



**VENDITA
RICAMBI**



Service and Spare Parts
+39 059 8348000

MDX DESIGN

Via O. Respighi, 113/115
41122 Modena (MO) - ITALY

www.socage.it

INDEX

INTRODUCTORY INFORMATION

CH. 1

IDENTIFICATION DATA
DECLARATION OF CONFORMITY
REFERENCE REGULATIONS DOCUMENTS
INTENDED USE
TECHNICAL INFORMATION
MAIN COMPONENTS AND THEIR NAMES

SAFETY STANDARDS, USER'S INSTRUCTIONS

CH. 2

WARNINGS AND INTRODUCTION
SOMETHING TO ALWAYS DO
SOMETHING TO NEVER DO
RESIDUAL RISKS
UTILIZATION LIMITS

SPECIFICATION OF CONTROLS, MAIN FEATURES, PERFORMANCES EMERGENCY AND PUTTING INTO OPERATION PROCEDURE

CH. 3

SPECIFICATION
MAIN FEATURES AND PERFORMANCES
GENERAL PLAN
WORKING AREA
PUTTING INTO OPERATION PROCEDURE
EMERGENCY PROCEDURE
ARRANGEMENT OF COMPONENTS
CONTROLS AND DRIVES

MAINTENANCE

CH. 4

MAINTENANCE AND RELEVANT PROGRAMME
HYDRAULIC SYSTEM INSTRUCTIONS
TRACING OF A BREAKDOWN

HYDRAULIC SYSTEM

CH. 5

KEYS TO COMPONENTS
DIAGRAM OF HYDRAULIC CIRCUITS

ELECTRIC SYSTEM

CH. 6

KEYS TO COMPONENTS
DIAGRAM OF ELECTRIC CIRCUITS

MARKING

CH. 7

PLATES ON THE MACHINE

INTEGRATION FOR INSULATED BASKET

CH. 8

INSPECTION REGISTER

CH. 9

INSTRUCTIONS
INSPECTION REGISTRATION SHEETS
TRANSFER OF TITLE SHEETS
STRUCTURAL COMPONENTS REPLACEMENT SHEETS
MECHANISMS REPLACEMENT SHEETS
SAFETY DEVICES REPLACEMENT SHEETS
PERSONAL TRAINER SHEET

INTRODUCTORY

A reasonable safety condition during works is essential to prevent serious damages to oneself and to other people. Therefore, it is essential to follow the WARNINGS and to carefully read this manual presenting accurate and fundamental instructions on routine and periodic maintenance procedures.

WARNING: READ AND KEEP THIS MANUAL!



- Study user's instructions.
- The operator shall be trained on the use of this machine, he should know its lifting capacity and utilisation limits, he should know and carefully follow safety standards.
- The instruction manual is a fundamental element for the proper use and the maintenance of this equipment.

TECHNICAL ASSISTANCE SERVICE

For repair and overhaul assistance please call SOCAGE organisation which relies on highly skilled workers and on suitable equipment.

The TECHNICAL ASSISTANCE SERVICE is at your disposal for explanations, advice and for interventions with its own workers, if necessary.

SPARE PARTS SERVICE

Guarantee of good functioning and service life is ensured by the use of original spare parts only, for this purpose refer to "CATALOGUE OF SPARE PARTS".



At the end of this manual there are some sheets on which every intervention, modernisation and change is to be recorded. By doing this, you and we will always have an updated statistical memorandum of the machine.

THIS MANUAL INSTRUCTIONS DO NOT TAKE THE PLACE OF BUT COMPLETE THE OBLIGATIONS ON SAFETY AND ACCIDENT LEGISLATION IN FORCE

SPECIAL EXECUTION

FRAME WITH DEMOUNTABLE STABILIZERS TO MOVE SEPARATELY

In certain cases, concerns the truck on which the installation is made, in order to hold the total weight of the equipment following the builder's instructions of the truck, is carried out the special execution in object which foresees the frame with removable and transportable stabilisers separately with removable and transportable stabilisers separately with an other vehicle.

With regard to the use of the equipment is necessary that the stabilisers, including mechanical fasteners besides hydraulic and electric connections, are mounted correctly.

The technical operations of mounting and dismounting of the stabilizers can easily be performed with normal tools, while for the hydraulic and electric connections are foreseen rapid joints.

The identification of the stabiliser's position on the frame is underlined by an equal number, reported both on stabilisers and on the position's area in the frame.

During the travel, so that the vehicle respects the directions regarding the traffic and the builder's instructions of the truck, the four stabilisers have to be dismounted and transferred on an other vehicle.

In the course of the equipment's use as working elevating platform, the stabilisers have to be positioned in their respective position's areas, fastened mechanically and joined both on hydraulic and electric level.

NOTES FOR ASSEMBLY KIT SUPPLIES

This manual refers to the complete machine as it is supplied by SOCAGE (with the description of the possible variants available on request).

As regards machines supplied with assembly “KIT” (the kit is prepared by workshops other than SOCAGE) the USE AND MAINTENANCE manual has to be drawn by the final installer and must conform the equipment and the directive force.

SOCAGE materials can be only used in the parts which are not changed if compared to the original installation.

NOTE: By assembly KIT of the SOCAGE . company we mean the supply of the upperworks up to the thrust bearing fixing lower ring to be welded on the frame produced by the installer and the main hydraulic components

NOTES FOR PLATFORM UTILIZATION

ATTENTION: TO EXCEED THE LOAD VALUE INDICATED BY THE WORKING AREA CAN LEAD TO STRUCTURAL DAMAGES AND THE OVERTURNING OF THE AERIAL WORKING PLATFORM

COUNTERWEIGHT AND ACCESSORIES

All the eventual counterweights and assembled accessories, which are already present during the inspection, do absolutely not be remove during the platform working phase, because they are integrant parts of the machine and they are indispensable in order to grant the stability opteined with the inspection

***** CHAPTER 1 *****

INTRODUCTORY INFORMATION

The documentation contained in this chapter is composed of
n° 8 pages, this one included..


KEYS AND SYMBOLS USED FOR THE WARNING SIGNS




WARNING: DANGER Signs



PROHIBITION Signs

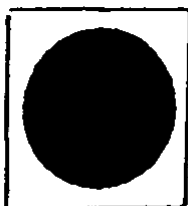

OBLIGATION Signs

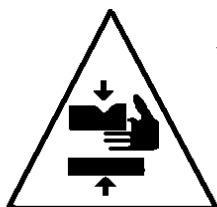

CRUSHING DANGER Signs

IDENTIFICATION DATA OF THE MACHINE

All the information for the identification of the machine is carved on a plate on the turning turret.

N.B. For every demand specify type and serial number.

	
SOCAGE SRL	
STRADA STATALE 12 n.10 41030 SORBARA (MO) ITALY tel. 059 902656 fax 059 907304	
PIATTAFORMA DI LAVORO MOBILE ELEVABILE MOBILE ELEVATING WORKING PLATFORM	
MODELLO MODEL	SO-0022
NOME COMMERCIALE TRADE NAME	DA 320
MATRICOLA SERIAL NUMBER	320DAXXX
ANNO DI COSTRUZIONE YEAR OF MANUFACTURING	2010
PORTATA MASSIMA MAXIMUM LOAD	225 kg 2 PERSONE PEOPLE
CARICO ORIZZONTALE MASSIMO MAXIMUM HORIZONTAL LOAD	40 daN
VELOCITA' MASSIMA VENTO MAXIMUM WIND SPEED	12,5 m/s
INCLINAZIONE MAX TELAIO MAXIMUM CHASSIS INCLINATION	2 °
MASSA TOTALE CON AUTOCARRO TOTAL MASS WITH TRUCK	3500 kg

DECLARATION OF CONFORMITY



SOCAGE SRL

STRADA STATALE 12 N. 10
SORBARA DI BOMPORTO (MODENA) ITALY
TEL. 059.902656 FAX 059.902613

Composizione del fascicolo tecnico a cura di:
Ufficio tecnico Socage presso, Socage s.r.l., strada statale 12 n°10, Sorbara di Bomporto (modena) Italy

PIATTAFORMA DI LAVORO ELEVABILE / MOBILE ELEVATING WORKING PLATFORM

Modello/Tipo/Type/Type/Modelle: **SO-0054**
Nome commerciale/Nombre comercial/Nom commercial/Trade name/Geschäftsname: **12VT**
Matricola/Matricula/N°de serie/Serial number/Serien nr. : **12VTxxxxx**
Anno di fabbricazione/Año de fabricación/Année de fabrication/year of construction/baujahr: **2018**
Su autocarro/autocar/camion/truck/lastkraftwagen: **Iveco 35.....**
Matricola/Matricula/N°de serie/Serial number/Serien nr. : **ZCFC3592.....**

DECLARATION CE

We, the undersigned, hereby declare under our exclusive responsibility that the machine in question conforms to the prescriptions of the Machinery Directive 2006/42/EC and the Directives 2014/35/UE, 2014/30/UE, 2000/14/EC and the standard EN280:2013+A1:2015.

It is identical to the aerial working platform object of the CE type certification. (Enclosure IV)

Esame per la Certificazione CE eseguita da:
Examen para la Certificación CE realizada por:
Examen pour la Certification CE exécuté par:
Examination for EC Certification executed by:
Prüfung für die EG-Bescheinigung ausgeführt vom:

VERICERT SRL (Notified Body n. 1878)
Verità Ricerca Certezza Conformità
Via L. Masotti 5
48124 Fornace Zarattini (RA)

Numero di Certificazione CE:
Certificación CE número:
Certification CE numéro:
Certification EC number:
Zertifikation EG nummer::

xxxx/xx/M

SOCAGE srl
Presidente del C.d.A.
FIORENZO FLISI

Sorbara, li _____

DECLARATION OF THE CONSTRUCTOR



SOCAGE s.r.l.

STRADA STATALE 12 N. 10
SORBARA DI BOMPORTO (MODENA) ITALY
TEL. 059.9121211 FAX 059.907304

PIATTAFORMA DI LAVORO ELEVABILE FORNITA IN KIT / MOBILE ELEVATING WORKING PLATFORM SUPPLIED IN KIT

Modello/Tipo/Type/Type/Modelle:

SO-0054

Nome commerciale/Nombre comercial/Nom commercial/Trade name/Geschäftsname: **12VT**

Matricola/Matricula/N°de serie/Serial number/Serien nr. :

12VTxxxxx

DECLARATION CE

We, the undersigned, hereby declare under our exclusive responsibility that the machine in question conforms to the prescriptions of the Machinery Directive 2006/42/EC and the Directives 2014/35/UE, 2014/30/UE, 2000/14/EC and the standard EN280:20013+A1:2015.

It is strictly prohibited for the machine which is the subject of this declaration to be put into service before the machine on which it will be incorporated or assembled has been declared compliant with the provisions of the Directive 2006/42/EC.

Esame per la Certificazione CE eseguita da:
Examen para la Certificación CE realizada por:
Examen pour la Certification CE exécuté par:
Examination for EC Certification executed by:
Profung für die EG-Bescheinigung ausgeführt vom:

VERICERT SRL (Notified Body n. 1878)
Verità Ricerca Certezza Conformità
Via L. Masotti 5
48124 Fornace Zarattini (RA)

Numero di Certificazione CE:
Certificación CE número:
Certification CE numéro:
Certification EC number:
Zertifikation EG nummer:

xxxx/xx/M

SOCAGE srl

Presidente del C.d.A.
FIorenzo FLISI

Sorbara, li _____

REFERENCE REGULATIONS

This technical document “INSTRUCTION AND MAINTENANCE MANUAL” for raisable platforms model 12VT is identified with code

MUM SO-0054 fs3.

This document has been written in compliance with harmonised regulations

UNI EN 12100-1st part paragraph 3.21

UNI EN 12100-2nd part paragraph 6.

EN 280 paragraph 7.

REVISIONS TO THIS DOCUMENT

This manual reflects the state of the art at the time of the machine's putting into the stream of commerce. It is an integral part of the machine and is in compliance with all regulations, laws and directives binding at that time; this manual cannot be considered inadequate if subsequently updated because of more recent experiments.

Changes, adaptations, etc. (if any) made on machines sold afterwards do not oblige the manufacturer to modify the equipment sold before nor to consider it and the relevant manual insufficient and unsuited.

Any possible supplement to this manual that the manufacturer judges important to send to the user should be kept together with the manual to which is an integral part.

TECHNICAL INFORMATION

REFERENCE REGULATIONS

SOCAGE platforms are manufactured in compliance with the following Directives:

- 2006/42/EC (Machine Directive),
- 2014/30/UE
- 2014/35/UE (EMC)
- 2000/14/EC.

ENFORCED HARMONIZED REGULATIONS

- EN 12100-1:2005 Safety of the equipment (basic procedure);
- EN 12100-2:2005 Safety of the equipment (technical principles);
- EN 13857:2009 Safety distances of the upper parts;
- EN ISO 13850:2007 Emergency stop devices;
- EN 349:2008 Distances of pressing of parts of the body;
- IEC/EN 60204-1 Electrical equipment of the machines;
- DIN 15018 foglio 3 Calculations of steel structures;
- DPR 303/56 General regulations for hygiene on work
- DLgs 81/2008 Regulations for prevention of accidents on work place
- EN 13849-1:2008 Safety related parts of control system
- EN 13849-2:2013 Safety related parts of control system
- EN 280:2013+A1:2015 Aerial work platforms
- EN 12999:2012 Cranes safety- Loaders Cranes
- EN 4413:2012 Safety requirements for fluid systems and their components

ENFORCED REGULATIONS AND TECHNICAL RULES

EN 280 (Raisable working platforms)

EN 80 WGP8 (TC147) (Structural calculation)

NUMBER OF ESTIMATED LOADING CYCLES according to EN 280:2013

100.000 (e.g. 10 Years, 50 weeks per year, 40 hours per week, 5 cycles per hour)

Within this number of cycles a complete overhaul and a deep structural inspection of the machine should be carried out. If working conditions are particularly heavy (e.g. always maximum load, great straddle , etc.) this inspection must be sped up (ask the manufacturer for an inspection of the machine).

EVERY 1500 - 4500 HOURS, WE SUGGEST A COMPLETE CHECKING PROCEDURE BY THE MANUFACTURER.

CYCLES REDUCTION FOR AUTHORIZED MACHINES AT INCREASED LOAD CAPACITY

66.000 (e.g. 7 Years, 48 weeks per year, 40 hours per week, 5 cycles per hour)

Within this number of cycles a complete overhaul and a deep structural inspection of the machine should be carried out. If working conditions are particularly heavy (e.g. always maximum load, great straddle , etc.) this inspection must be sped up (ask the manufacturer for an inspection of the machine).

EVERY 1000 - 3000 HOURS, WE SUGGEST A COMPLETE CHECKING PROCEDURE BY THE MANUFACTURER.

USE AND STORAGE CONDITIONS

SOCAGE platforms are manufactured to function under these environmental conditions:

- 1 working temperature: min. -10°C max. +40°C
- 1 humidity 30% - 95% without condensation

When the machine is to be used under environmental conditions other than the standard ones, special devices are available on request.

IMPORTANT

NEVER USE THE MACHINE UNDER UNFAVOURABLE AIR CONDITIONS (i.e.: MANY WORKING HOURS IN A SEE AREA).

- storage temperature: -30°C max. +60°C.
- if the oil temperature tends to exceed 70° C. it is necessary to mount a heat exchanger.

COUNTERWEIGHT AND ACCESSORIES


All the eventual counterweights and assembled accessories, which are already present during the inspection, do absolutely not be remove during the platform working phase, because they are integrant parts of the machine and they are indispensable in order to grant the stability opteined with the inspection

STATIC TEST

The machine HAS SUCCESSFULLY OVERCOME THE STATIC TEST carried out according to EN280:2013+A1:2015 as follows:

- Machine positioned at max allowed inclination;
- Machine with minimum allowed stabilisation;
- Pantograph boom totally raised and parallel to the ground;
- Machine at max outreach and turned basket;
- Test load equal to nominal load + an increase foreseen by EN280 (wind, operators' pushes and dynamic effects);
- Slow starting of the machine rotation on the whole working area (at least 180° sideways), always keeping under control the position of the outriggers opposite the boom.

The test is considered overcome only if in the whole working area two outriggers never lift at the same time (so only one of the outriggers can be lifted, according to the position of the boom).

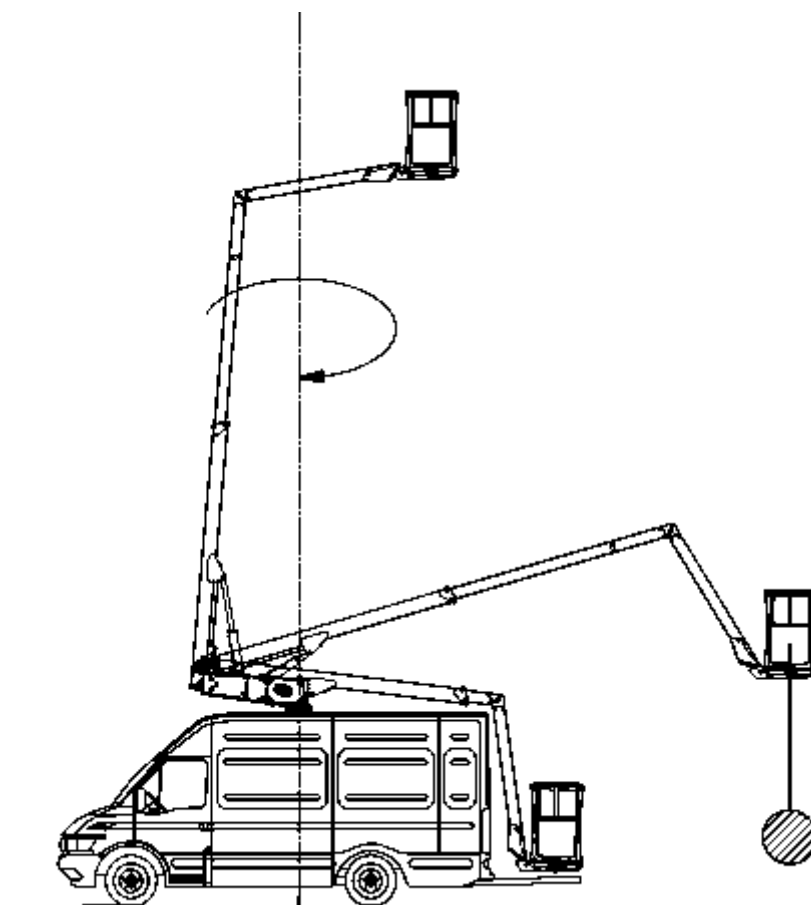

***** CHAPTER 2 *****

SAFETY STANDARDS USER'S INSTRUCTIONS

The documentation contained in this chapter is composed of
n°12 pages, this included..

For the use of platform the operators both private and professional have to:

- be in perfect psycho-physical conditions**
- have the license guide (right degree to the use of vehicle)**
- be instructed to the use of platform (as provided by law)**
- have read and understood all the instructions and information in this manual and in the machine**

USER'S INSTRUCTIONS

IMPORTANT WARNINGS

ALL THE PROVISIONS ON USE AND MAINTENANCE CONTAINED IN THIS MANUAL ARE UNBREAKABLE, THEREFORE WE RECOMMEND TO CAREFULLY AND FREQUENTLY READ THEM AND TO ALWAYS PUT THEM INTO PRACTICE.

WITHOUT PREJUDICE TO SOCAGE SRL'S NON-LIABILITY OUTSIDE THE WARRANTY GIVEN, AFTER INSPECTION AND DELIVERY OF THE MACHINE, SOCAGE SRL RECOMMENDS TO CAREFULLY AND REGULARLY FOLLOW ALL THE PROVISIONS CONTAINED IN THIS MANUAL AND TO CORRECTLY PUT INTO PRACTICE THE REGULATIONS IN FORCE. THE NON-ENFORCEMENT OF WHAT INDICATED ABOVE IS ANOTHER REASON OF NON-LIABILITY FOR DAMAGES AGAINST THE MACHINE, THINGS, PERSONS AND OTHERS.

IN THE ABOVE INDICATED CASES THE 12-MONTHS WARRANTY IS NOT EFFECTIVE. TECHNICAL DATA CONTAINED IN THIS MANUAL CAN UNDERGO CHANGES DUE TO THE DIFFERENT TYPES OF TRUCKS, TO TECHNICAL CHANGES, OR TO THE ENTERING INTO FORCE OF MODIFIED REGULATIONS.

THEREFORE, THE USER SHOULD CAREFULLY STUDY THE ABOVE MENTIONED TECHNICAL DATA.

FOR SPECIAL WORKING CONDITIONS NOT INDICATED IN THIS DOCUMENT, ASK FOR THE MANUFACTURER'S WRITTEN APPROVAL.

INTRODUCTION

The operator of the platform being the only element of the machine who can think and reason, his responsibility is not reduced by the addition of safety devices. Every over-indulgence in easiness reducing concentration and attention in using these devices is absolutely forbidden.

Safety devices are intended to help, not to supervise operations.

Safety devices can be mechanic, electronic, or both, and they are for this reason subject to breakdowns and improper use.

The operator is the sole person responsible for his own safety and for the safety of by-standers: he must act as a professional, scrupulously following all safety standards.

ALWAYS KEEP IN MIND: THE NON-OBSERVANCE OF EVEN JUST ONE SAFETY STANDARD CAN CAUSE ACCIDENTS TO PERSONS, THINGS OR TO THE MACHINE.

The operator should make sure that every person he is working with is aware of dangers related to the functioning of the platform and that, therefore, is properly trained.

At any time, the operator should be aware of his own responsibility for the safety of his work-mates, for the safety of the machine and of everything surrounding it.

The operator should always check that the platform is properly stabilised; he should mind to the wind, to the movements of the arm and to every unusual thing, even the one which would be not remarked by a less careful person.

IT IS COMPULSORY TO LEARN AND TO FOLLOW ALL SAFETY STANDARDS. FOR THIS REASON, IT IS ESSENTIAL TO DEEPLY UNDERSTAND THIS MANUAL BEFORE USING THE PLATFORM. AT THE DELIVERY OF THE MACHINE, INSTRUCTIONS NECESSARY TO ITS USE WERE SUPPLIED TO THE BUYER; IN CASE OF HIRE OR TRANSFER, THE TRANSFEROR MUST GIVE THESE INSTRUCTIONS TO THE NEW USER.

SAFETY STANDARDS: SOMETHING TO ALWAYS DO

FOR SAFETY PURPOSES, IT IS ABSOLUTELY ESSENTIAL TO ALWAYS CARRY OUT THE FOLLOWING OPERATIONS:

- Carefully follow the user's instruction (in chronological order).
- It is absolutely forbidden to use the equipment with weights exceeding the ones indicated on the machine and in this document and in a way different from what indicated on the machine and in this document.
- Read the content of all the plates put on the equipment and in the maintenance and use manuals of the components of the same.
- The machine must be operated by at least two persons, one of them being a skilled worker perfectly knowing the use of the machine and who has to stay on the ground. If there isn't a control on the ground, the drives board on the ground have to be locked/ forbidden so other people can't have the access.
- Before installing this equipment, stabilise it with the help of stabilisers equipped with anchor plates; these stabilisers must necessarily rest on a solid ground. If necessary, use boards to arrange the thrusts on a big enough area with regard to the characteristics of the ground. These boards must be of a material suitable to the stabilisers' thrust, they must be thick enough and tried before use without workers on the machine which has to be at the maximum straddle, with the basket near the ground, and with a weight equal to the maximum allowed loading capacity.
- If the ground slopes, make sure that the inclination does not exceed 3°. In case of ground grade, provide always to adopt right means to prevent the mean's sliding (wedges under the wheels or other similar clamp systems). A difference in level due to horizontal steps is not to be considered a slope.
- The maximum deviation of the thrust bearing plane from the horizontal line must not exceed 2°.
- Make sure that the platform never rests on other structures, whether fixed or moving.
- Keep in mind that operations to reach the working spot must be carried out by the operator on the platform. As a matter of fact, GROUND OPERATION IS ALLOWED IN CASE OF EMERGENCY ONLY since, from ground, it is impossible to correctly estimate any interference, obstacle, real dynamic of basket movements, etc.
- Make sure there are no electric lines.
- If the platform is used on busy roads , it is compulsory to signal the presence of such platform by both the appropriate ground signals and the winking light and to follow traffic regulations in force.
- When entering into the basket, safety belts must be immediately fastened to the special connections and entry protections must be closed; make sure they are properly locked.

- All workers should wear the safety helmet, in accordance with the law. Do not drop any material from the basket or from top. For special works (pruning, painting, etc.) provide for necessary protections and measures for the safeguard of persons, of surrounding things and of the machine itself. It is forbidden to use working tools which are not in compliance with regulations in force.
- It is absolutely forbidden to insert tools, hands, fingers, etc. within the holes on the telescopic arms and in places where there are dangers arising from interference, cutting and crushing, etc.

WHILE MOVING :

- Drive with caution and avoid high speeds.
- Check if the chosen road is suitable to the equipment dimensions.
- Check if tyres show wear and tear and if inflating pressure is correct (when tyres are cold).
- Put on the brake when the machine is parked on a sloping road, and if necessary, lock the wheels with wedges.
- It is forbidden to travel or to move the truck with people or charges/materials in the basket or in the turret or on the frame walking floor

BEFORE GOING UP:

- Carry out daily inspections as indicated in chapter 4 “Maintenance”.
- Use the protective helmets and the approved accident-prevention dress.
- Put on the locking device for turret hydraulic distributor levers.
- Check to make sure that the automatic levelling of the basket is perfectly reset (basket horizontal) and pressurised
- Fasten safety belts (attacks on the basket belts are for one person to attack).
- Close entry protections.
- Once again, make sure that all controls are in working order and fix the working material properly, so that it cannot move or create dangers.
- Make sure that all operators are aware of use and maintenance provisions.

WHEN RAISED

- While moving, mind to arm travels; during rotation, lifting, lowering, march, etc., mind to any possible obstacle.
- Keep a minimum distance of at least 5 m (five metres) from electric lines and pylons and follow current regulations on minimum distances.
- Avoid any collision of basket or arms with the truck cabin, stabilisers or with other parts of the machine, with fixed (buildings) or moving (vehicles, cranes, etc.) obstacles.
- Do not stand under the working area of the equipment, in particular under arms and basket.
- Use the equipment for vertical movements only, never perform any throwing or thrusting towards any direction.
- Keep your hands far from joints or openings.
- It is forbidden to move load in and out of the basket.

AT THE END OF WORK

- Make sure that the structure and the operator-holding basket are in non-working position and that stabilisers have completely come back.

IMPORTANT

KEEP IN MIND THAT, ACCORDING TO D.lgs. 81/08 Art. 71 comma 11 e 12, all'Allegato VII, VARYING INCLINATION AERIAL LADDERS, INVOLUTE WAGON BRIDGES AND SUSPENSION WINCH BRIDGES MUST BE TESTED AND INSPECTED EVERY YEAR, FROM THE ORGANS IN CHARGE OF SECURITY (ISPESL-USL-ASL-ARPA) IN ORDER TO DETERMINE THEIR EFFICIENCY WITH REGARD TO SAFETY.

SAFETY STANDARDS: SOMETHING TO NEVER DO

FOR SAFETY PURPOSES, IT IS ESSENTIAL TO NEVER USE THE MACHINE UNDER THE FOLLOWING CONDITIONS:

- With weights and in ways other than the ones for which it has been designed, tested and delivered (which are indicated on the machine itself);
- On an unsteady, wet or cluttered ground or having a slope exceeding 3°;
- Never use the machine during automatic basket levelling not reset (basket horizontal) and not pressurised
- With wind exceeding 12,5 m/s ;
- Near electric lines (The machine is not insulated);
- Without the entry protection bar of the basket;
- With material or objects hanging from the machine arms or sides (in any way outside the basket);
- Using ladders or similar tools within the basket;
- Performing any throwing or horizontal/inclined thrusting exceeding 20daN per person or o 40daN every two or more persons (move in an horizontal direction only);
- In areas presenting exploding hazard;
- If there are cracks, flaws, hydraulic leaks, cut wires or any other anomaly in functioning;
- At a temperature lower than -10°;
- As a lifting device for materials;
- With safety devices out of order or not inspected;
- Under dangerous weather conditions (poor visibility, thunderstorms , lightning, etc.);
- With posters, banners, etc. hanging from the basket, arms or other parts of the machine.

IMPORTANT

It is absolutely forbidden to insert tools, hands, fingers, etc. into the holes on telescopic arms, cable pulleys and on joints.

DURING WASHING WITH HIGH-PRESSURE JET DO NOT AIM AT BOXES, CABINETS AND ELECTRIC COMPONENTS. DO NOT WASH WITH DETERGENTS, CHEMICALS, PETROL OR SIMILAR SUBSTANCES, WHICH CAN DAMAGE RUBBER PARTS, PLASTIC COMPONENTS AND FILMS.

IMPORTANT

It is forbidden to increase the load onto the basket and to transport people when the platform is raised (even if you comply with the maximum capacity load)

WARNING!!! PAUSES/WORKING BREAK

Never leave the machine without care if the motor has not been turned off, the control board on ground blocked and the cabin compartment of the truck locked.

We advise you, in case of pauses or working break, to carry the platform on the ground (in transport position).

It is strictly forbidden to keep the machine open for long time, without carrying out a daily control on the status of the different components (valves, outriggers, levelling, etc...)

WARNING!!! WORKING NEAR ELECTRIC LINES

Operate with aerial platform near electric lines is always very dangerous because of the mobility of the machine structure.

We remind you that there can be electric discharges even without the contact with the two parts, but it can be sufficient that they go near a minimum level of the minimum security distance (see the set of rules in force in the country of destination of the machine).

The set of rules in Italy (D.Lgs 81 all- IX), prescribes the minimum distances given in the table . This value is to be considered the lowest distance during the different manoeuvres with the platform.

In any case we advise you previously to require the interruption of the current supply for the period of working with the platform.

<u>KV</u>	<u>DISTANCES MIN.</u>
≤ 1	3
1 ≤ 30	3,5
30 ≤ 132	5
> 132	7

RESIDUAL RISKS AND APPROPRIATE PRECAUTIONS

- Abrupt working of control levers: jerks and swinging hazard. GENTLY MOVE THE CONTROLS TO REGULATE SPEED AND ACCELERATION.
- Overload and horizontal/inclined thrusting: tilting hazard. DO NOT EXCEED WORKING LOADING CAPACITY.
- Ground sinking: tilting hazard. CHECK GROUND PRESSURE AND GROUND SOLIDITY (see ground pressure under stabilisers) (mind to winter thawing).
- Wind gusts: tilting hazard. DO NOT WORK UNDER DANGEROUS WEATHER CONDITIONS.
- Stroke against an obstacle, whether on the ground or in the air: collision and tilting hazard. BE EXTREMELY CAREFUL DURING OPERATION.
- Stroke against a tension line: electric shock hazard. KEEP AT A SAFE DISTANCE FROM ELECTRIC LINES.
- Work on platforms and sidewalks, etc.: tilting hazard. PAY ATTENTION TO THE GROUND AND TO THE POSITION OF STABILIZERS.
- Work in an explosive environment: explosion hazard. PREVIOUSLY GET INFORMATION ABOUT EXPLOSION OR FIRE HAZARD IN THE PLACE OF THE INTERVENTION.
- Persons near the working area of the machine: crushing hazard. KEEP WORKING AREA CLEAR AND FORBID ADMITTANCE TO UNAUTHORIZED WORKERS. DURING WORKING HOURS, CHECK IF WORKERS RESPECT THIS PROHIBITION.
- Thermal engine + exhaust: burning and poisoning hazard. DO NOT STAND NEAR EXHAUSTS. WHEN WORKING AT INTERIORS DIRECT EXHAUSTS OUTSIDE.
- Mind to overloads from top or caused by contact with other structures . BEFORE STARTING ANY WORK, PAY ATTENTION TO WORKING AREA CONDITIONS, TO THE GROUND, TO OBSTACLES, TO LUMINOSITY AND NOISE AND TO TRAINING OF WORKERS IN CHARGE OF THE MACHINE UTILIZATION.
- Poisonous materials. IN THE EQUIPMENT THERE ARE TOXIC SUBSTANCES AND MATERIALS (POISONOUS WHEN SWALLOWED OR INHALED (QUICK SILVER, OILS, PLASTICS ,ETC.) MAINTENANCE AND REPAIR OPERATIONS SHOULD BE CARRIED OUT BY TRAINED AND SKILLED WORKERS ONLY.

NB. IF THE MACHINE IS EQUIPPED WITH HOSES FOR EXHAUST GAS DEVIATION IT IS COMPULSORY TO USE THEM.

UTILIZATION LIMITS

DO NOT USE THE MACHINE:

- With a load exceeding working loading capacity.
- On a ground which is not resistant to pressure and weight under stabilisers.
- On a slope or inclination exceeding 3°.
- With the side stress in the basket exceeding 20daN for every person (max. 40daN for more than one person).
- With a wind exceeding 12,5 m/s.
- Within refrigerating chambers.
- In explosive or poisonous surroundings.
- During a thunderstorm.
- With poor visibility.
- In a not enough ventilated area. (Toxic exhaust gas of thermal engines).

INFORMATION ABOUT WIND SPEED

WIND FORCE Beaufort scale	WIND SPEED M/s	DESIGNATION	FEATURE
0	0.0 - 0.2	Calm	Calm wind; smoke is whipped up vertically or nearly vertically.
1 2	0.3 - 1.5 1.6 - 3.3	Light breeze	The wind direction is given by the smoke one; wind is felt on the face, leaves as well as baffle plate start moving.
3 4	3.4 - 5.4 5.5 - 7.9	Moderate breeze	Leaves and branches move continuously. Dust and paper are moved on the ground.
5	8.0 - 10.7	Quite near gale	Small branches with leaves move; waves on canals and lakes are formed.
6	10.8 - 13.8	Near gale	Big branches swing, wind whistles when passing through the electric line cables; it is difficult to walk with the umbrella opened.
7	13.9 - 17.1	Strong gale	Trees swing; it is difficult to walk.
8	17.2 - 20.7	Stormy wind	Branches are broken; it is hardly possible to walk.
9	20.8 - 24.4	Storm	The wind damages houses (antennas and roofing-tiles are swept away).


CAUTION

WIND SPEED IS MEASURED ON AVERAGE FOR APPROXIMATELY 10 MINUTES AT A 10-METER HEIGHT ON A LEVEL GROUND.

SUMMARY OF MOST IMPORTANT WARNINGS


MOVEMENT POSITION

Make sure of the complete non-working condition.

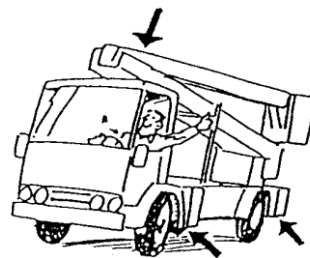


MOVEMENT

Mind to obstacles to the machine.

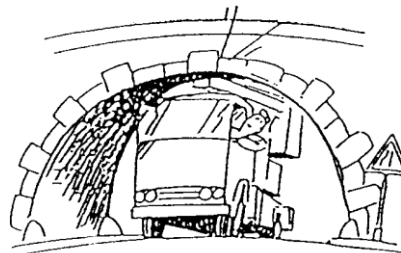


STABILIZATION

Mind to ground solidity.

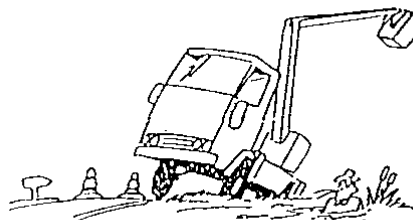

STABILIZATION

Maximum inclination ground.

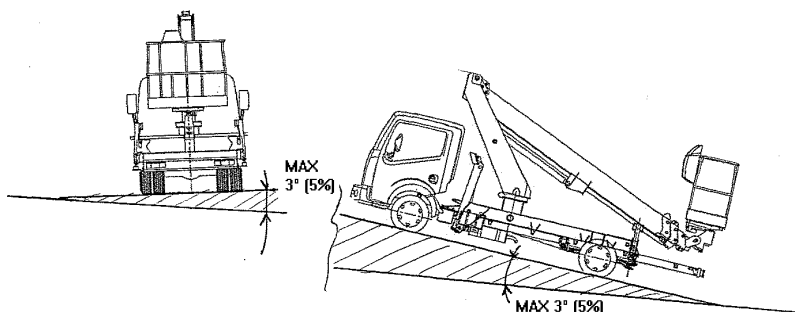


BALANCING

Check maximum allowed inclination.




WORKING AREA

Put barriers around working area.

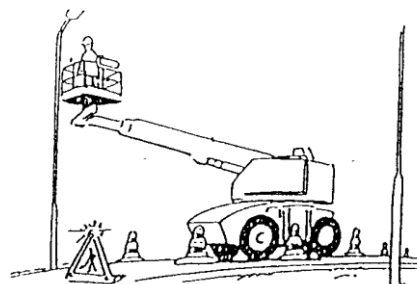

EMERGENCY STOP

If there is any anomaly, stop the machine.
BEFORE SWITCHING ON THE
MACHINE AGAIN, MAKE SURE THAT
DANGEROUS CONDITIONS ARE OVER

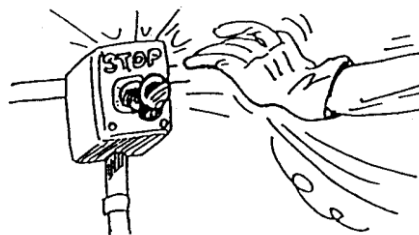


OBSTACLES AND ELECTRIC LINES

Make sure that there are no electric lines
and obstacles of some kind.




STROKE AND THRUSTING AGAINST OBSTACLES

The stroke and/or the thrusting against an obstacles
(opening/closing and/or lifting/lowering) may create
structural damages to the machine and serious risks of
tilting of the platform. Before and during the movements,
always verify visually the encumbrance of the machine
structure in all the directions (with particular attention to
the hidden parts, such as the lower part of the basket).

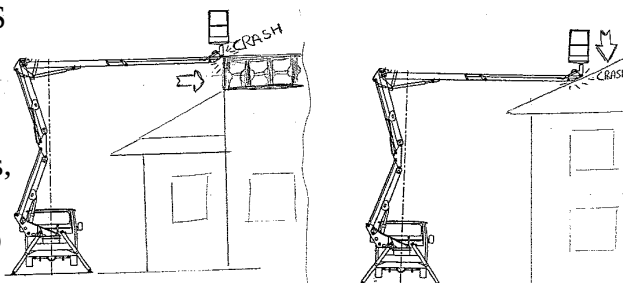


SAFETY BELTS

Mind to maximum working wind.
ALWAYS AND PROPERLY use
safety belts (attacks belts on the basket
are for one person to attack)..

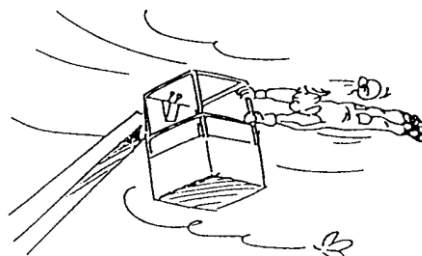

PROTECTIONS

When performing special works,
safeguard yourself and the machine.

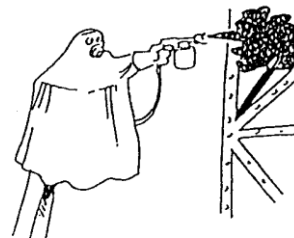

IN THE BASKET

Never use ladders, boards, or other object,
IT IS FORBIDDEN to mount onto the banister.




IN THE BASKET

Never exceed loading capacity allowed in the basket.



LIFTING

Never use the platform as a lifting device, not even for small weights.

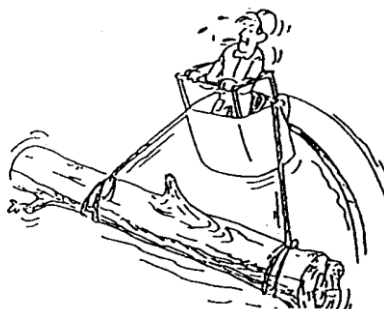


SAFETY BELTS AND HELMET

Always use safety belts and helmet.
Do not fasten belts to structures outside the basket BUT ONLY TO THE INDICATED SPECIAL CONNECTIONS (each attack is for a person) .




REPAIRS AND MODIFICATIONS

Do not carry out any repair or modification unless at authorised repair shops.

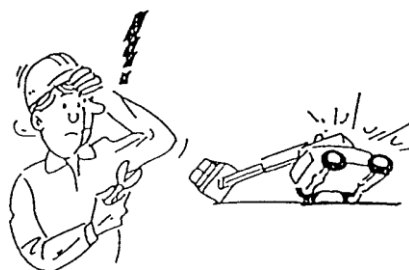

ATTENTION !!! LOAD ON HEIGHT

Do not load the basket while it is in height with tools or people. This operation can cause the tilting of the machine or serious damages to the structure.

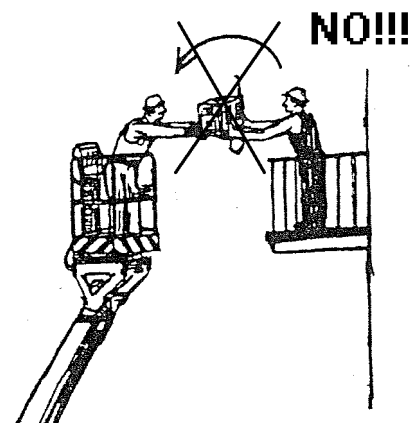

IMPORTANT!!! CONSISTENCY OF THE GROUND

During the manoeuvres of installation of the outriggers give attention to the ground where you will put the outriggers plates.

You always have to verify the consistency and the solidity of the ground and, if it's necessary, interpose the right uprated baseplates to obtain a better load distribution transmitted to the ground (if you have doubts ask information to the yard manager or to a civil engineer experienced of the ground consistency).

For the load values transmitted to the ground from the machine's outriggers, see chapter 3 "Characteristics and performances", and for the consistency ground values you can find a chart of the allowable pressures of some kinds of ground below.

For the calculation of the specific pressure loaded on the ground from the outriggers use this formula:

$$P = F/A$$

where:

P= specific pressure loaded on the ground by the outrigger (daN/cm²-kg/cm²)

F= maximum load of the outriggers (kg-see chap. 3)

A= area/bearing surface of the outrigger (cm²)

Example for the platform with F= 9240 lb and the baseplates with surface A= 13'2" (dimensions 8"x8")

$$P = 9240/64 = 700 \text{ lb/ft}^2$$

With uprated baseplates with surface A'= 52'6" cm² (dimensions 1'4"x1'4")


$$P' = 9240/52'6" = 170 \text{ lb/ft}^2$$

Chart with the values of the ground consistency

Kind of ground	Specific pressure allowable (daN/cm ²)
Shifted grounds, not compact	1 - 2
Compact and granular grounds (sand)	2 - 6
Compact grounds (sand+gravel)	4 - 10
Rocks of middle consistency (limestone-sandstone)- paving suitable for the transit of the heavy means	10 - 15
Rocks of remarkable consistency (strong limestone-strong sandstone)	15 - 30
Compact rocks (porphyry-basalt-granite)	30 - 50

IMPORTANT!!! – SECURITY DISTANCE FROM DITCHES/SLOPES

During the installation of the outriggers, keep always a sufficient security distance from ditches and slopes. This distance is a consequence of the kind of ditch/slope (propped and not propped) and of the kind of ground (we advise you to ask information to the yard manager or to a civil engineer experienced of the ground consistency). We give you below the scheme/theoretical rule:

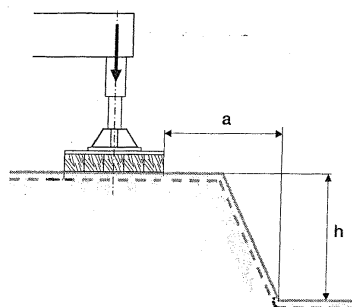

In case of ground subject to landslides or reported - $a = 2xh$

In case of compact ground, not subjected to landslides or reported - $a = 1xh$

***** CHAPTER 3 *****

DESCRIPTION, CONTROLS, FEATURES,
PERFORMANCES, EMERGENCY AND PUTTING INTO
OPERATION PROCEDURE

The documentation contained in this chapter is composed of
n° 20 pages, this included..


Important.: dimensions and weight reported have $\pm 5\%$ of tolerance

Description of the machine

3.1 Declared use of the machine

The Socage aerial working platform is designed and realised for lifting and moving people, who are housed inside a levelled basket, through space in all of the field of movements that can be performed. The platform lifts the staff vertically, allows horizontal movement by means of the joints and extensions and allows angular movements via the rotary turret. The machine works with the outriggers pressed to the ground. Staff can take tools into the basket up to the maximum capacity indicated. Once at height, the staff cannot tranship objects .

3.2 Main components

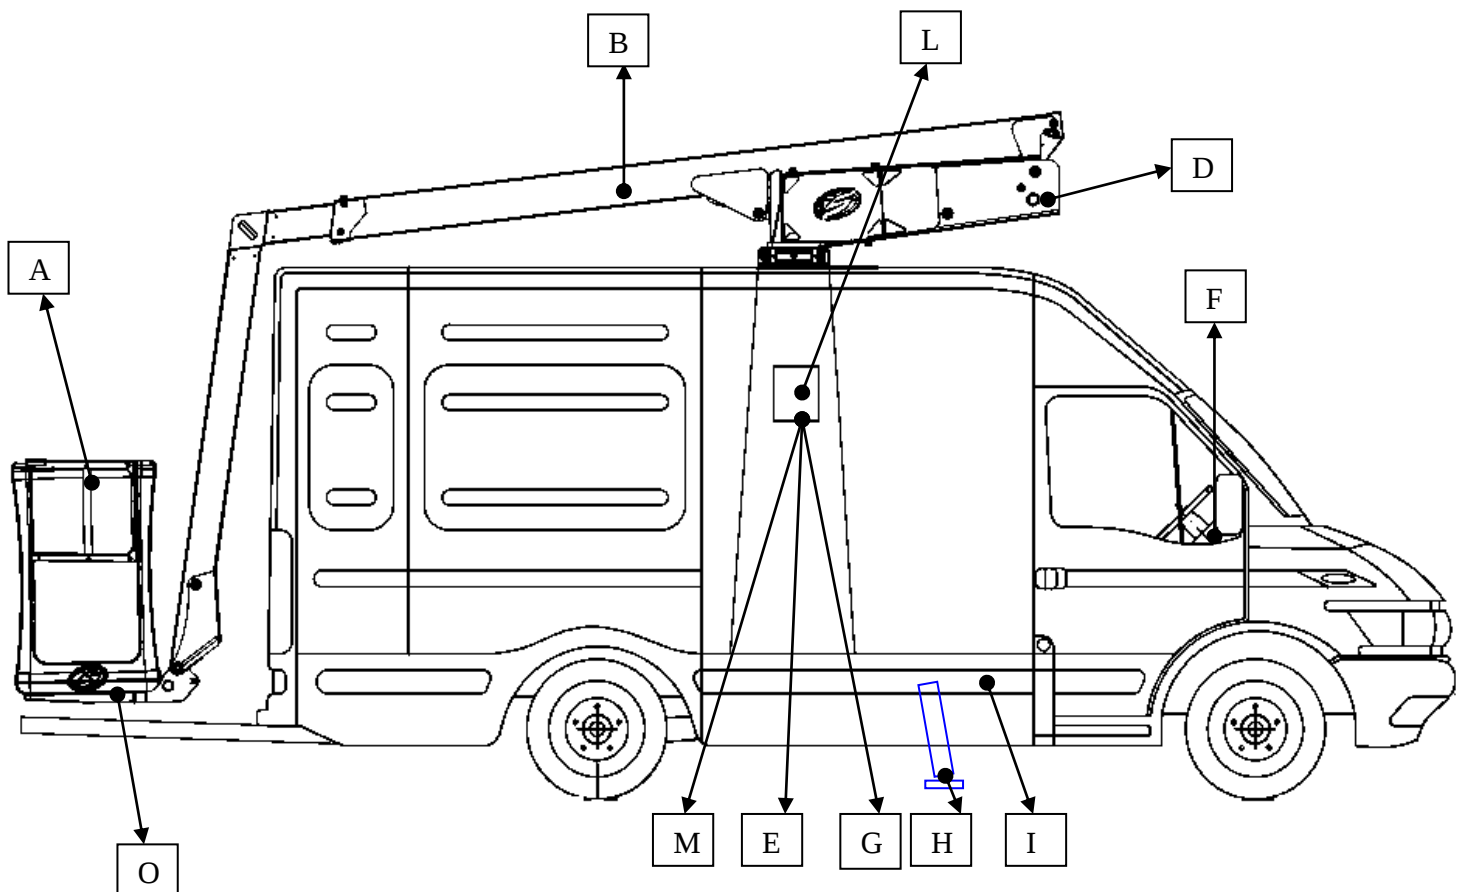

A – Controls in the basket

Hydraulic distributor for the movement of the basket platform.

B – Main telescopic boom

Telescopic boom with extension and swivelling realised with two hydraulic cylinders.

D - Turret

In top quality sheet steel, it is composed of a main press-bent body and electro-welded reinforcements. It is installed on the fifth wheel coupling support of the superstructure; rotation is ensured by a hydraulic motor with worm screws and automatic brake in work position. A rotating hydraulic distributor allows continuous rotation of the superstructure with respect to the chassis.

E – Oil tank

It is the tank that contains the oil for powering the machine's hydraulic plant, complete with MIN/MAX level.

F – Control board in cab

To check the correct insertion of the power take-off and activation of the plant. It is equipped with a timer in order to detect functioning times.

G – Power take-off control

For mechanical insertion of the power take-off.

H – Outriggers (optional)

With individual or simultaneous descent, they are fixed to the secondary frame.

I – Base frame

It is the top quality steel support structure for fixing the aerial part to the truck. It is finished with a walking floor in slip-proof aluminium.

L – Emergency hand pump/ or Electricpump

Hand pump for emergency descents.

M – Outrigger controls (optional)

Hydraulic distributor and panel for selecting outrigger movement.

N – Emergency controls

For moving the machine from the ground during descent in emergency conditions.

O- Operator basket

It is the car that hosts the operator/s and the tools. It is realised in fibreglass with dimensions of 700x700x1100 mm. Option available is an aluminium basket with size 1400x700x1150 or a fibreglass basket with size 1400x700x1100mm (basket capacity decrease to 200kg) .


HYDRAULIC PLANT POWER SUPPLY

Power supply with pump coupled to the truck power take-off, with coupling control positioned in the driver's cab, completed by a luminous insertion indicator, positioned on the dashboard.


3.3 Technical features

Model	12VT	SO-0054
Maximum work height	m	12.10
Basket walking floor maximum height	m	10.10
Maximum work reach	m	7.80
Basket maximum outreach	m	7.10
Standard capacity	kg	120kg – 1p
Standard capacity with basket for 2 person	kg	200kg – 2p
Dimensions of fibreglass basket N.B.capacity 120kg	mm	700x700x1100
Dimensions of fibreglass basket (optional) N.B: capacity decreases to 200kg	mm	1400x700x1100
Superstructure rotation	°	400°
Lifting speed	m/s	0.4
Extension speed	m/s	0.4
Rotation speed	m/s	0.7
Travelling dimensions	See layout page 3.6	
Level of machine vibrations	m/s ²	< 0,25
Noise intensity level LWA	dB	80
Note: The noise produced is caused by the motor of the truck, the detection of the noise on the platform at 1.60 m from the walking floor during the ascent, descent and extension phases has not signalled noise pressure exceeding 80 dBA		

WORKING AREA

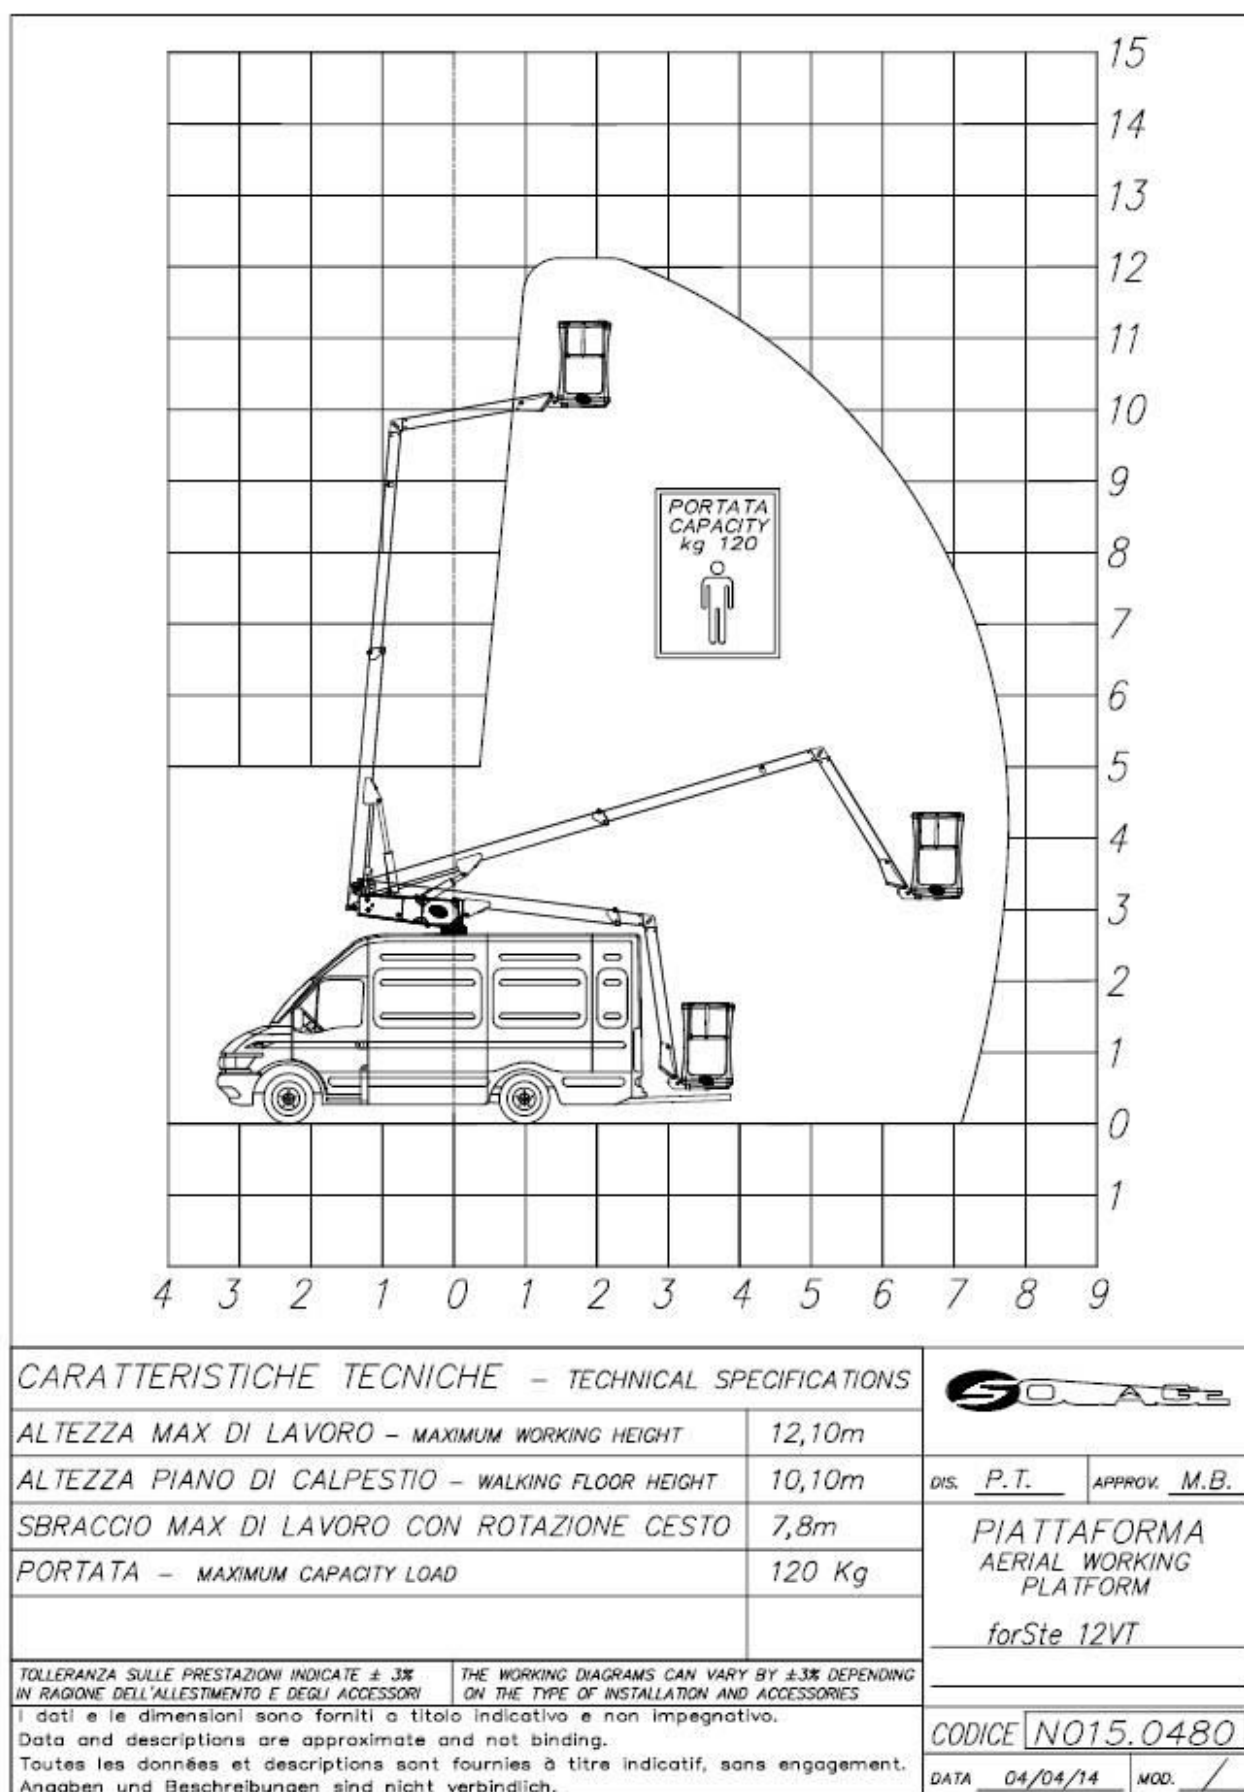

WORK AREA (FIBERGLASS BASKET FOR 2 PERSON)

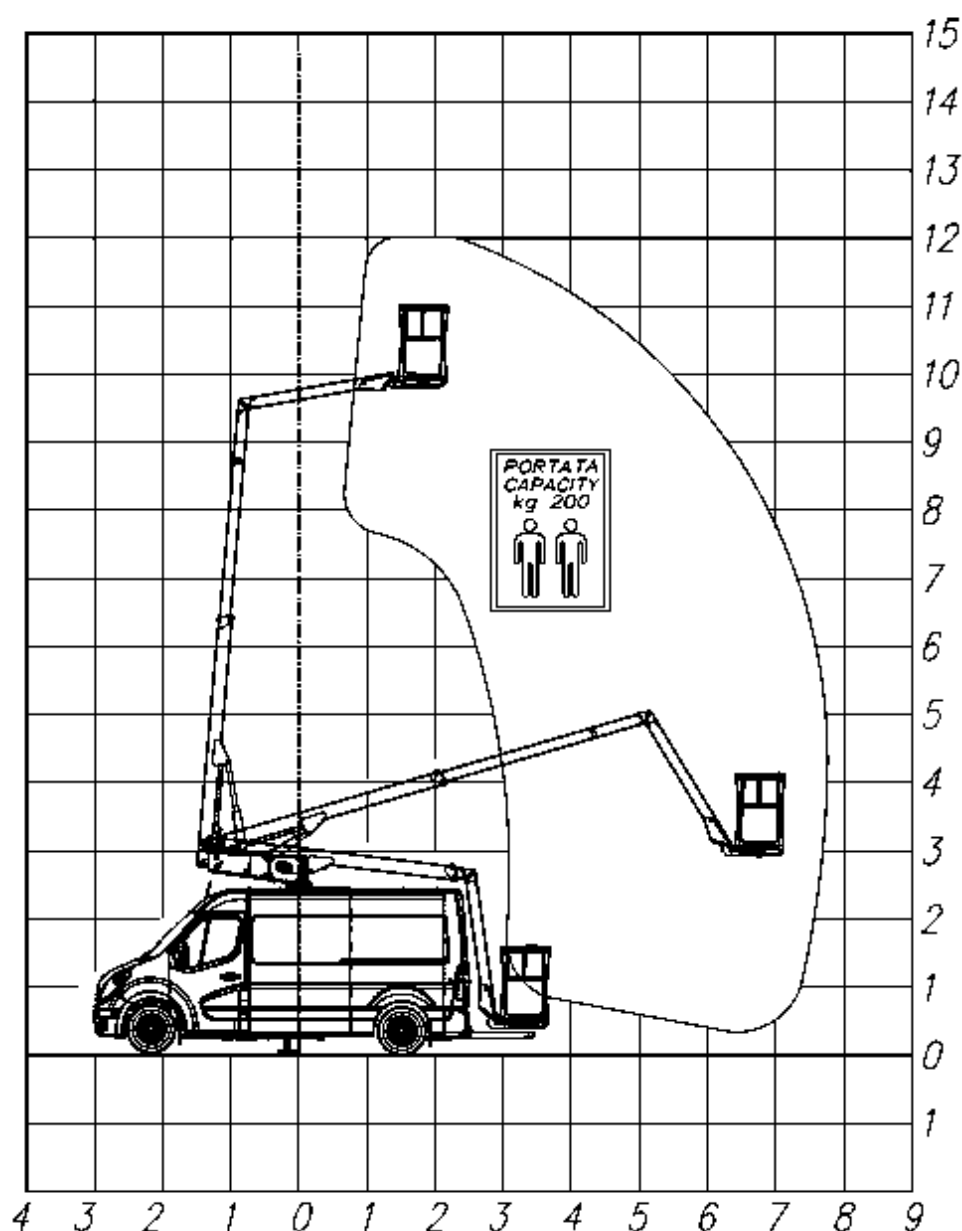

CARATTERISTICHE TECNICHE – TECHNICAL SPECIFICATIONS

ALTEZZA MAX DI LAVORO – MAXIMUM WORKING HEIGHT	12m
ALTEZZA PIANO DI CALPESTIO – WALKING FLOOR HEIGHT	10m
SBRACCIO MAX DI LAVORO CON ROTAZIONE CESTO	7,8m
PORTATA – MAXIMUM CAPACITY LOAD	200kg



DIS. P.T. APPROV. M.B.

PIATTAFORMA
AERIAL WORKING
PLATFORM

forSte 12VT

RENAULT MASTER L2H2

TOLLERANZA SULLE PRESTAZIONI INDICATE $\pm 3\%$
IN RAGIONE DELL'ALLESTIMENTO E DEGLI ACCESSORI

THE WORKING DIAGRAMS CAN VARY BY $\pm 3\%$ DEPENDING
ON THE TYPE OF INSTALLATION AND ACCESSORIES

I dati e le dimensioni sono forniti a titolo indicativo e non impegnativo.

Data and descriptions are approximate and not binding.


Toutes les données et descriptions sont fournies à titre indicatif, sans engagement.

Angaben und Beschreibungen sind nicht verbindlich.


CODICE NO150544

DATA 11/04/2015 MOD. /


GENERAL LAYOUT

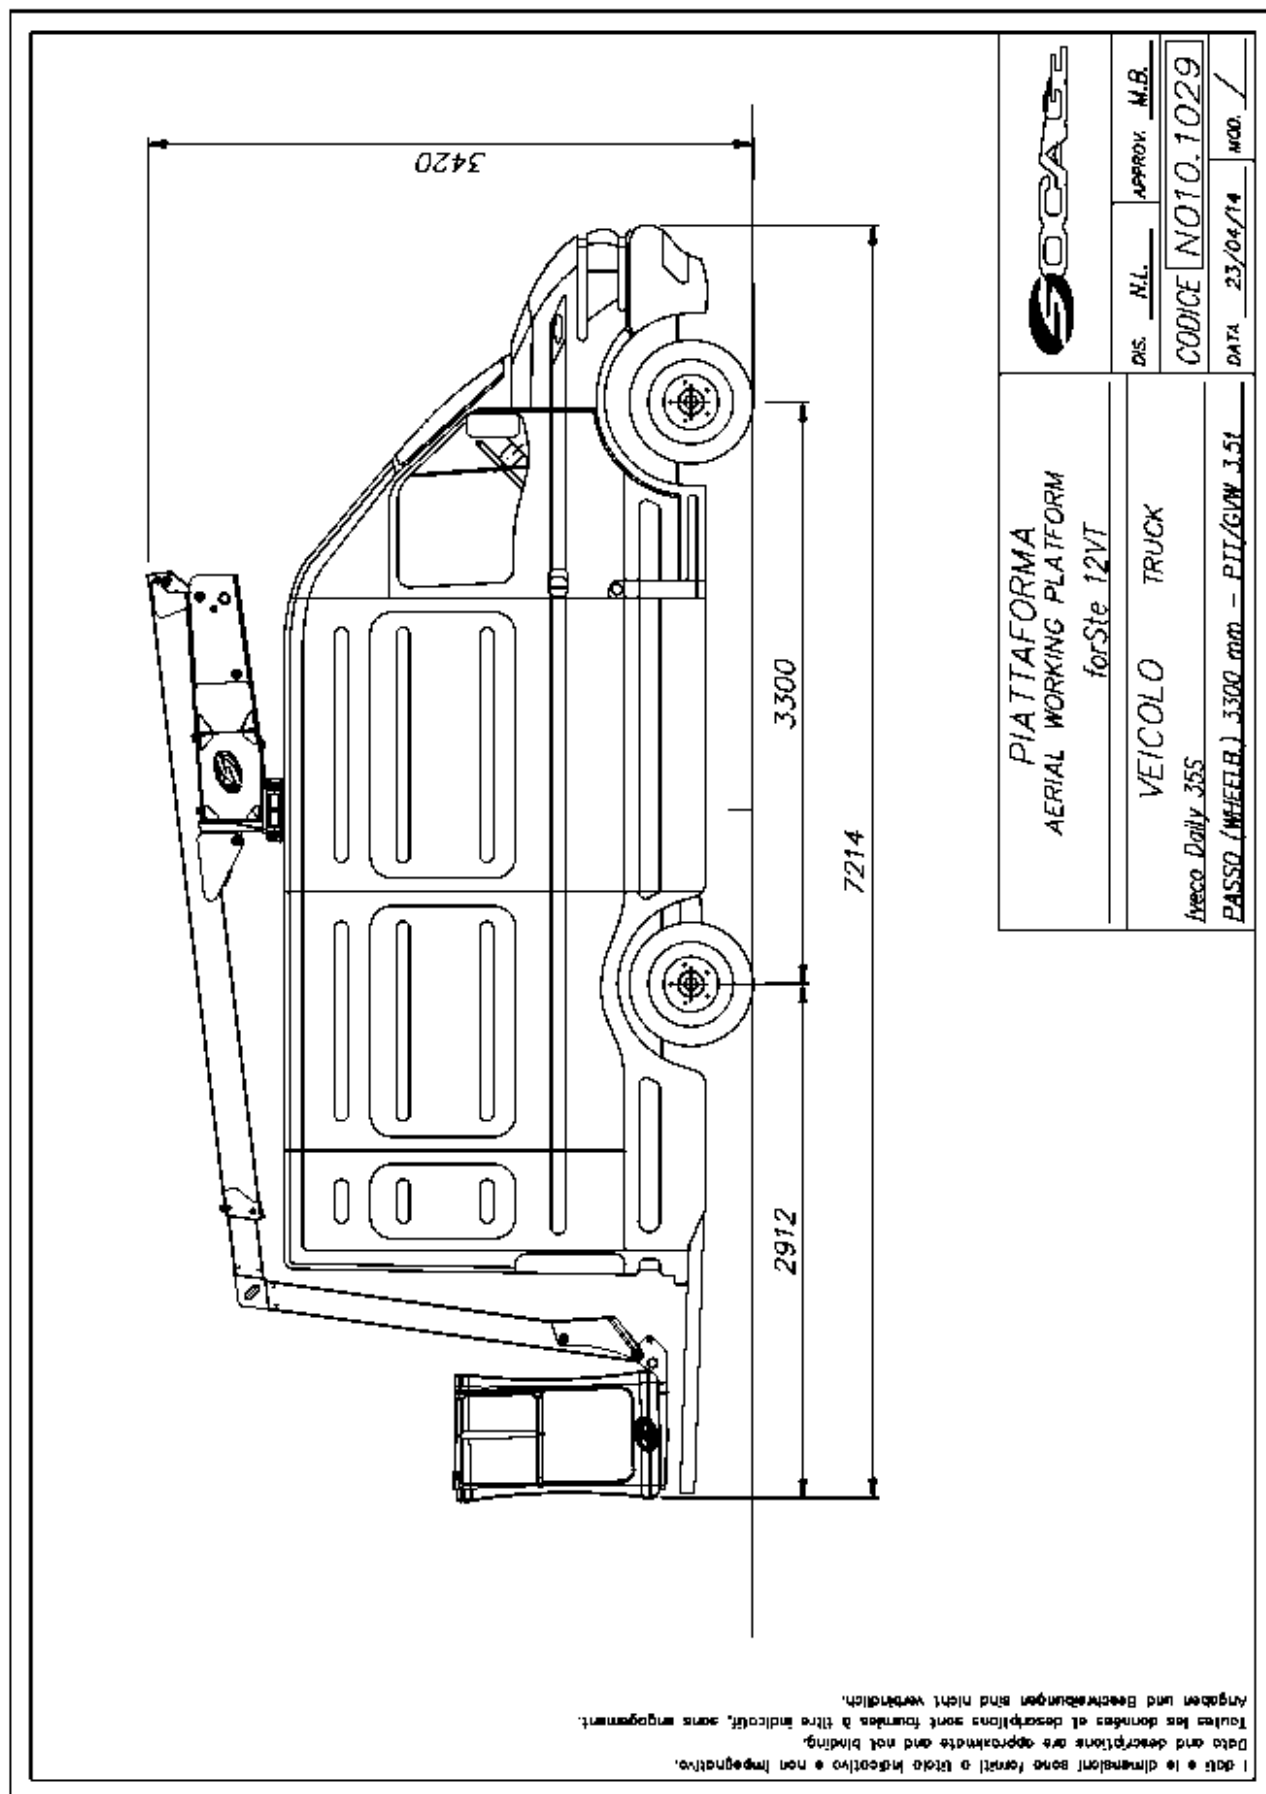


GENERAL LAYOUT

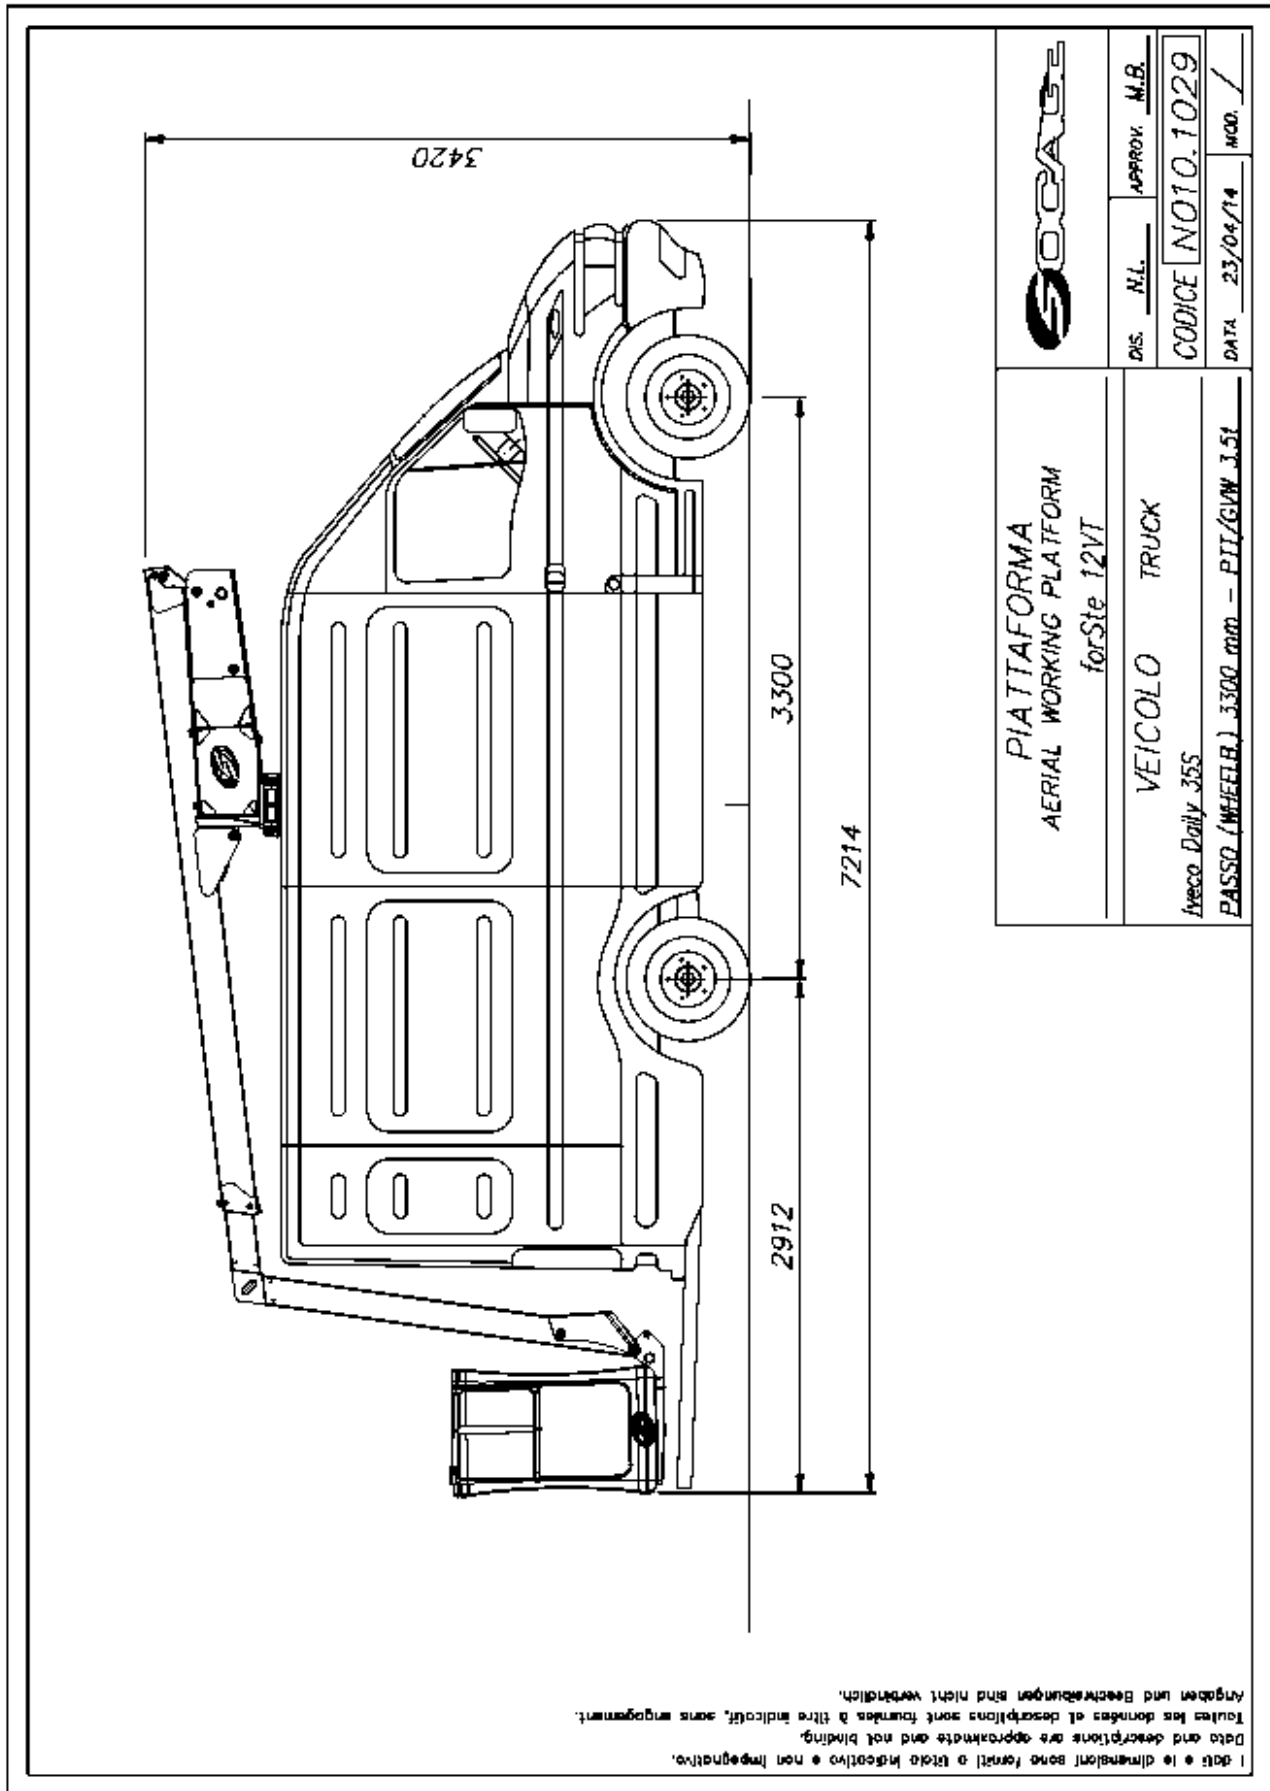

GENERAL LAYOUT

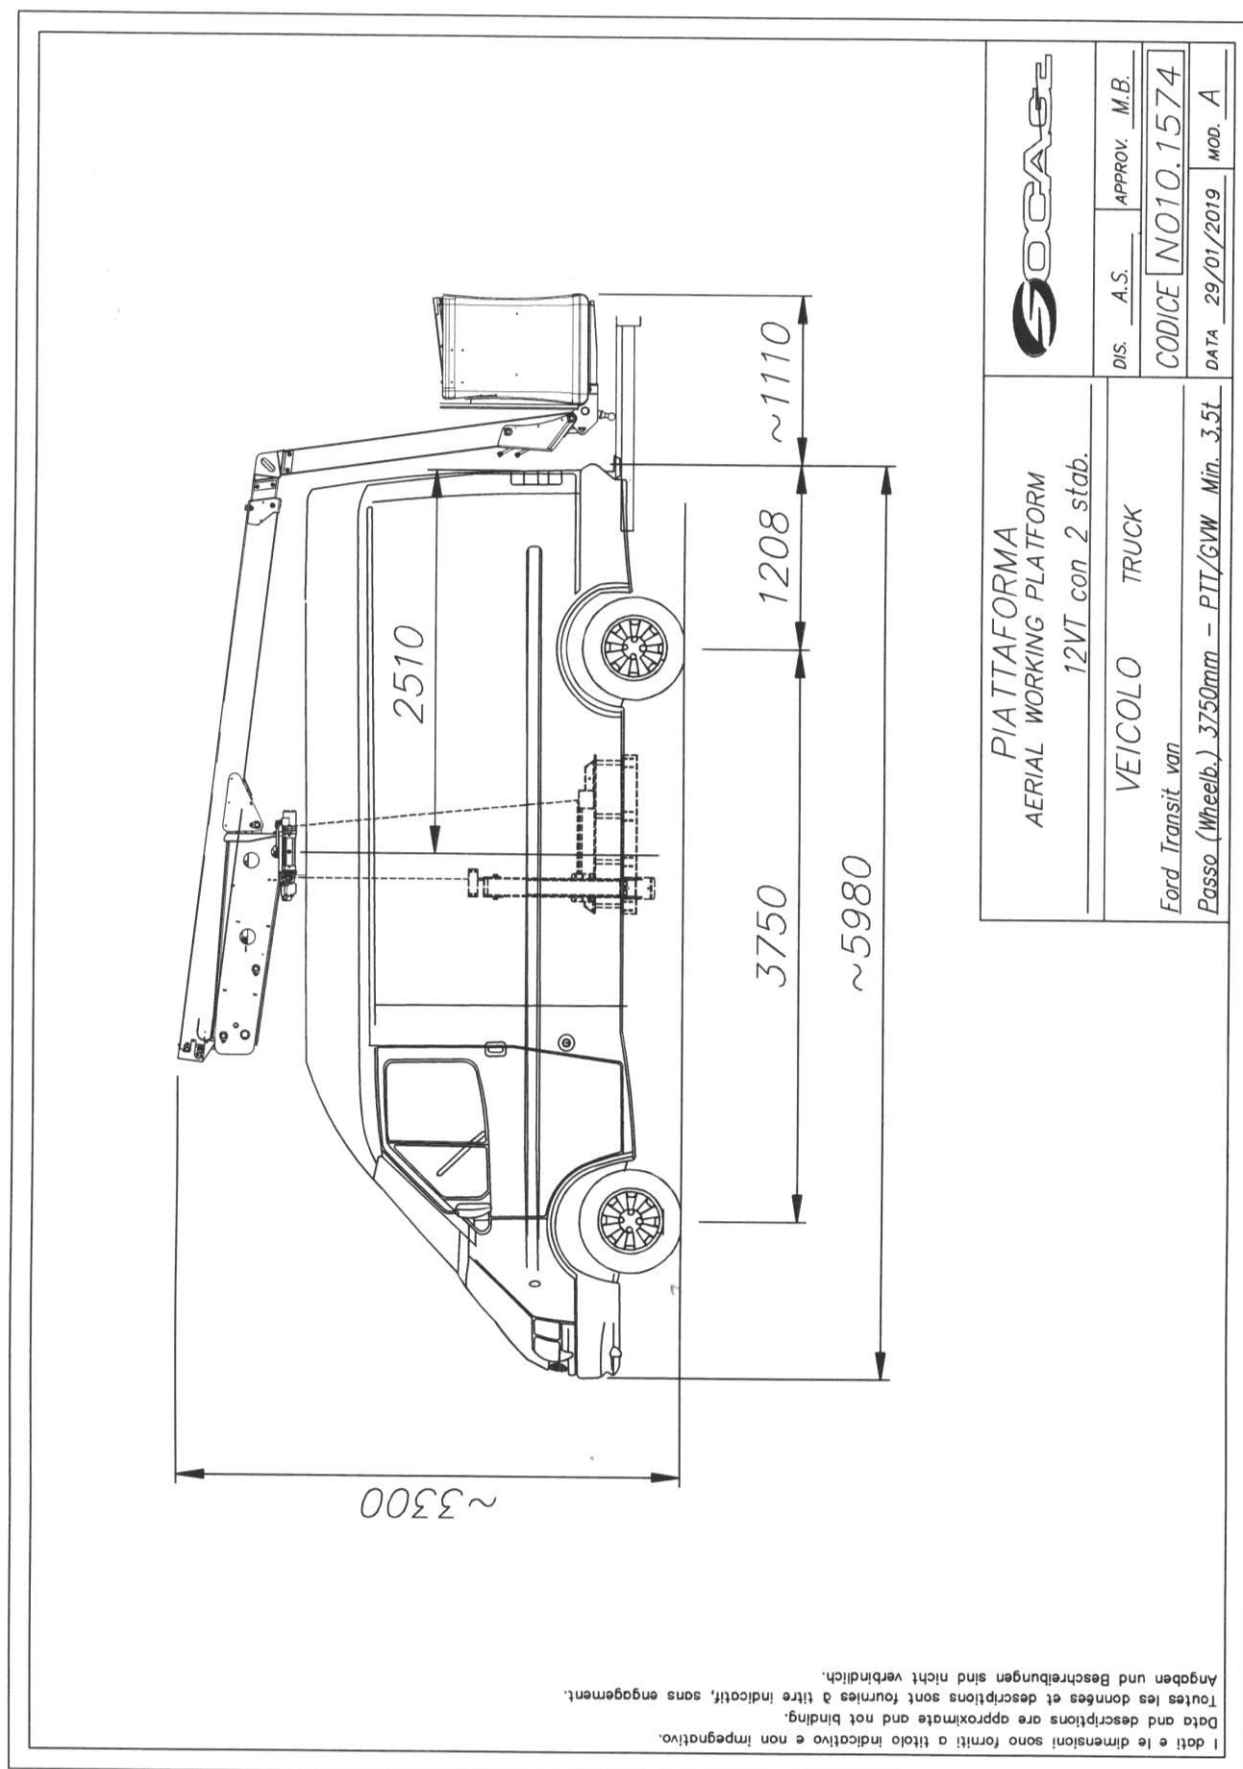

3.4 Safety devices

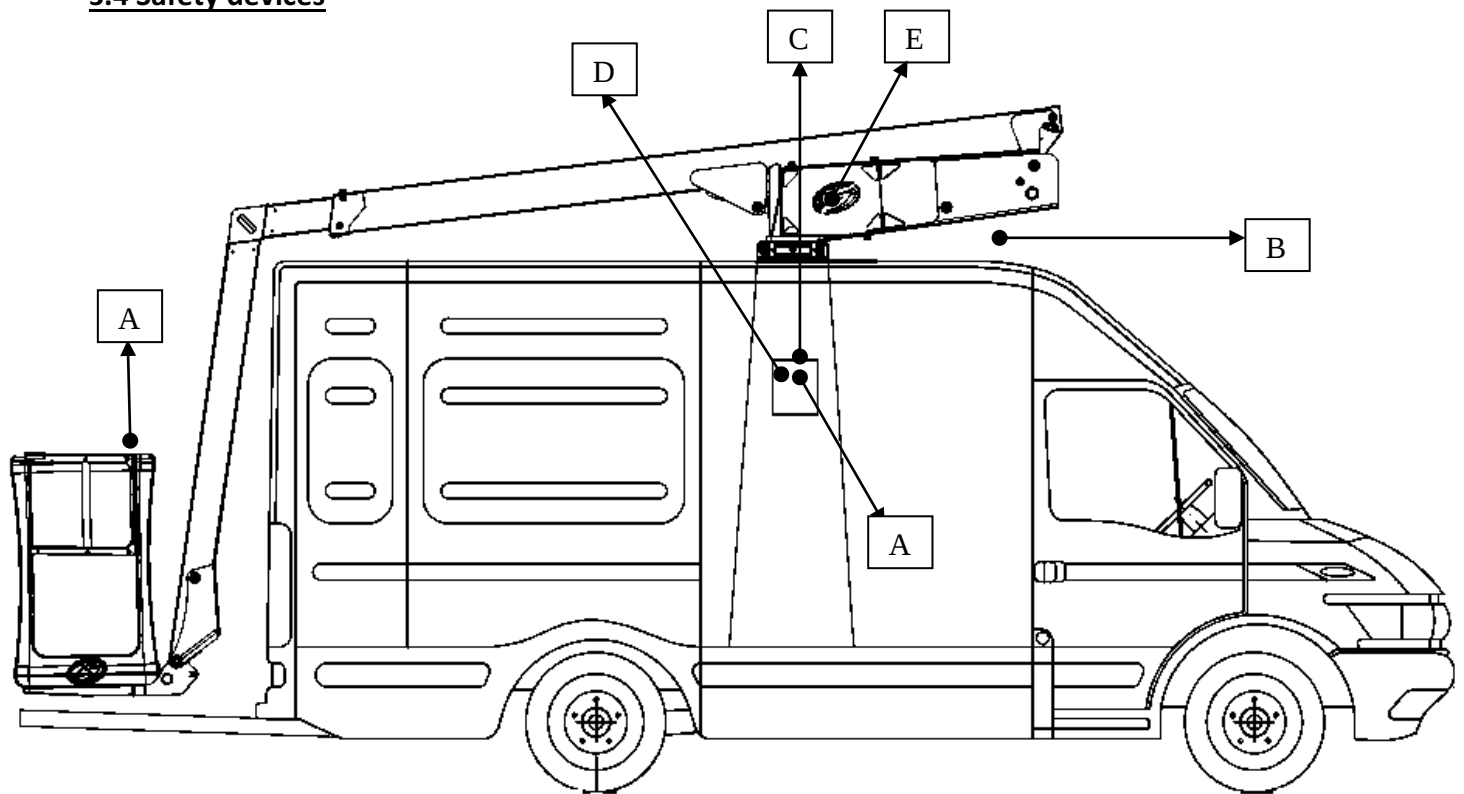

A – Emergency stop buttons

They are present on the turret and on the controls in the car. They stop any platform function in the case of an emergency.

B – Rotating flashing light

It is installed on the cab of the truck to signal when the platform is functioning

C – electro-pump for emergency descent

Allows to move the platform and take it back to travelling in the case of breakdown. Depending on set-up, there may be an emergency electric pump present, available as an optional and powered by the truck battery.

D – Emergency controls

They are present on the rotary turret and are used to move the platform in emergency condition.

E - Inclinometer

This is a device that measures the angle of the base of the frame and when the angle of the machine meets the conditions of beginning regular work.

If the machine doesn't respect the beginning travail regular (within 5° longitudinally / 2° lateral) a light of warning is activated. Before opening the machine it will need therefore to bring the machine to permitted inclination for the job and make to extinguish these warnings. (**Note:** if the optional stabilizers are present, gradually acting on the levers and obtain the correct levelling of the platform, verifying through the lever existing in proximity of the commands.

With the machine in work position (opened), if you exceed the 5°/2° tilt, the intervention of the inclinometer does not block the movements, but activates an acoustic alarm, and the flashing red indicator light on the turret electric panel.

N.B. – CHECK EVERY WEEK, THE EFFICIENCY OF THE DEVICE BY STABILIZING THE BASE WITH INCLINATION ABOVE 3° AND CHECKING THE BUZZER SOUNDS AND THE ILLUMINATION OF THE LIGHT

Protections on electric and hydraulic plant

All flexible hoses and cables are equipped with wear-proof and burst-proof protections.

Rotation brake in work position

Once the rotation movement has been stopped, the turret is immediately blocked to prevent any movement during aerial work.

Maximum pressure valves

They prevent the maximum pressure in the hydraulic plant, at which the platform is calibrated, from being exceeded.

Safety belt attachments

Positioned on the basket, they are used to attach the operator's safety belts during use of the platform.

Outriggers/boom interlock (optional)

The outriggers controls are only activated if the booms are in the rest position and if the appropriate control has been selected in the turret panel. If this is not the case, they cannot be used.

Once the machine is stabilised a green light switches-on on the outriggers selection panel and, by selecting the desired position on the panel in turret (basket or turret), it is possible to lift the telescopic boom and start to work.

With the boom open it is no longer possible to activate the outriggers even by selecting the control in turret.

N.B. – CHECK EVERY WEEK, THE EFFICIENCY OF THE INTERLOCK DEVICE STABILIZERS/ARM, MAKING SURE THAT THE ARM DOES NOT WORK WITH THE STABILIZERS HAVEN'T PRESSED TO THE GROUND AND CONTRARY

START-UP PROCEDURE

a) Stabilising the platform

1. Enter the vehicle cab.
2. Insert the parking brake.
3. Position the gear lever in the neutral position, keeping the truck engine ticking over.



The truck engine rotation MUST NOT exceed 1000 rpm




The maximum inclination accepted for the chassis is 5° longitudinally/2° sideways

At this point, the platform electric plant power supply indicator switches-on on the panel in the cab.

Platform electric plant power supply light on – yellow



4. Press the clutch pedal.
Innesting the PTO with the selector (light on = PTO active) or move the selector 0/1
Release the clutch slowly

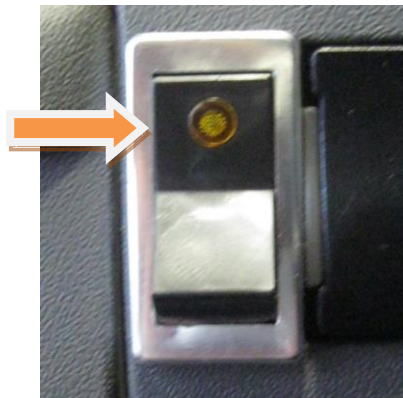

If the power take-off has been inserted correctly, the power take-off red indicator lights up.

Power take-off inserted light on – red



5. To the mass in service the stabilizers (OPTIONAL) you can climb or on the basket (to bring the helmet and fix the safety belts in the suitable fixings) and use the controls , or take the console on the ground and use the controls.

CONTROLS ON THE BASKET



CONTROLS OFF THE GROUND



6. To stabilise, push the levers of the control distributor of the stabilisers downwards until the green stabilising light on the frame switches on (see above fig.).

NB: Use the spirit level to check that the inclination of the machine is within the limits specified for use.



THE FIRST MOVEMENT TO BE PERFORMED IS LIFTING THE BOOM



IF THE OIL TEMPERATURE TENDS TO EXCEED 70° C, A HEAT EXCHANGER MUST BE INSTALLED.

B) Closing the platform

1. Centre the pantograph and close the bars.
2. Descent of the telescopic boom into the rest position.
3. Switch off the motor diesel (STOP button on the joystick):
 - a) Press the button on the clutch.
 - b) Disengage PTO:
by turning the dial in the cabin on the position <<0>> (OFF)
 - c) Gently release the clutch.



ALWAYS CHECK THE PROPER disengaging PTO BEFORE MAKING ANY TRAVEL WITH THE TRUCK TO AVOID ANY HOUSING VEHICLE SPEED!




ALWAYS CHECK THE PROPER disengaging PTO BEFORE MAKING ANY TRAVEL WITH THE TRUCK TO AVOID ANY HOUSING VEHICLE SPEED!



ALWAYS CHECK THE PROPER disengaging PTO BEFORE MAKING ANY TRAVEL WITH THE TRUCK TO AVOID ANY HOUSING VEHICLE SPEED!

3.6 Machine closure in emergency conditions

In the case of fault or interruption of the hydraulic or electric power supply during use, the operator on the round can carry out closure by performing the emergency movement from the ground.

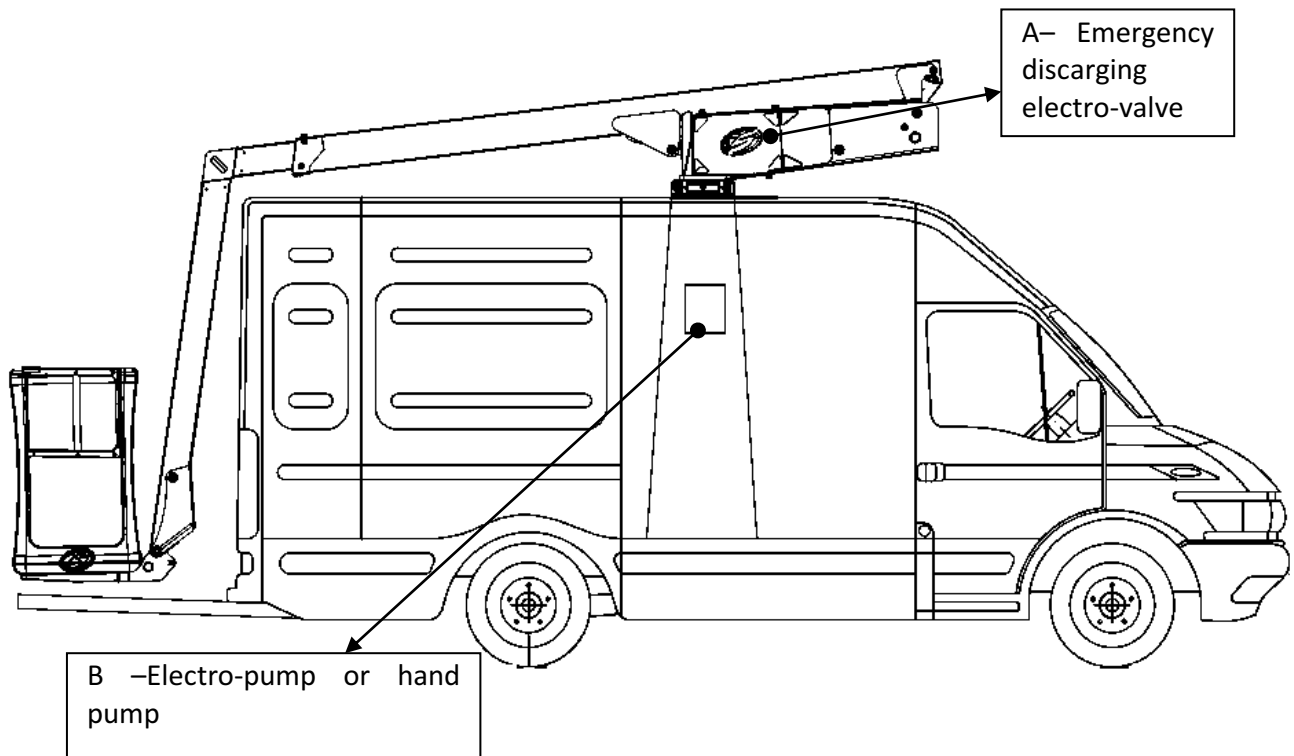

A – Emergency discharging electro-valve

B – Electrovalve or hand pump

Hydraulic or electric power supply failure


In the case hydraulic and electric power supply failure, the machine can be moved in emergency with three different systems:

- a – primary system with with emergency electric pump
- b – secondary system with discharging of the locking valve of the platform movement

a) With emergency electro pump system

In case of machine failure, it will be possible to switch on the electric pump, with the truck battery, and activate the standard control in order to put the machine in rest position.

1. activate the electric pump keeping the selector indicated in start position.

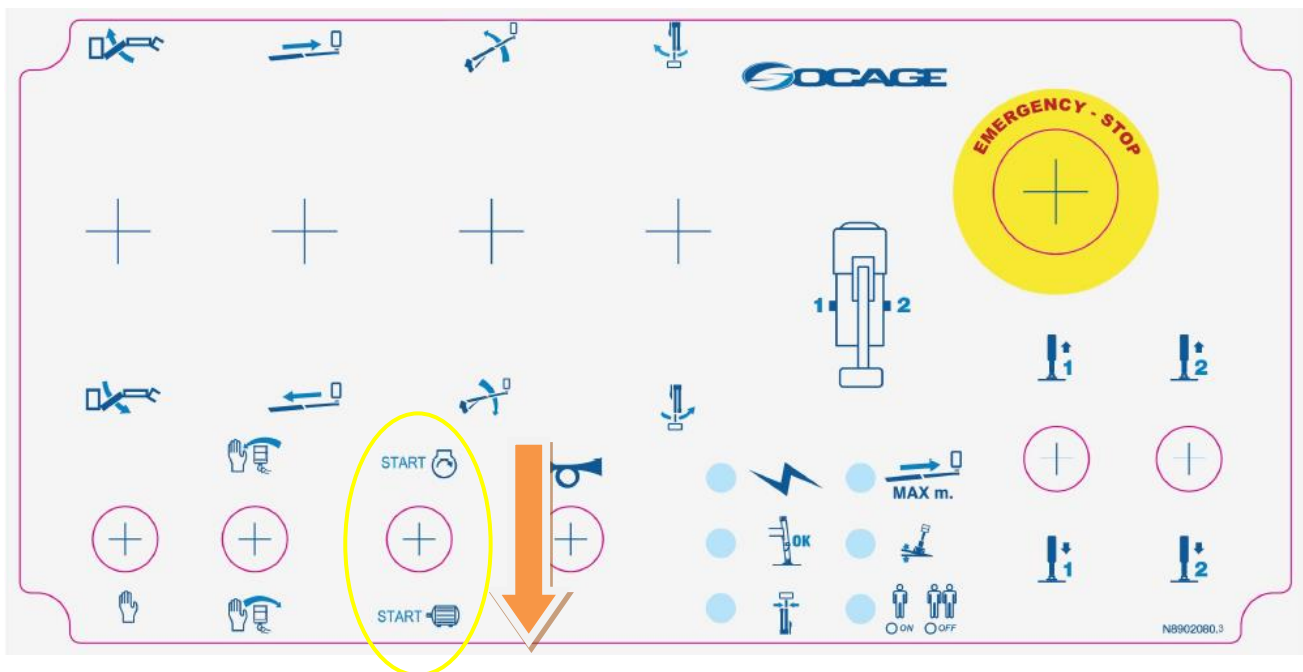


2. Keeping the selector ON and activate the perform the maneuvers in order to bring the machine in rest position.
IF THE STABILIZERS ARE PRESENT, after that, in order to close the stabilizers, in the same way, keeping the selector ON and activate the lever of the distributor .

b) With with discharging of the locking valve

in case of failure of the electric pump it will be also possible to close the machine excluding the solenoid valve of the arm (as shown in the picture)

1. On the joystick in turret, turn the control selector key "1" in position "TORRE".

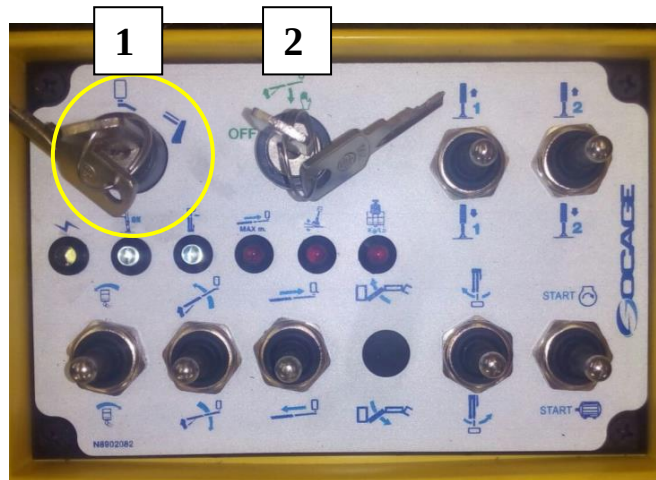

2. Then turn the key "2" of the emergency controls in such a way that it passes from the position "off" to active "arm", and manually maintain this position throughout the emergency maneuver.




3. At this point to close the aerial part, perform the arm lowering maneuver directly on the joystick (keeping the key "2" turned)




c) **With the hand pump**

in case of electric failure it will be also possible to close the machine with the hand pump

1 Bypass of the proportional valve of the distributor, by screwing the red knob to the end and then bypass the emergency electro-valve (YVEM) by pushing and screwing the pin to the end of the stroke.

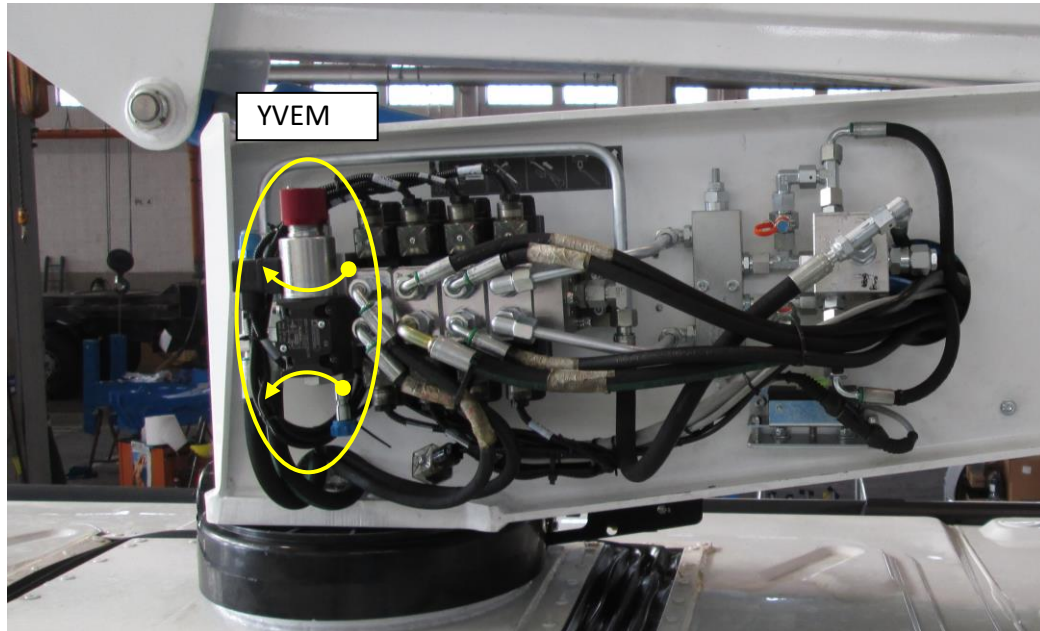


2 – In order to put the machine in rest position, by using an awl or a screw-driver, push on the electro-valve of the correspondent movement you want to perform (see label for movements) and at the same time, with the help of another operator, use the hand-pump inside the van besides the turret.

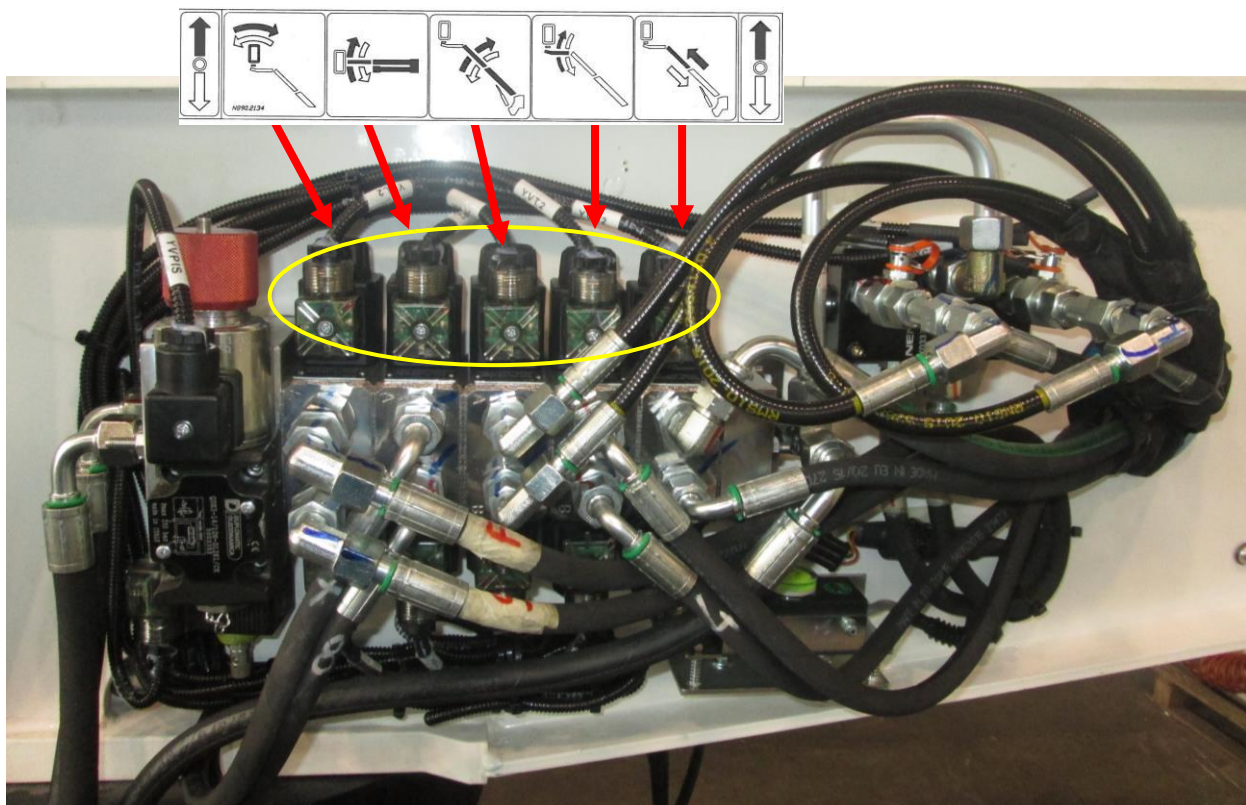

If the stabilization is present:(optional):

1. In case the machine was equipped with outriggers connected to the exchange-valve , in order to close them ,
2. remove the lead coating of the outrigger electro-valve YV1 , and exclude it by by loosening up to the end run

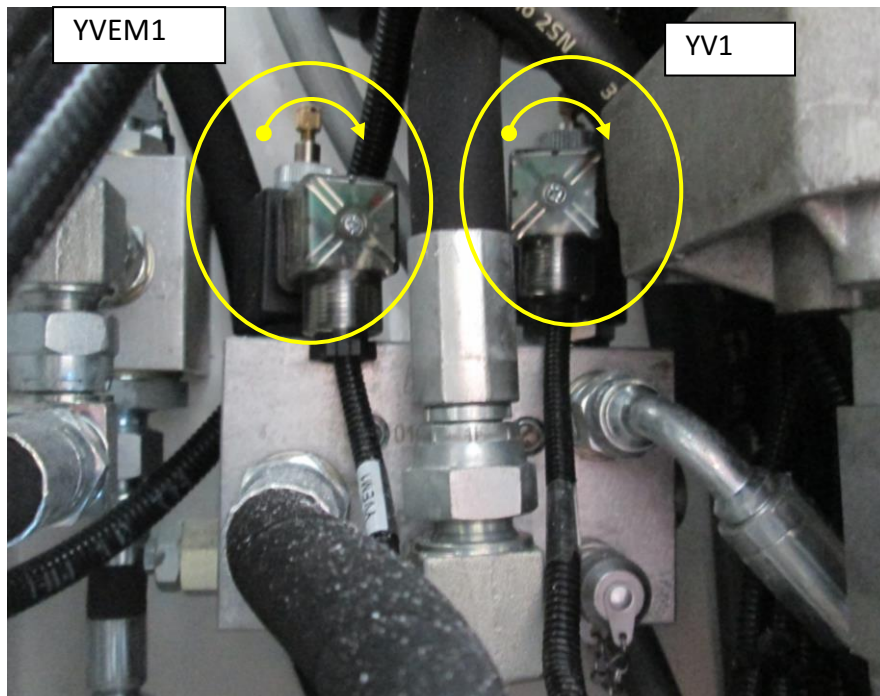

3. At this point activate the levers of the stabilisers distributor and simultaneously activate the manual pump to bring the machine in running conditions again



**At the end of the operations of recovery to restore to act as follows:
Remettez le bouton des électrovannes dans la condition de travail d'origine.**

ACCESS TO THE TRUCK BED AND THE BASKET


The ascent and descent from the basket and allowed only in the rear of the vehicle using floor as rail. Raise the block of bar on basket for easy access (see photo).



PANEL IN TRUCK CAB



The following are present on the panel inside the truck cab:

- 1- PLE power supply line white indicator light.
- 2- Power take-off inserted orange signal light.
- 3- Red indicator light signalling incorrect closure of the outriggers when moving
- 4- Green light indicating correct closing position of the platform – march position
- 5- Timer with simultaneous switch-on at the PLE electric control boards

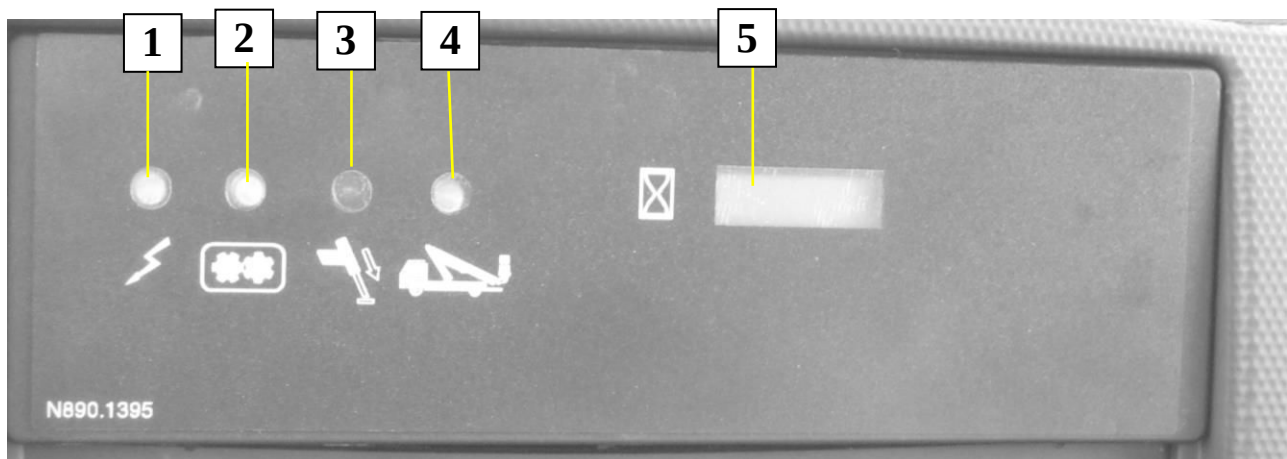



CONTROLS ON THE TURRET

1.	<u>Self-retaining emergency button.</u> If pressed, it causes all movements to stop, the thermal motor of the carriage to switch-off and triggers the acoustic signal. To restore functioning, release the button by turning the upper part.
2.	<u>Selector two positions for selection commands BASKET-TURRET</u>
3.	<u>Selector switch on electric pump or pump of the truck</u>
4.	<u>Lever selector switch for turret rotation control.</u>
5.	<u>Lever selector switch for boom extension and return movement.</u>
6.	<u>Lever selector switch to control boom lift and lower movement</u>
7.	<u>Lever selector for basket levelling control</u> N.B.: it is recommended to use this control with the platform at rest and to always activate it very slowly in a way to prevent dangerous slipping/inclinations of the basket
8.	<u>Person present</u> (consent to the maneuvers)
9.	<u>Plant electric power supply signal light.</u>
10.	<u>Inclinometer.</u>
11.	<u>Green indicator light for basket centring.</u>
12.	<u>Lever selector switch to control the stabilizer (optional)</u>
13.	<u>Lever selector switch to control the stabilizer (optional)</u>
14.	<u>Stabilisation signal lamp</u>
15.	Maximum outreach alarm signal lamp (not present)
16.	<u>Green indicator light for basket centring (optional)</u>
17.	<u>Lever selector switch to control jib lift and lower movement (not present)</u>
18.	<u>Selector key for the arm lowering in emergency</u>

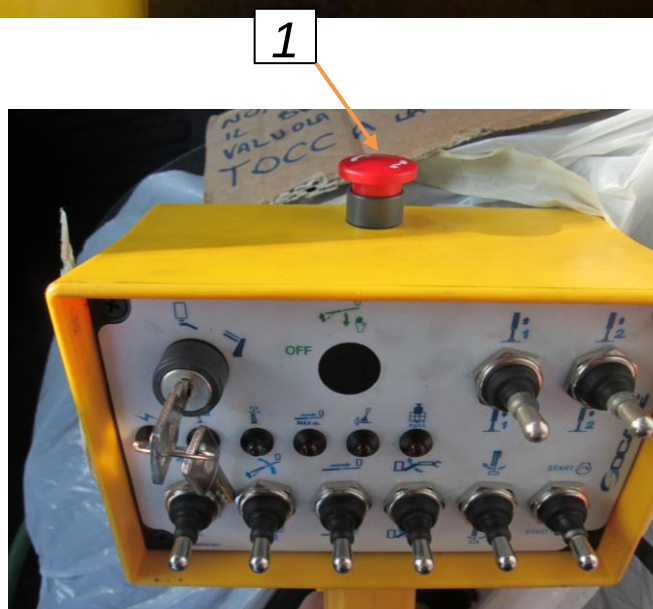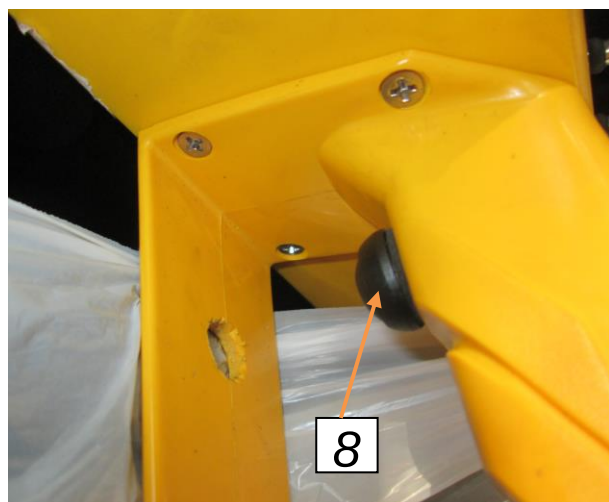

CONTROLS ON THE BASKET)

1	Selector switch on electric pump or pump of the truck
2	<u>Self-retaining emergency button</u> . Pressing this button causes the cut-off of the electric power supply to all components with the consequent shutdown of all manoeuvres. N.B. If there is a power cut to the plant, check the position of this button
3	Lever selector switch for boom extension and return movement.
4	Lever selector switch for turret rotation control.
5	Lever selector switch to control boom lift and lower movement.
6	Button that allows the maneuver of the basket levelling
7	<u>Lever selector for basket levelling control</u> N.B.: it is recommended to use this control with the platform at rest and to always activate it very slowly in a way to prevent dangerous slipping/inclinations of the basket
8	Button for horn switch-on
9	Plant electric power supply signal light.
10	Inclinometer
11	Green indicator light for turret centring position (optional).
12	<u>Stabilisation signal lamp</u>
13	<u>Signal lamp active = 1 person present on basket</u> <u>Signal lamp not active = 2 person present on basket (optional)</u>
14	Maximum outreach alarm signal lamp (not present)
15	<u>Lever selector switch to control the stabilizer (optional)</u>
16	<u>Lever selector switch to control the stabilizer (optional)</u>
17	<u>Selector two positions for selection basket capacity 120Kg or 200Kg (optional)</u>

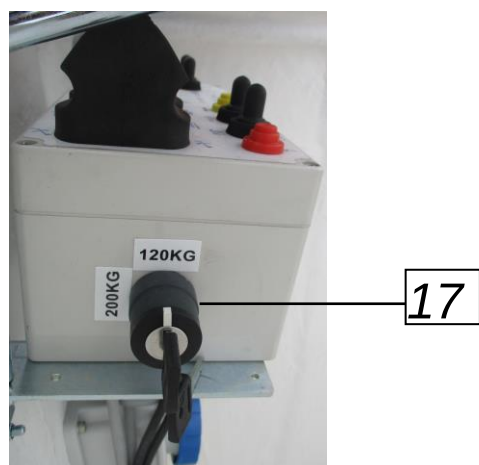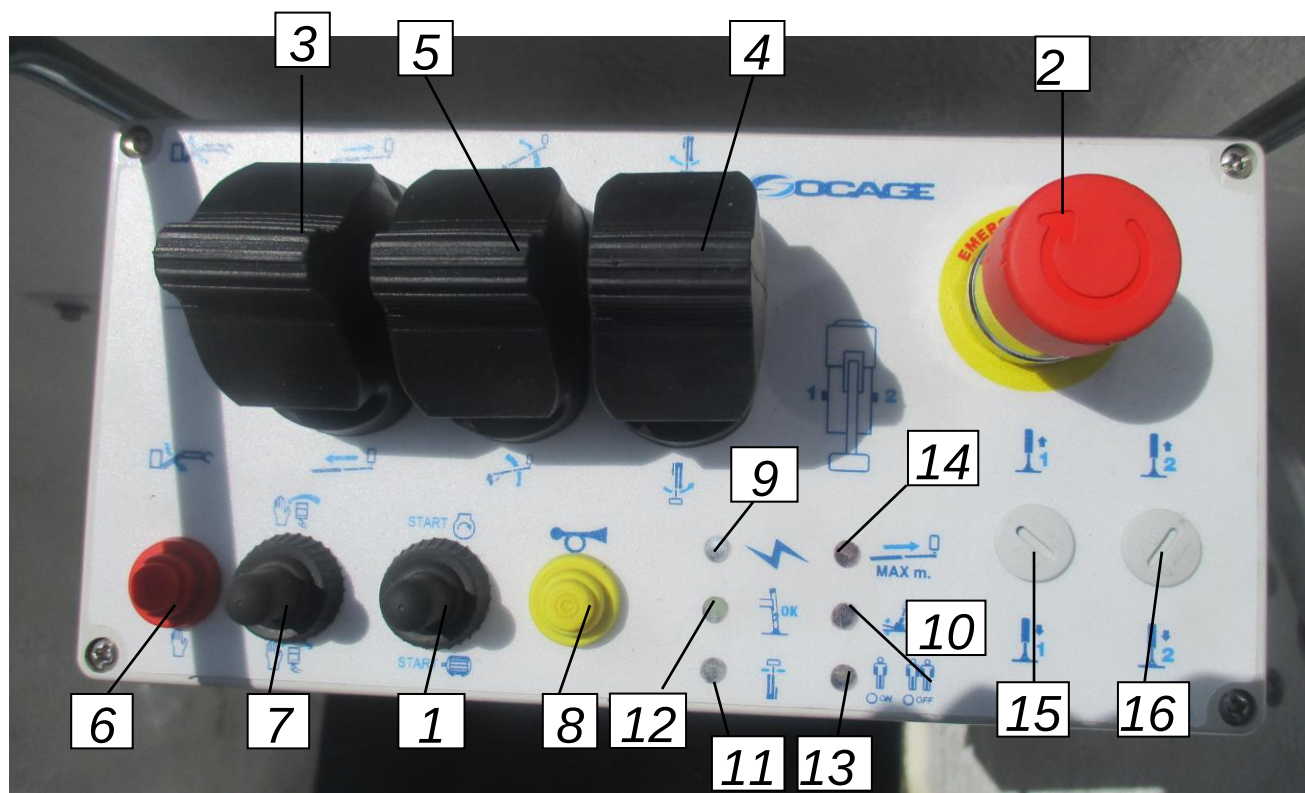

***** CHAPTER 4 *****

MAINTENANCE

The documentation contained in this chapter is composed of
n° 20 pages, this included..

ATTENTION!!! WELDING/RESTORATION

Different parts of the machine are made with steel of high elastic limit; do not never make weldings or restorations without the authorization and the preventive instructions of the constructor.


CUSTOMER SERVICE



Service and Spare Parts

+39 059 8348000

www.socage.it




Socage Customer Service S.r.l.
Via O. Respighi n° 113/115 - 41022 Modena (MO) - Italy
Tel. +39 059 8348000 - Fax +39 059 8348001
vendite@cs.socage.it - tecnico@cs.socage.it

INDEX

1. Assumption
2. Products to use
3. Maintenance program
4. Rotation group greasing
5. Hydraulic oil level verification
6. Delivery filter cartridge replacement
7. Return filter cartridge replacement/cleaning
8. Control seal valves of cylinders block
9. Control pipefitting and pipes
10. Systems/electric components
11. Structure inspection
12. Control clamping bolts and nuts
13. System emptying and tank filling
14. Hinged pivots greasing
15. Sliding blocks greasing
16. Control/sliding blocks adjustment
17. Controls
18. Troubles-causes-cures
19. Irregularities of working

INTRODUCTION

It is of the utmost importance that this equipment is washed with water cleaning machine as to remove all polluting elements which can damage materials and impair good functioning.

After washing, lubricate all components as to properly restore sliding conditions and check if there are elements out of shape or which show wear. If so, it is compulsory to apply to an authorised service shop to replace these elements.

For lubricating material refer to what indicated in this manual.

It is essential to take into account that even safety devices can wear and that one has to always check if they are clean, lubricated and unimpaired. Under normal working conditions cleaning and lubricating operations as described above can be carried out once a month. This interval has to be reduced if there is a situation of use or an environment harder than normal.

It is impossible to describe all these situations, what follows is therefore a list of some examples:

- Machine setting into operation again after a long period of stoppage.
- Extremely high or extremely low environmental temperatures with subsequent fast lubricant deterioration or extreme hardening.
- Painting and sand blasting works during which the material tends to enter into the friction sliding guides and to combine with grease thus creating a mixture which is no more a lubricant but becomes an abrasive substance wearing out the components of the machine and locking the sliding guides.

We rely on your conscientiousness in tracing down, in relation to the ways in which the machine is used, when and how to perform control and maintenance absolutely necessary to the perfect functioning and good state of preservation of safety devices and of the machine in general.

WARNING

FOR THE SAFEGUARD OF THE MACHINE AND OF OPERATORS IT IS COMPULSORY TO USE ORIGINAL SPARE PARTS. TO KNOW THE AUTHORIZED SERVICE SHOP FOR YOUR AREA CALL SOCAGE TECHNICAL SERVICE

DURING WASHING WITH HIGH-PRESSURE JET DO NOT AIM AT BOXES, CABINETS AND ELECTRIC COMPONENTS. DO NOT WASH WITH DETERGENTS, CHEMICALS, PETROL OR SIMILAR SUBSTANCES, WHICH CAN DAMAGE RUBBER PARTS, PLASTIC COMPONENTS AND FILMS.

DO NOT PERFORM ANY MAINTENANCE OPERATION IF THE MACHINE IS MOVING. TURNS ALL MOTORS OFF AND REMOVE KEYS FROM THE CONTROL PANEL AND FROM THE DASHBOARD OF THE TRUCK. FOR BALL JOINTS WE SUGGEST TO REPEAT GREASING WITH THE MACHINE IN DIFFERENT POSITIONS. HOWEVER, MAINTENANCE HAS TO BE CARRIED OUT WHEN THE MACHINE IS TURNED OUT AND AFTER THE KEYS HAVE BEEN REMOVED FROM CONTROL PANELS.

Inspection, maintenance and other intervention on the machine are to be carried out according to specific skills. As far as maintenance programme is concerned, what follows is a list of workers in charge for each operation:

- A) The driver of the platform and the service shop of the company which owns the machine.
- B) SOCAGE authorised service shop.
- C) SOCAGE service shop.
- D) Complete inspection or OVERHAUL can also be performed by ENTITIES PUBLIC/PRIVATE enabled for it, according to current regulations

Before carrying out any modifications you must to be authorized by the manufacturer.

NOTE: AFTER HAVING MADE THE DIFFERENT CONTROLS/MAINTENANCE PROVIDE TO GIVE THE RESULTS AND THE OPERATIONS MADE ON THE APPROPRIATE CONTROL BOOK-SEE CHAP.10

IF THE MACHINE IS TO BE STORED FOR A LONG TIME:

- Store it in a dry and well-aired place.
- Remove starting keys from the machine.
- Clean filter and electric system.
- Protect contacts and remote control switches with special antioxidising products.
- Grease sliding guides, chains and surfaces which are not protected by painting.
- Do not cover the machine with a plastic material since it would create damaging condensation.
- As far as the wagon is concerned, follow indications suggested by its manufacturer.

Before putting the machine into operation again, carry out inspection and maintenance procedures at intervals requested every day....., every 50 hours....., once a month.

DISMANTLING AND SCRAPPING

In case of scrapping, it is necessary to dismantle the machine and broke it down into uniform parts which should be sent to the relevant storage centres.

These types of materials are present on the machine:

- Iron materials: metal structural works and mechanical components.
- Plastic materials: gaskets, belts, protections.
- Electric materials: windings, controls, electric valves and similar components.
- Oils and lubricants: hydraulic oil, gearbox lubricants, greases.
- As far as wagon is concerned, follow what indicated by its manufacturer.
- Other materials: QUICKSILVER (basket balancing sensor)

EQUIPMET LIFTING

To lift the complete equipment (truck + platform), follow the truck usage indications. Do not hook to any platform parts during the lifting.

The platform parts (if it is not indicated inside this manual) can be dismounted only by some authorising workshops, and move by means and in accordance of the rules in force.

2. MATERIAL TO USE

- NILS NILEX EP1 grease or equivalent for axes and lubricator
- NILS NILEX EP1 graphitised grease for the booms extensions and the outriggers' supporting

	DROP POINT C°	DENSITY TO 15°C (g/cm ³)	WORKING TEMPERAT URE (°C)	Viscosity to 40°C (mm /s ²)	Flash Point (°C)	Autoignition Point (°C)
NILS NILEX EP1	ca.250	0,91÷0,95	-15/+100	ca.84.	≥ 250°	Not autoignition

Oil AGIP ARNICA 46 for hydraulic system - Hydraulic System Capacity 50 l

	Density to 15°C(Kg/l) ASTM D 1298	Viscosity to 40°C(mm /s) ASTM D 445	Flash V.A. °C ASTM D 92	Sliding °C ASTM D 97
AGIP ARNICA 32-46	0,865-0,870	32-45	202-215	-36

Equivalent: ROL LI 46 HIV
TOTAL EQUIVIS ZS 46
ESSO INVALOR EP 46
SCHELL TELLUS SX 46
MOBIL DTE 15

- v Oils for centre bearing rotation unit with endless-screws/flanged bearing:
- NILS NILEX EP1: for endless-screw/bearings/balls and for cogging

	DROP POINT C°	DENSITY TO 15°C (g/cm ³)	WORKING TEMPERAT URE (°C)	Viscosity to 40°C (mm /s ²)	Flash Point (°C)	Autoignition Point (°C)
NILS NILEX EP1	ca.250	0,91÷0,95	-15/+100	ca.84.	≥ 250°	Not autoignition

IT IS ABSOLUTELY FORBIDDEN TO INTRODUCE TOOLS, HANDS, FINGERS, ETC., IN THE HOLES OF THE TELESCOPIC BOOM.

ALL THE MAINTENANCE OPERATIONS HAVE TO BE MADE WITH ORDINARY TOOLS ACCORDING TO THE SAFETY RULES

IMPORTANT

CHECK CAREFULLY THE CONDITIONS OF THE ELECTRIC CONDUCTORS OF THE BASKET CONNECTION WITH THE TURNTABLE. FOR THE IMPORTANCE OF THE SAFETY IN THE OPERATION, WE SUGGEST TO REPLACE THESE CONDUCTORS EVERY 2000 WORKING – HOURS.


MAINTENANCE PROGRAMME

Important: After having carried out any kind of control/maintenance, and before putting the machine back into service, please carry out the control and maintenance operations foreseen “every day”.

INTERVALS	OPERATIONS	NOTES	BY
Every day before putting into operation	Check through repeated tests, without any person in the basket, the good functioning of all safety and emergency devices; in particular, be extremely mindful to · emergency stopping pushbuttons · locking systems for arm/stabilisers/inclinometer · controls and warning lights · if battery are charged · hydraulic oil and fuel tank levels MOREOVER, MAKE SURE THAT: · pin locking systems (plugs, collects, etc.) are in perfect efficiency and in good condition • instruction and safety plates can be perfectly read · there are no hydraulic leaks, loosen electric connections, collision signs, friction, etc.		A platform driver
Every 50 hours of work	Check oil level in the motors. Make sure that the following components are sufficiently clean: · first filter of diesel oil · motor air filter · machine (in particular, inspect tightness of connections and hoses); take the advantage of inspecting the condition of tyres, cables, all accessories and tools. Check hydraulic oil filter saturation.		A platform driver
Every month (~ 120 hours)	Perform a complete cycle of cleaning and greasing as indicated in the INTRODUCTION to this paragraph MAINTENANCE. Perform inspection and lubrication as indicated by the attached picture 050.	After the first 150 hours, replace hydraulic system oil filter cartridges	A platform driver

PICTURE 050

CHECK THE POSSIBLE PRESENCE
OF RUST POINTS WHICH CAN
REVEAL CRASHES CRACKES OR OTHER EVENTS
ON WHICH IT IS NECESSARY TO INTERVENE

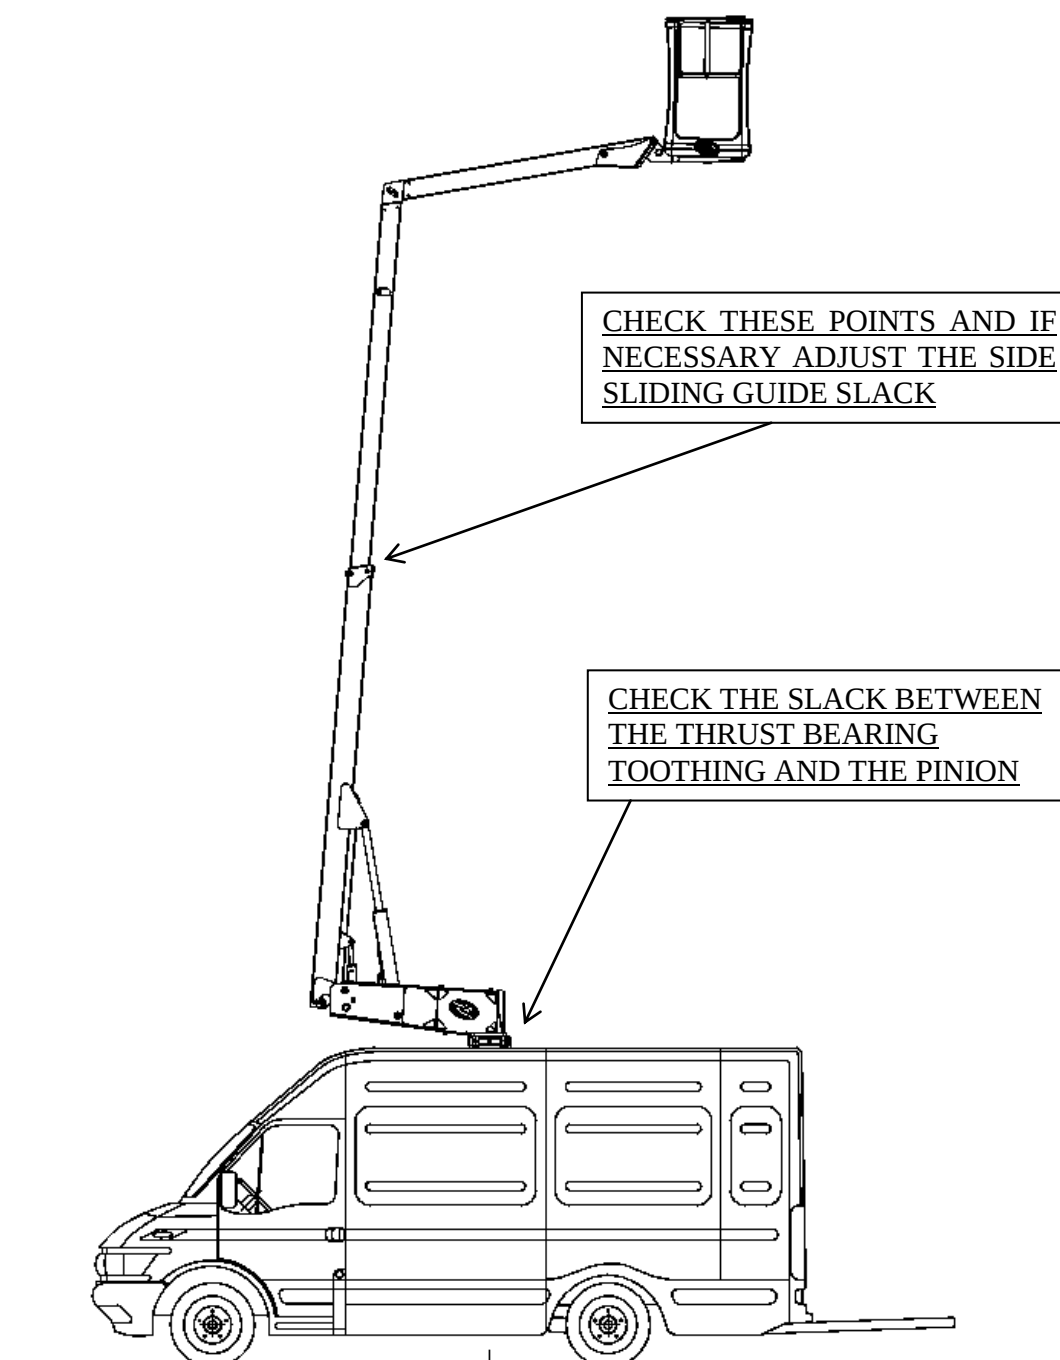

MAINTENANCE PROGRAMME


Important: After having carried out any kind of control/maintenance, and before putting the machine back into service, please carry out the control and maintenance operations foreseen “every day”.

INTERVALS	OPERATIONS	NOTES	BY
Every 3 months (~ 360 hours)	Inspect main fixing tightening parts · thrust bearing nuts and bolts · gearbox nuts and bolts · frame-truck nuts and bolts · pin collects. Perform inspection and lubrication as indicated by the attached picture 051. Replace hydraulic system oil filter cartridges and inspect locking valves. N.B. If tightening of thrust bearing screws is not correct, it is necessary to replace the screws at our authorised service shops.	With this regard, see tightening couples at chapter 3 With this regard, see “INSTRUCTIONS FOR HYDRAULIC SYSTEM MAINTENANCE”	A platform driver and/or person in charge of safety at the company which owns the machine + B authorised service shops or SOCAGE company
Every 6 months (~ 750 hours)	Perform a complete inspection of the machine and write down your findings onto the special sheets herewith attached in the “INSPECTION REGISTER”		A platform driver + person in charge of safety at the company which owns the machine
Every year (~ 1500 hours)	Replace all the oil in the hydraulic system .	With this regard, see “INSTRUCTIONS HYDRAULIC SYSTEM MAINTENANCE”	A platform driver + person in charge of safety at the company which owns the machine + B authorised service shops or SOCAGE company
Every 1-3 years (1500-4500 hours)	COMPLETE INSPECTION	N.B. For authorized platforms at increased load capacity the period is reduce every 1-2 years (1000-3000 h) and the complete overhaul every 6-7 years (9000-10000 h)	B authorised service shops or SOCAGE company + D (*) entities public/private, enabled for it
Every 15000 hours or 10 years	COMPLETE OVERHAUL		


(*) The controls or the complete audits can be carried out also by public/private, specially enabled, according to the regulations in force.

PICTURE O51

**LUBRIFICATE THE PIVOT
OF ALL JOINTS**

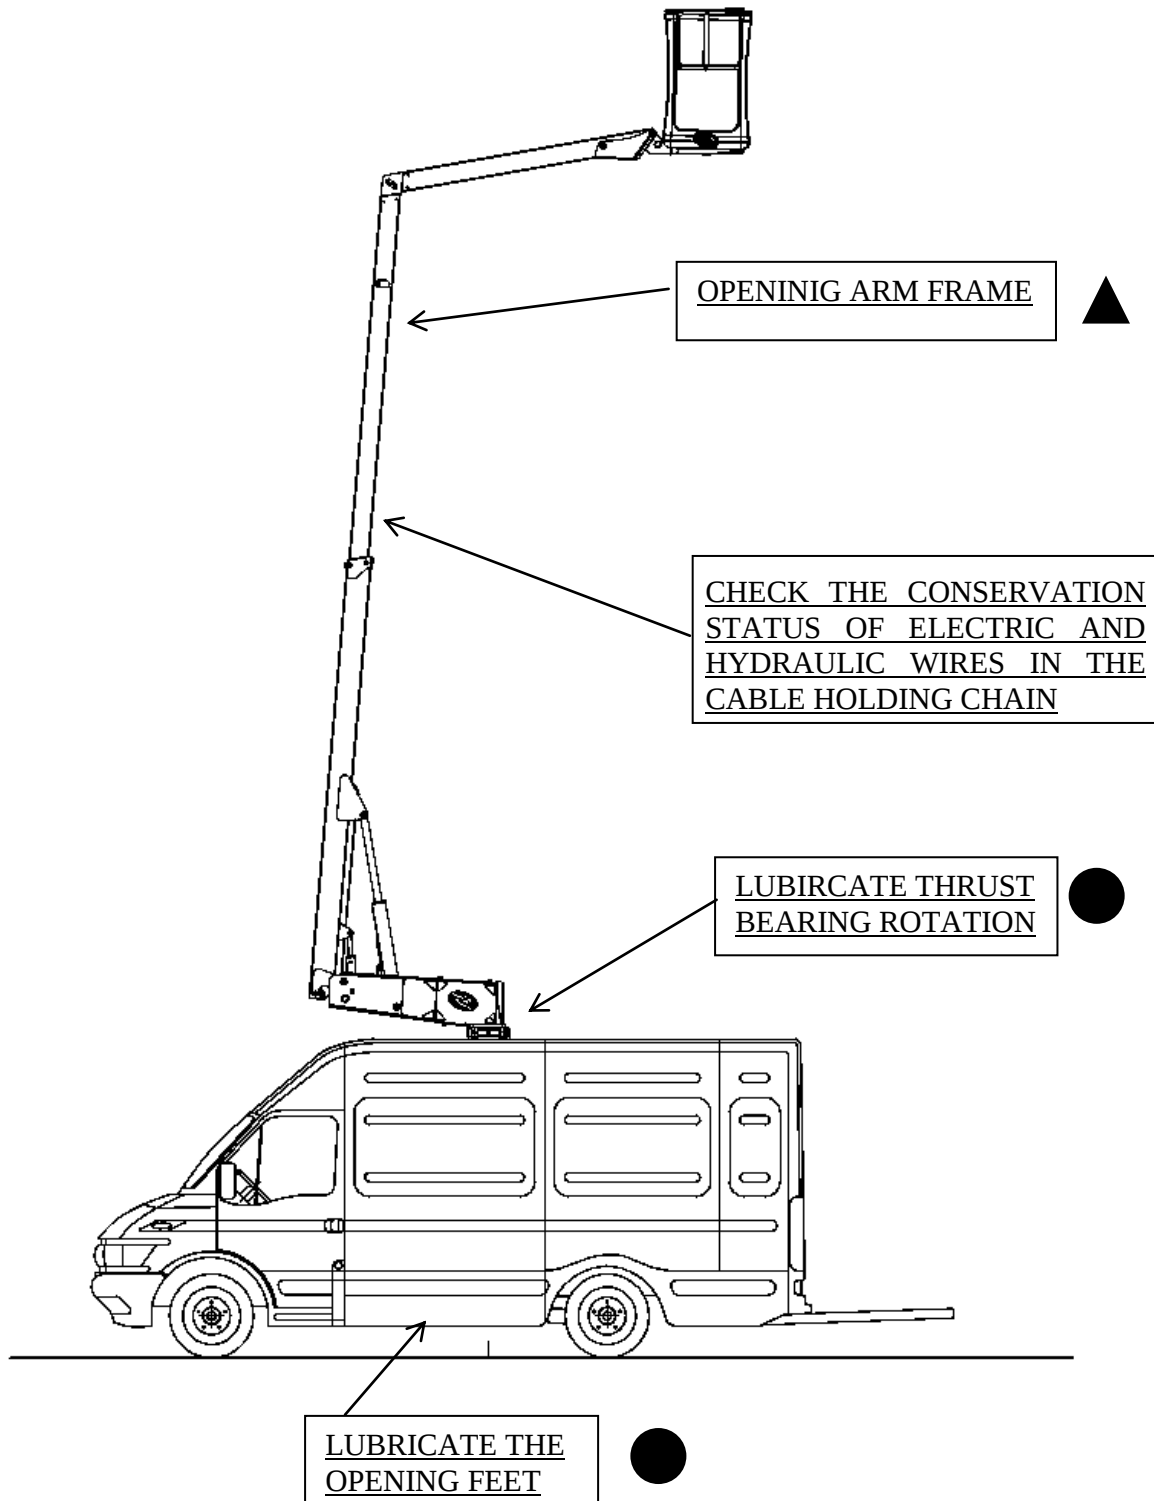

4. GREASING/LUBRIFICATION OF THE CENTRE BEARING ROTATION UNIT WITH ENDLESS SCREWS

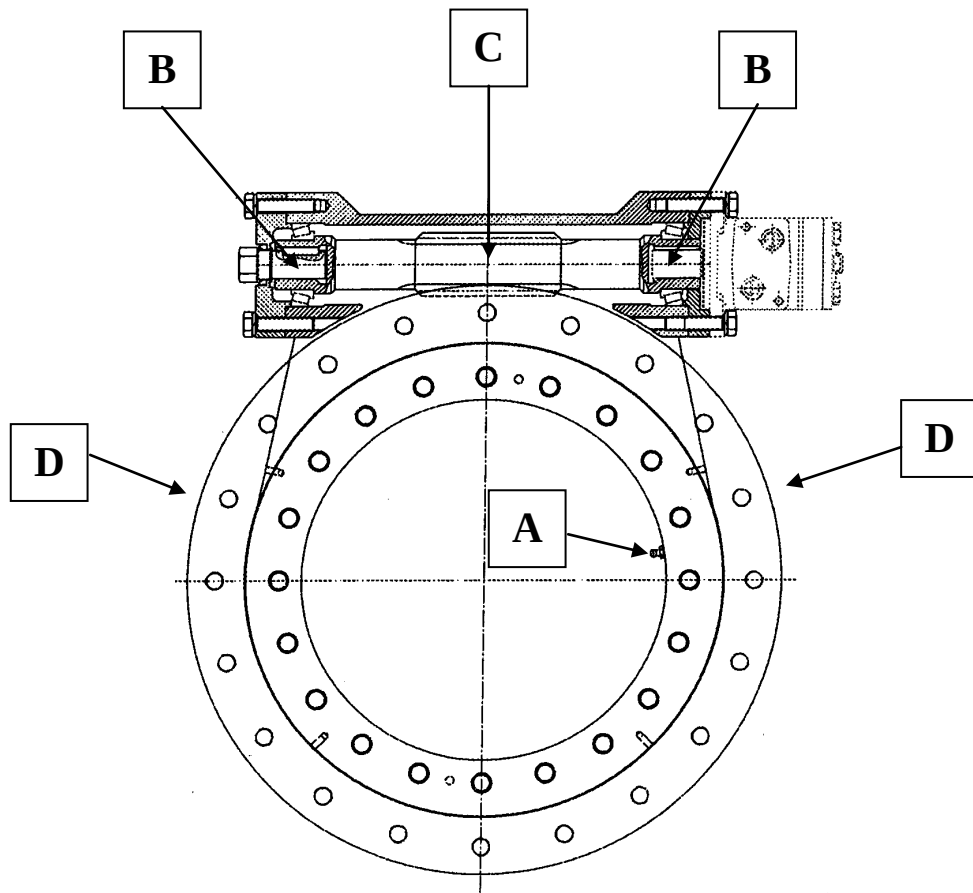

A – BALL BEARINGS – NILS NILEX EP1 (through grease cup)

B – BEARINGS - NILS NILEX EP1 (through grease cup)


C – ENDLESS SCREWS/COGGING - NILS NILEX EP1 (through grease cup)

D – EXTERNAL COGGING – NILS NILEX EP1 (USING PANEL)

5 VERIFICATION HYDRAULIC OIL LEVEL

You have to check that the hydraulic oil level in the tank is between the minimum and maximum values like in picture 1. The verification has to be made when the machine is closed and in position of transport (even the outriggers) and when the vehicle is on a ground floor.

In case of oil lack you have to make the topping up with an oil that has the characteristics on page 4.4.

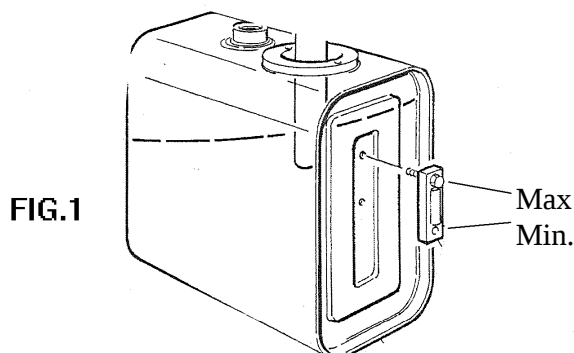


6. DELIVERY OIL FILTER CARTRIDGE REPLACEMENT

The delivery oil filter is near the control outriggers group (pic.2).

For a correct filter cleaning you have to replace the filter cartridge because it's not washable (made of microfibre).

For the replacement operation you have to proceed in this way:

- clean the filter external body
- screw out the lower part of the filter and extract the inside cartridge (before this operation put under the filter a container to gather the oil on the inside of the filter)
- insert the new cartridge and retighten the lower part of the filter

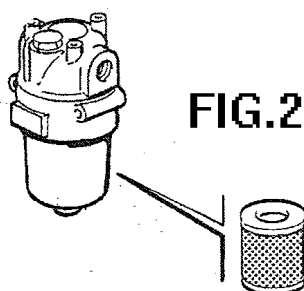


7. REPLACEMENT/RETURN FILTER CARTRIDGE CLEANING

The return filter cartridge is on the upper part of the tank (pic.3).

For a correct filter maintenance it's necessary to clean the inside filter cartridge and to replace it when its level of stoppage has exceeded the maximum limit (it's underlined by an evident dirty that can't be removed on its external surface).

For the cleaning and replacement operation you have to proceed in this way:

- clean the filter external body
- screw out the upper screws of the cover and extract the inside cartridge
- clean and replace the cartridge
- insert the new cartridge and retighten the screws of the cover

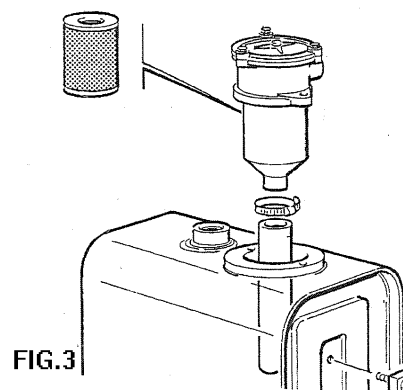

8. CONTROL OF THE SEAL OF THE CYLINDERS BLOCKING VALVES

Every three months check the seal of the blocking valves on the cylinders in this way:

A) Control of the blocking valves working steered of the outriggers

- 1) Fix stabilisers to the ground
- 2) Disconnect the power take off of the vehicle
- 3) Keep the truck turned on as to continue to electrically feed the controls.
- 4) Move lifting control levers and make sure that they do not move.
- 5) Switch off the truck, waiting for few minutes of the bedding and provide to mark the extension position of the outriggers
- 6) Check after 10 minutes that there was not a settlement (reenter of the outriggers)
- 7) Make the same test/control for the outriggers seal completely reentered

B) Control of the blocking valves on the cylinders of the superstructure

- 1) Partially lift the arms with maximum allowed load in the basket (Use only a load of material do not make the test with people in the basket)
- 2) Disconnect the power take off of the vehicle
- 3) Keep the truck turned on as to continue to electrically feed the controls
- 4) Operate on the interested controls and check that the cylinders do not make any movement
- 5) Switch off the truck waiting for few minutes of bedding and provide to mark the extension position of the different cylinders
- 6) Check after 10 minutes that there was not a settlement (Reenter of the cylinders)

7) Note: If you find settlements go as soon as possible to an authorized repair shop to make more controls and ,if it's the case, cures

9. CONTROL PIPEFITTINGS AND FLEXIBLE/RIGID PIPES

During the normal maintenance you have to control all the pipe fittings and the different hydraulic junctions of the machine to find irregularities.

The control of the pipe fittings has to be made through the check of the oil dripping absence and also check the correct clamping (if on the pipefitting there is a seal, and if it's necessary, make a replacement).

For the flexible pipes check with attention the junction pipe/pressed pipefitting and the general condition of the flexible pipe (it doesn't have early aging signs, craks, swellings or abrasions that can compromise the seal 9.


For the replacement of any pipes follow this instructions:

- 1 Switch off the truck engine
- 2 Operate, many times, control levers (motor turned off) in order to eliminate pressure within the circuits.
- 3 If these hoses are under the tank, a suction phenomenon by discharge filters could occur; therefore, if necessary, disconnect hoses connected to return filters.
- 4 If you have to replace an induction pipe from the tank, you have to stop the exit of the oil from the tank
- 5 Always proceed very carefully while removing the part to be replaced
- 6 Use always original pipes/spares

After having replaced the required parts, eliminate air which has entered into the circuit by moving the various jacks at end stroke.

10. CONTROLLO DEL SERRAGGIO VITI SUL GIUNTO

Every six months, check the fastening of the joint (see fig.), Checking with a torque wrench to the tightening torque for screws, taking as reference the value shown in the technical tables that correspond to the type and class screw used for fixing.

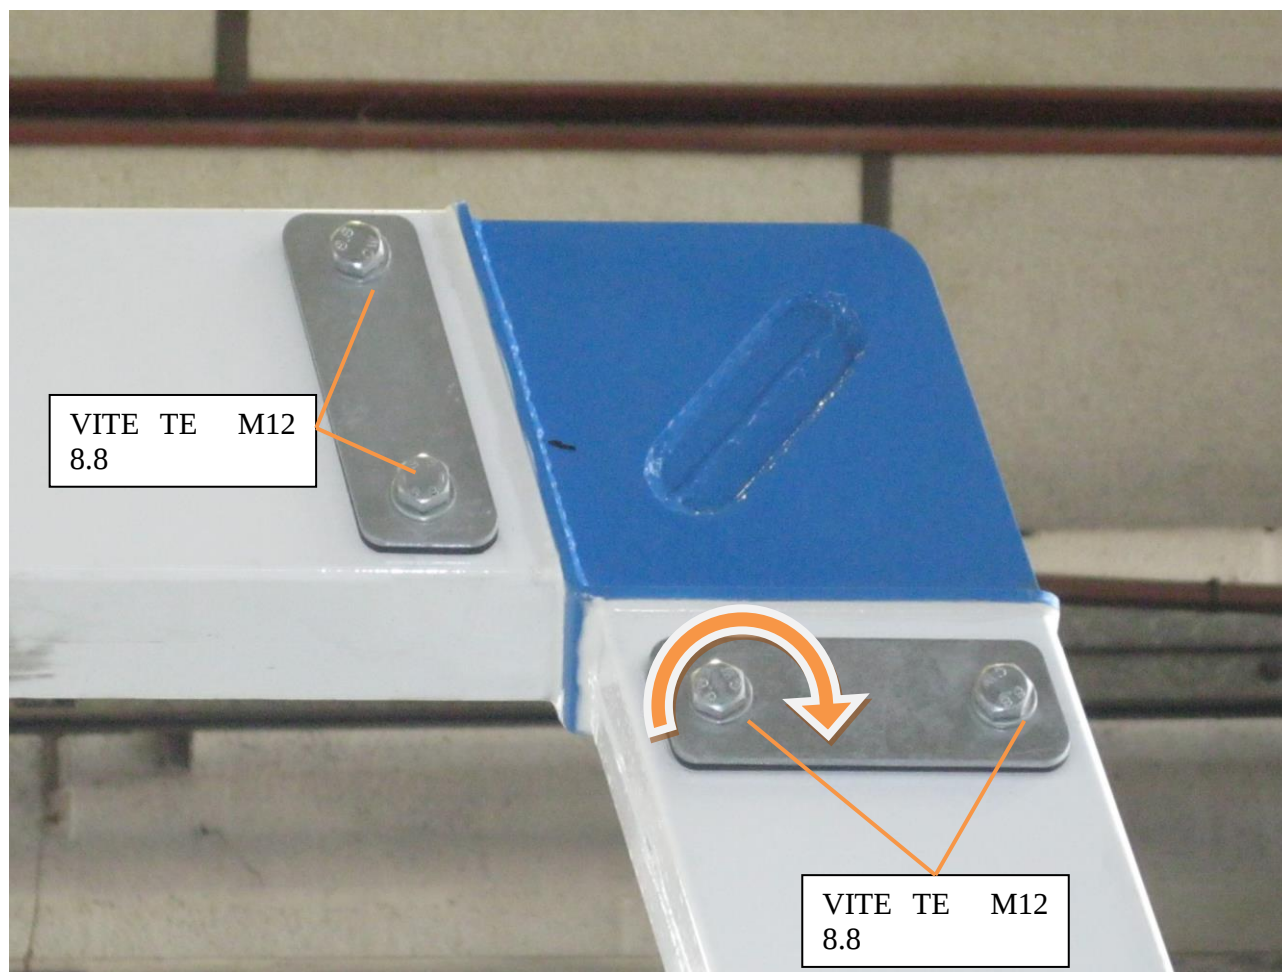

ATTENTION!!! PIPES-ELECTRIC CABLES

The flexible pipes and the electric cables that slide on the inside of the cable holder chains are components that can be subject to wear and they have frequently be controlled to avoid damages risks with also a stopping machine.

You have to control their correct clamping to the extremities of the cable holder chain, their external wear condition and their correct position and tension (on the inside of the cable holder chain there can't be trusses and discharge of pipes and cables).

Note: If the cable holder chain is on the inside of the boom it can be made a visual control with a portable light from the back boom opening (you have to remove the cover lock up and make attention to the cable holder chain during the extension of the boom).

11. SYSTEMS/ELECTRIC COMPONENTS

Check every 100 hours/one month of working the preservation state of the components and of the electric harness (control with attention the cables and the different plugs/tap). Check that the cables don't have impact signs/rubbings or superficial wears and that they are correctly fixed in their original position.

You have also to check the integrity of the different electric boxes and verify the correct water tightness of the covers and of the pipe fittings for the entry of the electric cables (to avoid dangerous water infiltrations). For the machine shaving the electrohydraulic joint on the inside of the turret (machines with a continuous rotation of the turret) verify the integrity of its inside electric connections (brushes and sliding links) and lubricate them every month with a right antioxidant product (antioxidant spray for electric contacts).

12. STRUCTURE INSPECTION

The complete control and the structure inspection of the platform has to be made every 1500/2000 working hours if it's possible by the expert personnel and authorized by the constructor to check the general condition of the machine.

To make this control follow this instructions:

- wash/clean with attention all the machine
- make a visual inspection to the entire structure of the machine (also the connection frame to the vehicle) with particular attention to the welding sand to the points of rust/oxidation to find weakening signs
- if you find flaws/cracks or if you have doubts go as soon as possible to an authorized repair shop to make more controls and if it's the case cares

13. CONTROL BOLTS AND NUTS CLAMPING

The control of the correct bolts and nuts clamping used on the platform has to be made every 300/600 working hours, if it's possible, by the expert personnel to find settlements or loosening.

You have to control the clamping of all the bolts and nuts that are on the machine (through dynamometric key with the aid of the values clamping chart below). Give attention to the follow critical points:

- clamping to the vehicle frame
- basket clamping
- Clamping flanged valve on cylinder
- clamping thrust bearing/turret/frame
- clamping system for pin blocking
- outriggers clamping

ATTENTION!!!

During the controls/new clamping do not use the screws that are already at a yield/extended because they do not guarantee the correct seal characteristics.

If you find a loose clamping, in particular of the critical clamping points, replace the screw (use always original spares given by the constructor).

NUTS AND BOLTS TIGHTENING COUPLE TABLE Nm

Rated diameter (mm)	BOLT CLASS		
	8.8	10.9	12.9
5	5	7	8
6	8	12	14
8	20	29	35
10	40	60	70
12	70	100	120
14	110	160	190
16	170	250	300
18	240	350	410
20	340	500	580
22	460	680	800
24	580	860	1000
27	860	1270	1490
30	1170	1720	2010
33	1590	2340	2740
36	2040	3000	3520
39	2660	3900	4570

Precision tightening C μ = 0,15 Law E25-030 Afnor 84162
(10Nm $\approx$ 1 Kgm)

TABLE OF PIPEFITTING/PIPES TIGHTENING COUPLE

PIPEFITTING/PIPE 24° - DIN3861

PIPEFITTING/PIPE 60°-BSP

T Ø EST PIPE		F THREAD	TIGHTENIN G COUPLE
SERIE	SP		N.m
LIGHT (L)	6	12 x 1,5	13 - 15
	8	14 x 1,5	15 - 18
	10	16 x 1,5	25 - 28
	12	18 x 1,5	27 - 30
	15	22 x 1,5	50 - 60
	18	26 x 1,5	60 - 75
	22	30 x 2	85 - 105
	28	36 x 2	120 - 140
HEAVY (S)	6	14 x 1,5	14 - 16
	8	16 x 1,5	25 - 28
	10	18 x 1,5	27 - 30
	12	20 x 1,5	43 - 54
	14	22 x 1,5	50 - 62
	16	24 x 1,5	60 - 75
	20	30 x 2	90 - 110
	25	36 x 2	125 - 145

T Ø EST PIPE		F THREAD	TIGHTENIN G COUPLE
mm	IN.		N.m
5	3/16	1/8	12 - 14
6	1/4	1/4	14 - 16
10	3/8	3/8	25 - 28
12	1/2	1/2	45 - 60
16	5/8	5/8	55 - 70
20	3/4	3/4	90 - 110
25	1"	1"	120 - 140
32	1"1/4	1"1/4	170 - 190
38	1"1/2	1"1/2	200 - 245

14. SYSTEM EMPTYING AND TANK REFILLING

If it is necessary to empty the equipment, you have to completely remove used oil as not to mix it with new oil. Intake must be carried out starting from the equipment's lowest part; intake should be carried out when oil is hot.

The oil for refilling the equipment should be poured into the tank through a 25 micron filter.

Oil must be clean and devoid of any foreign substance which could cause anomalies and early wears to the equipment; moreover, oil must correspond to specifications indicated.

PROCEDURE TO BE FOLLOWED IN CASE OF ANY BREAKDOWN TO ONE OF THE PUMPS OR TO ONE OF THE MOTORS

Under these conditions there is a risk of polluting the whole system. As a matter of fact, a breakdown in this equipment is always characterised by quite an abrasive dust which can cause serious damages to the remaining systems. You have to release tank oil, wash and clean: valves, users, hoses and tank.

Moreover, it is necessary to check if cylinders show wear.

Replace all the filters and fit provisional 25 micron filters on each return hose.

Let the equipment work for 40/50 hours approx. before removing provisional filters and refilling tank with new oil.

15. GREASING OF THE HINGED PINS

The hinged pins have to be lubricated with right lubricators.

For the kind of grease see paragraph 2-Products to use.

16. GREASING OF THE SLIDING BLOCKS

To lubricate the sliding blocks you have to strew the sliding parts of the different booms with a right lubricator/grease (see paragraph 2 –Products to use) in the contact zone of the sliding blocks.

Make some operations of extension/without operator after having finished the clamping operation, so you can obtain the correct lubrication distribution on the sliding parts.

17. CONTROL/ADJUSTMENT OF THE SLIDING BLOCKS OF THE TELESCOPIC BOOMS

Check regularly the wear condition (and make the adjustment when it's necessary) of the sliding blocks of the telescopic booms.

The lateral sliding blocks are generally adjustable from the outside through a system with screw/adjustment register. The correct adjustment can't be very narrow (to avoid an early damage) and not very slow (to avoid a side clearance). We advise you to maintain a maximum allowance between sliding block and boom of 0,5mm.

The upper and lower sliding blocks are not adjustable from the outside. To control the wear condition and a new adjustment you have to go to an authorized workshop because it's necessary to remove the parts.

In any case you can check their wear controlling the thickness.

The head of the screws or of the backstops can't protrude from the upper surface of the sliding block. We advise you to maintain a minimum projection of the sliding block of 3mm compared to the clamping systems.

18. CONTROLS

Check the correct controls working (hydraulic and electric), the correct position, the graduality of the operations and the operative speed, if there is an anomalous working go as soon as possible to an authorized assistance point.

19. TROUBLES / POSSIBLE CAUSES / REMEDIAL MEASURES

Troubles	Possible causes	Hypothesis for intervention
INSUFFICIENT PRESSURE or pressure gradient in comparison to the level required in the circuit	1. max pressure valve half-open 2. pump defect 3. excessive inner leaks 4. excessive loading loss	1. a) for too low calibration pressure b) for wearing out of tightening seats c) for dirt under seats d) for spring breakdown 2. see points 5 ÷ 11 3. a) tightening collects in the cylinders and in the hydraulic motors show wear b) distributor and valves wearing c) not enough viscous oil 4. a) too viscous oil b) oil pass - throughs not adequately shaped c) oil pass-throughs partially obstructed
PUMP DEFECT for lack of power or for power extremely below normal values	5. throttled intake 6. air inlet 7. hermetically sealed tank 8. defective working 9. too viscous oil 10. inner breakdowns in the pump 11. the pump shows too much wearing	5. a) too small or obstructed intake filter b) obstructed intake hose c) too little or crooked hose 6. a) in the tank intake take-off b) in intake connections c) in the seal of the pump shaft d) for intake of foamy oil 7. air bleed in the obstructed tank 8. a) check coupling b) too high or too low speed 9. see indications for the pump 10. a) broken inner gaskets b) pasted blades, plates or pistons c) untightened pump head d) broken inner parts which should be replaced 11. pump should be replaced
exceedingly NOISY PUMP (for instance some gear pump are always a little noisy)	12. cavitation 13. air inlet 14. inner wearing 15. system vibrations	12. a) throttled intake: see point 5 b) excessive viscosity: see point 9 13. see point 6 14. excessive clearance in supports and plates 15. defective installation, resonance, etc.

Troubles	Possible causes	Hypothesis for intervention
OVERHEATING i.e. rising of oil temperature above prudential limit of 50°-60°	16.too high maximum pressure 17.power is uselessly engaged 18. extreme inner leaks 19.extreme loading loss 20.insufficient oil capacity 21.insufficient cooling . extreme friction	16. excessive valve calibration 17. a) insufficient exclusion valve b) malfunctioning short-circuit at cycle end c) hydraulic circuit to be modified 18. see point 3 19. see point 4 20. increase oil tank capacity 21. a) add artificial cooling b) refrigerants, if any, not effective 22. a) defective pump inner fitting b) lack of lubrication when required c) use of not enough lubricating oil
INCORRECT MOVEMENTS of hydraulically operated elements in comparison to the required cycled	23.air in the circuit 24.valves locked 25.cylinders locked 26.extreme loading loss 27.varying accumulator pressure	23. a) let air bubbles off at the top b) eliminate air leaks: see point 6 24. a) valves locked, while closing, by rubber or other materials b) valves half-open because of dirt 25. a) cylinder inner incorrect mounting b) normal axle loading not permitted c) seizing of connecting pins 26. see point 4 27. a) insufficient accumulator capacity b) circuit greater demand because of inner leaks
EXTREME WEARING i.e. excessively fast in comparison to working period	28.oil containing abrasive substances 29.insufficient lubrication 30.high working pressure 31.defective coupling	28. a) too old oil b) filters not efficient 29. a) poor quality oil b) too fluid oil at working temperature 30. in comparison to the allowed max. pressure for pump and valves 31. abnormal strain on shafts and stems

20. WORKING ANOMALIES: PART BREAKDOWN

What follows is a list of reasonably foreseeable explanations for which the machine cannot work, relevant to each operation of the platform: in the columns of the following chart we have listed type of trouble, operation, parts which can cause the breakdown and type of intervention to be carried out.

Parts/breakdown	Cause	Remedial measures
Noisy power take off	Driving with power take off applied. Working wearing.	Overhaul or total replacing.
Free power take off	Air switch breakage or air lack in the truck.	Overhaul or total replacing
Noisy truck pump	Lack of oil or breakage of key or of take off connecting joint	Oil refilling or replacing
Stab. insufficient oil pressure	Make sure that the arm is in non-working position and that micro-switch is depressed. Nylon pin (hydraulic switch) broken down. Broken truck pump. Filter obstructed. Non-return valve open. Dirty max. exchanger valve, stabilisation distributor.	Check every single part. Clean or replace, if necessary.
Turret controls out of order	Stabilisation has not occurred. Exchange heart-basket control not switch (See electric system manual)	Check Stab. micro-switches (4) and axle micro-switch
Basket controls out of order	(See electric system manual)	
Insufficient oil pressure turret distributor	Dirty distribution max. valve. Exchanger not stimulated Arm holder microswitch broken down.	Inspection of turret panel fuses Replacing of parts (See electric system manual)
Insufficient 220 Volt oil pump pressure	Broken pump or dirty non-return truck pump valve	Clean and/or replace
Basket balancing and rotation out of order	Electric valve locked or out of order	
Excessive rotation clearance when the machine is turned off	Loosened fixing screws	Adjust fixing plate of the gearbox and tighten screws

***** CHAPTER 5 *****

HYDRAULIC SYSTEM

The documentation contained in this chapter is composed of
n° 4 pages, this included..

.

KEYS TO SYMBOLS OF HYDRAULIC COMPONENTS

EQUIPMENT SERIES SO-0054 - 12VT

What follows is a list of hydraulic system components, their relevant symbols are indicated in the following chart:

<u>SYMBOL</u>	<u>COMPONENT AND USE</u>
M (10 l/m)	Hydraulic system feeding pump
PM	Emergency hand pump
FP	Delivery oil filter
S	Oil tank
R	
MR	Turret rotation motor
A1-B1	Turret rotation
A2-B2	Arm lifting/Lowering
A3-B3	Arm opening/retracting
A4-B4	Basket balancing
A	Basket balancing cylinder
B	cylinde opening/retracting
C	Cylinder lifting/Lowering
D	reading balancing cylinder
AB	Locking valve on A cylinder
BR	Locking valve on B cylinder
DB	Locking valve on D cylinder
VLM	Maximum pressure valves on balancing system
DTO	Distributore comandi in torretta
OPTIONAL	
YVEM1	Exchanger electro-valve
A	Stabiliser cylinders
AB	Stabiliser cylinders' locking valve
VMP	Maximum pressure valves
YV1	Exchanger electro-valve (aerial part/stabilizers)



EMPTY PAGE FOR FURTHER INFORMATION

***** CHAPTER 6 *****

ELECTRIC SYSTEM

The documentation contained in this chapter is composed of
n°20 pages, this included..

AUTOMAZIONI INDUSTRIALI ELETTRICHE ED ELETTRONICHE QUADRI ELETTRICI DI COMANDO - SOFTWARE P.L.C. - PROGETTAZIONE E ASSISTENZA Via Valtò, 18 - 41037 MIRANDOLA (MO) - P.IVA 02127590368 Tel. 0535.38040 Fax 0535-657512 E-mail: tecnico@diasteca.com															S.r.l															Copying of this document, and giving it to others and the use or communication of the contents thereof, are forbidden without express authority. Offenders are liable to the payment of damages. All rights are reserved in the event of the grant of the patent or the registration of a utility model or design.																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																											
12VT-RF															12VT-RF															AutocAD 2012															FILE:															12VT-RF															Revision N.:															Last Rev. Date:															Description:															Iss. Date:															1/09/2014																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																		
A															B															C															D															E															F															G															H															M															N															P															R															S															T															U															0															1															2															3															4															5															6															7															8															9															10															11															12															13															14															15															16															17															18															19															20															21															22															23															24															25															26															27															28															29															30															31															32															33															34															35															36															37															38															39															40															41															42															43															44															45															46															47															48															49															50															51															52															53															54															55															56															57															58															59															60															61															62															63															64															65															66															67															68															69															70															71															72															73															74															75															76															77															78															79															80															81															82															83															84															85															86															87															88															89															90															91															92															93															94															95															96															97															98															99															100															101															102															103															104															105															106															107															108															109															110															111															112															113															114															115															116															117															118															119															120															121															122															123															124															125															126															127															128															129															130															131															132															133															134															135															136															137															138															139															140															141															142															143															144															145															146															147															148															149															150															151															152															153															154															155															156															157															158															159															160															161															162															163															164															165															166															167															168															169															170															171															172															173															174															175															176															177															178															179															180															181															182															183															184															185															186															187															188															189															190															191															192															193															194															195															196															197															198															199															200															201															202															203															204															205															206															207															208															209															210															211															212															213															214															215															216															217															218															219															220															221															222															223															224															225															226															227															228															229															230															231															232															233															234															235															236															237															238															239															240															241															242															243															244															245															246															247															248															249															250															251															252															253															254															255															256															257															258															259															260															261															262															263															264															265															266															267															268															269															270															271															272															273															274															275															276															277															278															279															280															281															282															283															284															285															286															287															288															289															290															291															292															293															294															295															296															297															298															299															300															301															302															303															304															305															306															307															308															309															310															311															312															313															314															315															316															317															318															319															320															321															322															323															324															325															326															327															328															329															330															331															332															333															334															335															336															337															338															339															340															341															342															343															344															345															346															347															348															349															350															351															352															353															354															355															356															357															358															359															360															361															362															363															364															365															366															367															368															369															370															371															372															373															374															375															376															377															378															379															380															381															382															383															384															385															386															387															388															389															390															391															392															393															394															395															396															397															398															399															400															401															402															403															404															405															406															407															408															409															410															411															412															413															414															415															416															417															418															419															420															421															422															423															424															425															426															427															428															429															430															431															432															433															434															435															436															437															438															439															440															441															442															443															444															445															446															447															448															449															450															451															452															453															454															455															456															457															458															459															460															461															462															463															464															465															466															467															468															469															470															471															472															473															474															475															476															477															478															479															480															481															482															483															484															485															486															487															488															489															490															491															492															493															494															495															496															497															498															499															500															501															502															503															504															505															506															507															508															509															510															511															512															513															514															515															516															517															518															519															520															521															522															523															524															525															526															527															528															529															530															531															532															533															534															535															536															537															538															539															540															541															542															543															544															545															546															547															548															549															550															551															552															553															554															555															556															557															558															559															560															561															562															563															564															565															566															567															568															569															570															571															572															573															574															575															576															577															578															579															580															581															582															583															584															585															586															587															588															589															590															591															592															593															594															595															596															597															598															599															600															601															602															603															604															605															606															607															608															609															610															611															612															613															614															615															616															617															618															619															620															621															622															623															624															625															626															627															628															629															630															631															632															633															634															635															636															637															638															639															640															641															642															643															644															645															646															647															648															649															650															651															652															653															654															655															656															657															658															659															660															661															662															663															664															665															666															667															668															669															670															671															672															673															674															675															676															677															678															679															680															681															682															683															684															685															686															687															688															689															690															691															692															693															694															695															696															697															698															699															700															701															702															703															704															705															706															707															708															709															710															711															712															713															714															715															716															717															718															719															720															721															722															723															724															725															726															727															728															729															730															731															732															733															734															735															736															737															738															739															740															741															742															743															744															745															746															747															748															749															750															751															752															753															754															755															756															757															758															759															760															761															762															763															764															765															766															767															768															769															770															771															772															773															774															775															776															777															778															779															780															781															782															783															784															785															786															787															788															789															790															791															792															793															794															795															796															797															798															799															800															801															802															803															804															805															806															807															808															809															810															811															812															813															814															815															816															817															818															819															820															821															822															823															824															825															826															827															828															829															830															831															832															833															834															835															836															837															838															839															840															841															842															843															844															845															846															847															848															849															850															851															852															853															854															855															856															857															858															859															860															861															862															863															864															865															866															867															868															869															870															871															872															873															874															875															876															877															878															879															880															881															882															883															884															885															886															887															888															889															890															891															892															893															894															895															896															897															898															899															900															901															902															903															904															905															906															907															908															909															910															911															912															913															914															915															916															917															918															919															920															921															922															923															924															925															926															927															928															929															930															931															932															933															934															935															936															937															938															939															940															941															942															943															944															945															946															947															948															949															950															951															952															953															954															955															956															957															958															959															960															961															962															963															964															965															966															967															968															969															970															971															972															973															974															975															976															977															978															979															980															981															982															983															984															985															986															987															988															989															990															991															992															993															994															995															996															997															998														

OS114

XC8 [014-C4]

XC42 [013-B4]

XC44 [012-F4]

XC1 [012-A4]

XC1A [012-C4]

SR31 [007-17]

SQ1 [007-S7]

INCLIN.

XC10 [016-B4]


SQR2 [007-N7]


XC3 [007-M8]


SR42B [008-C6]

SR24 [005-F6]



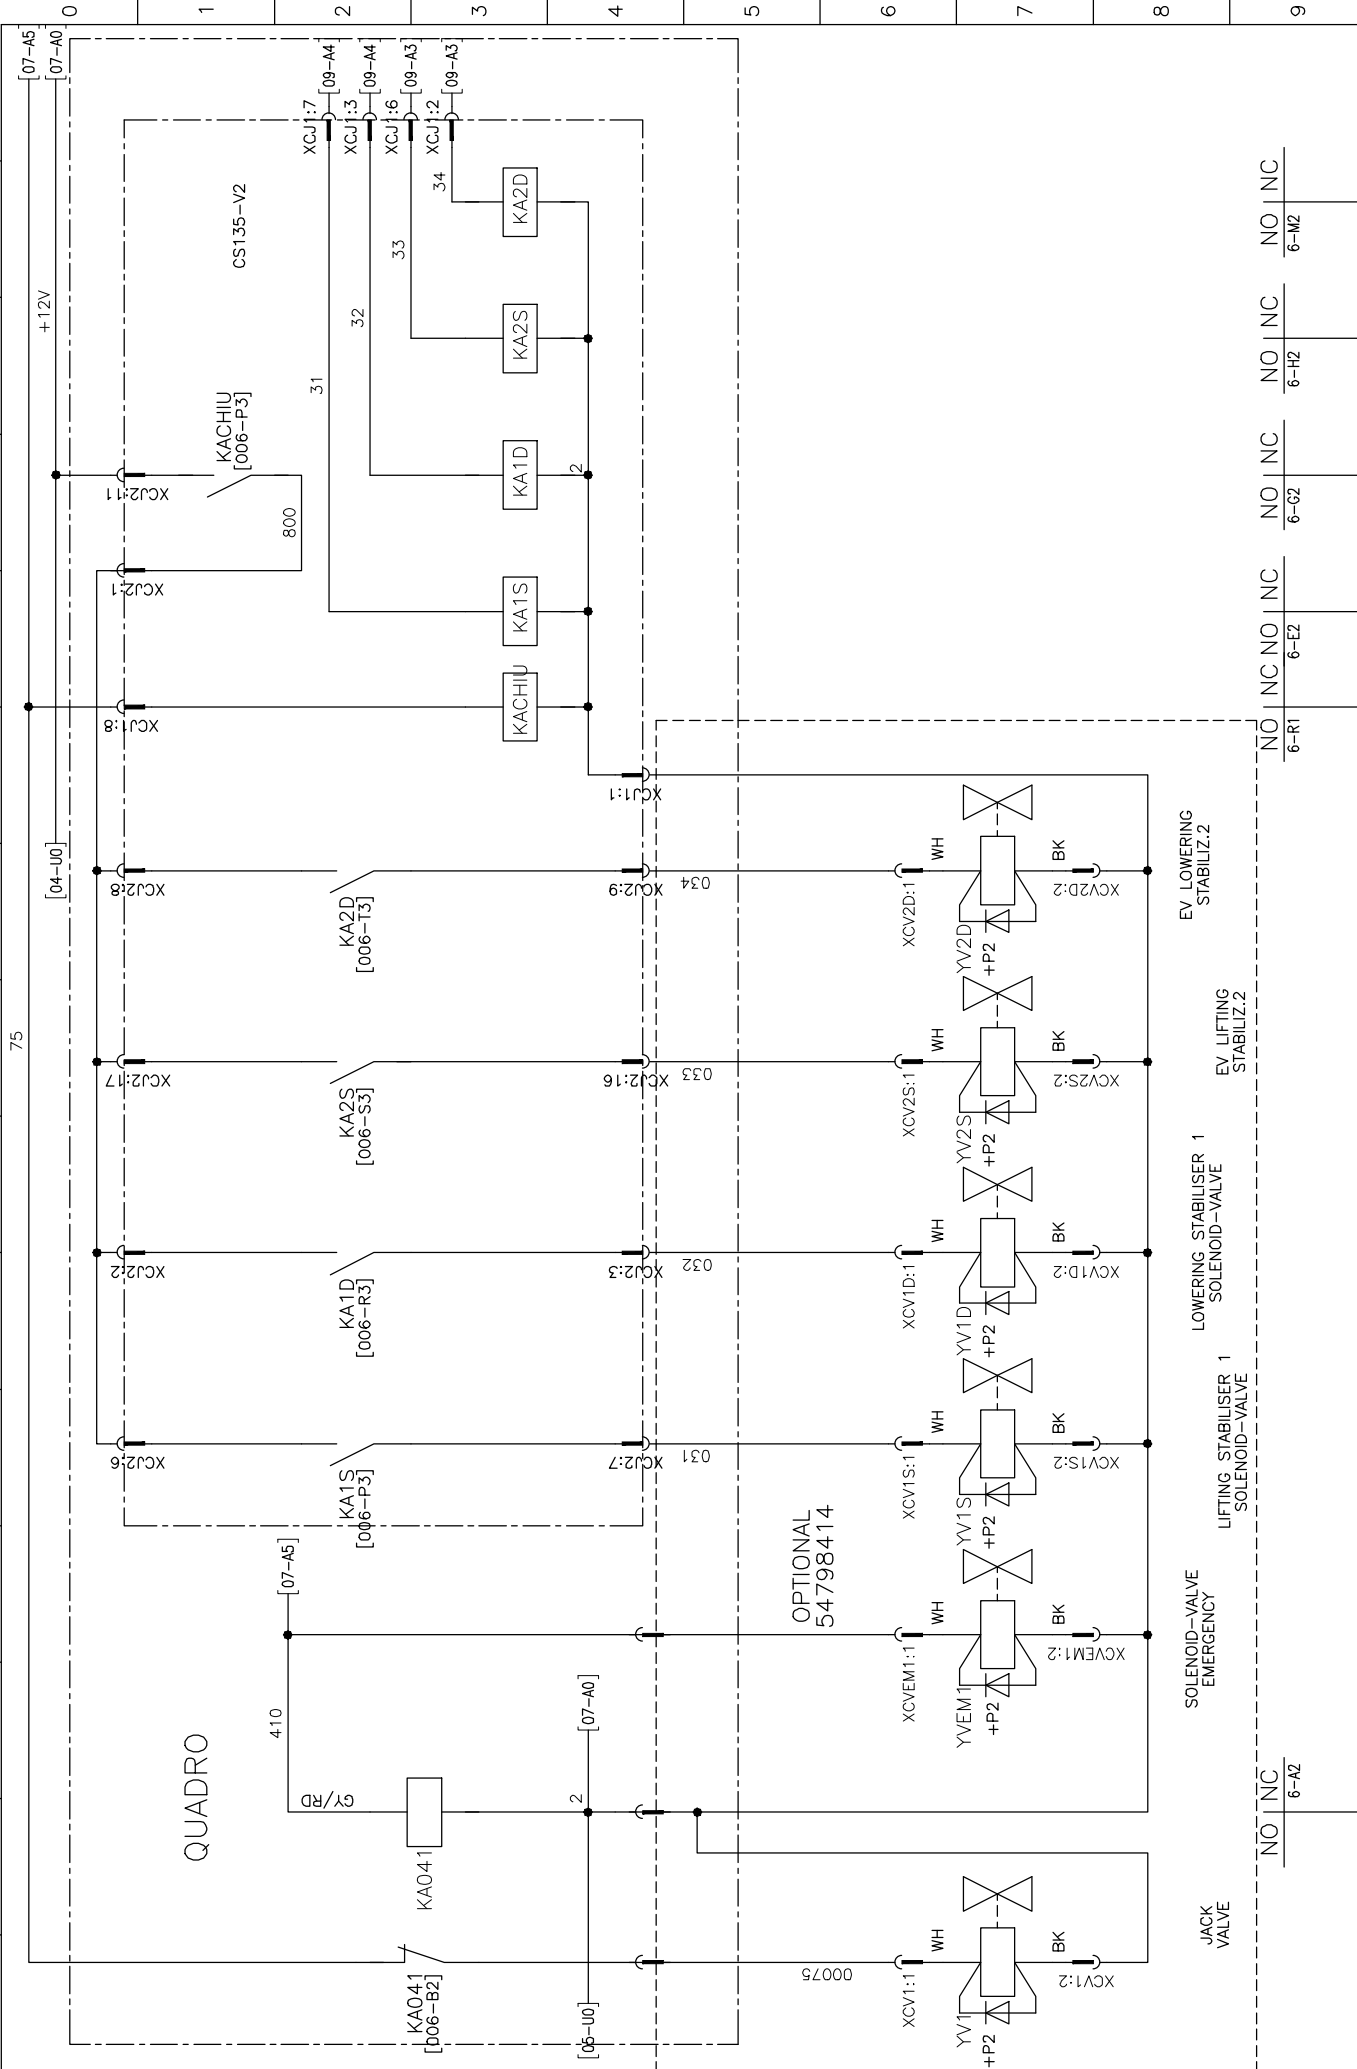

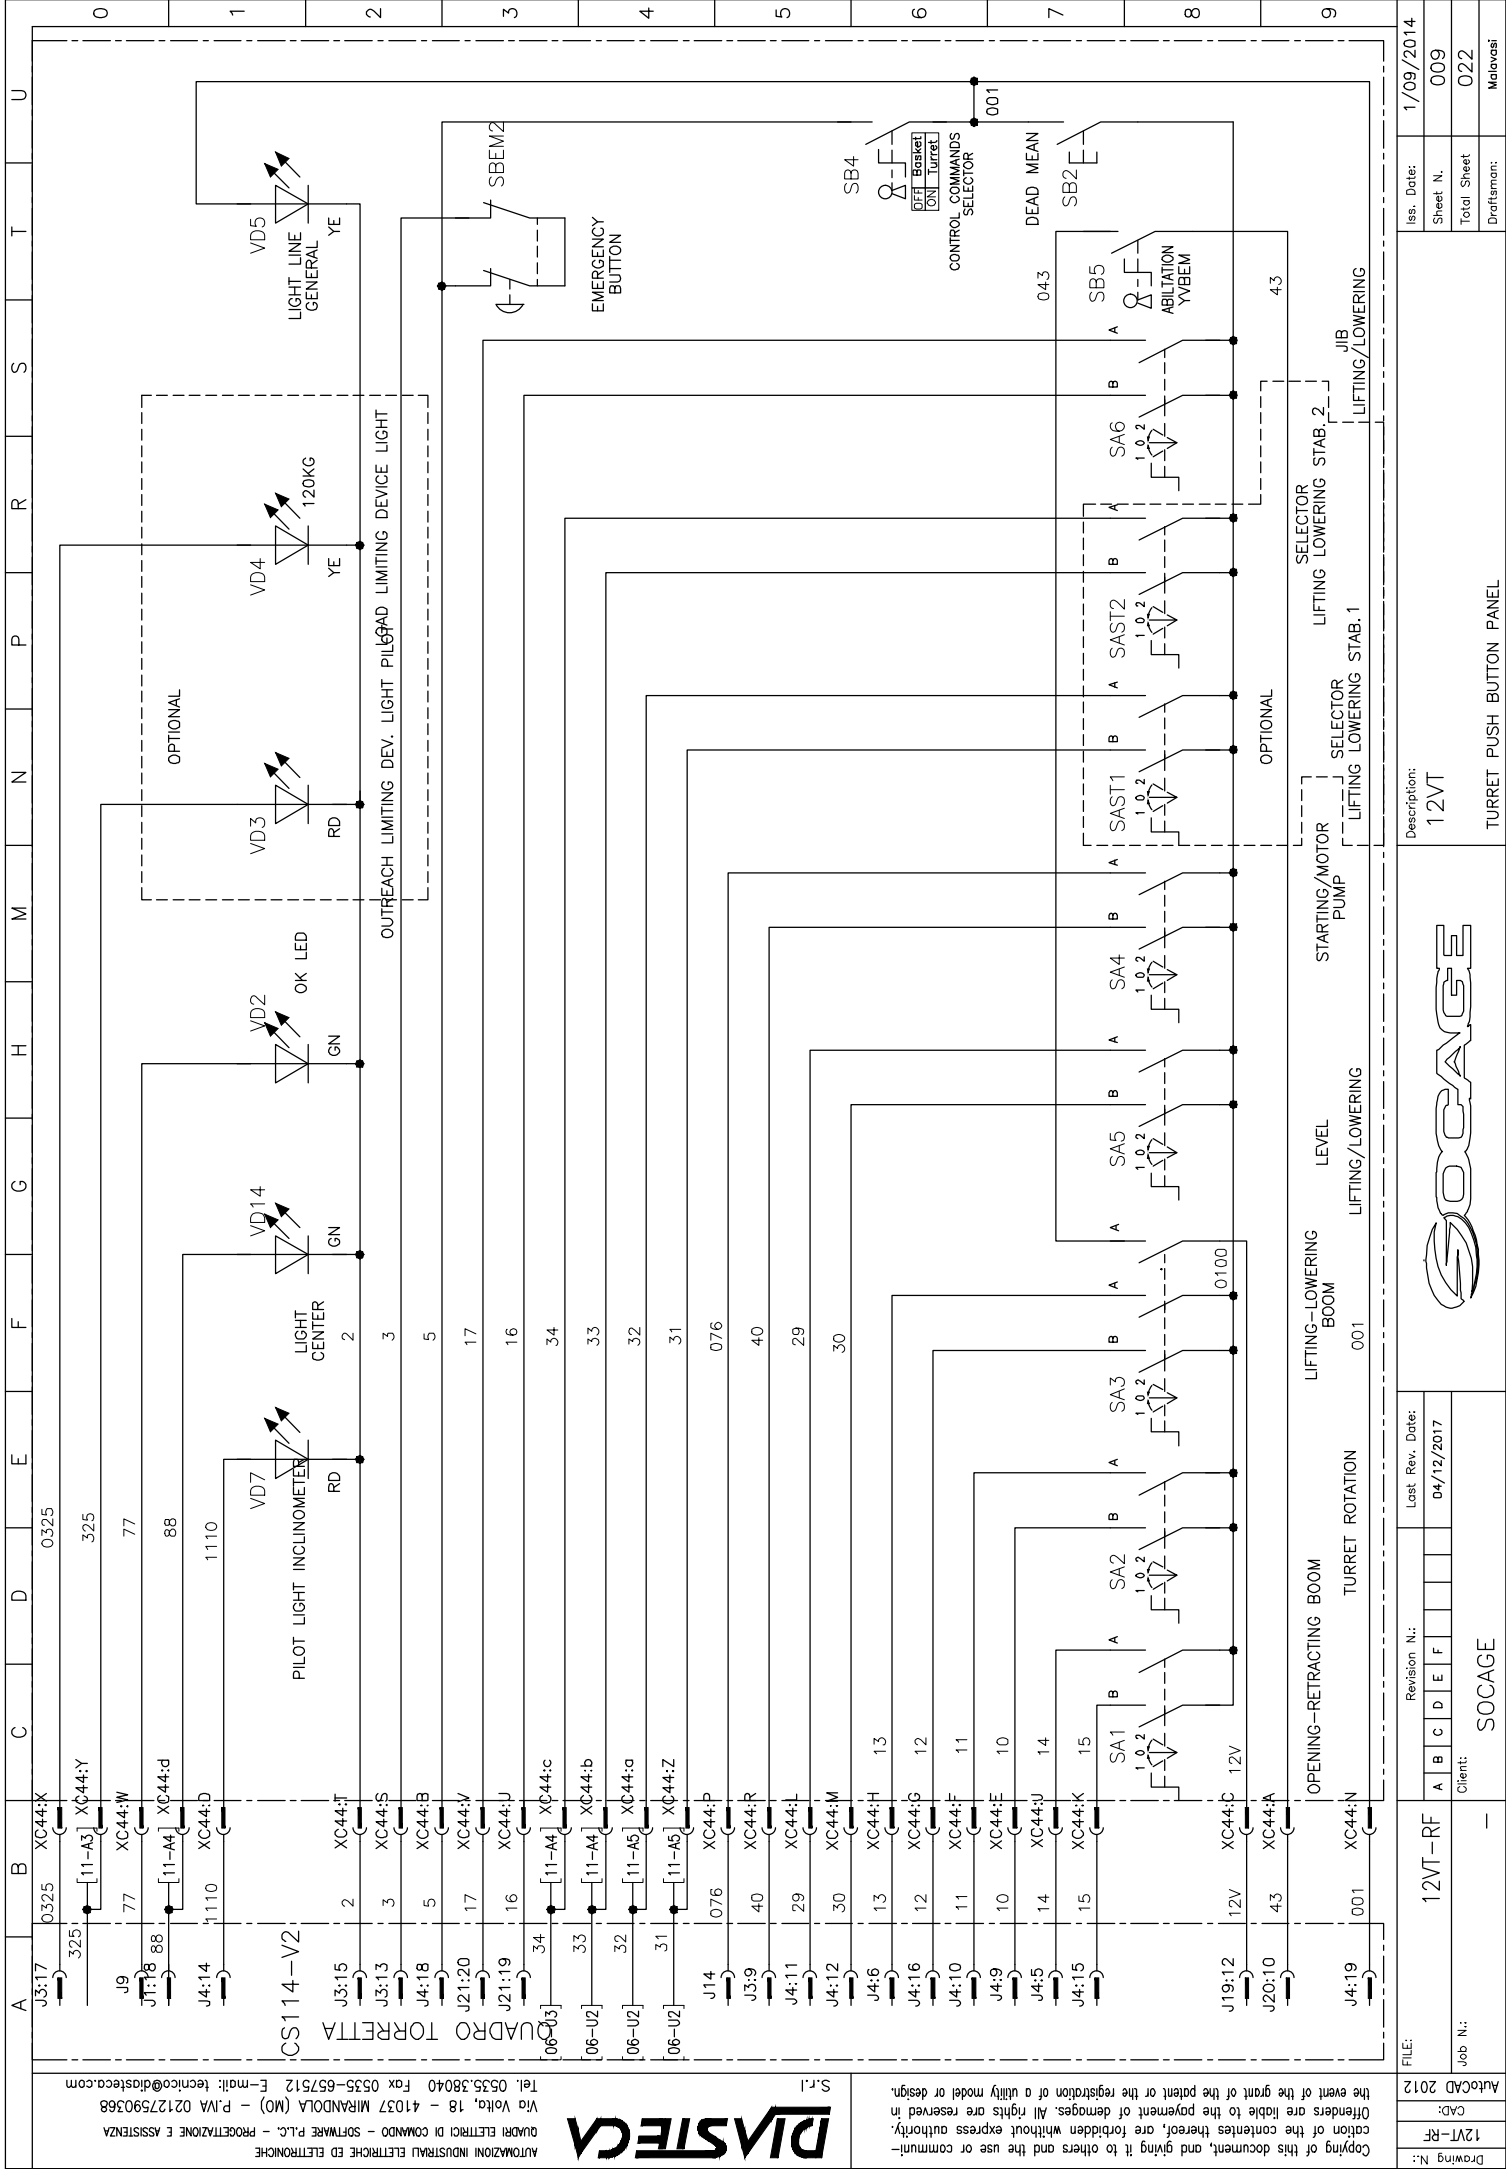

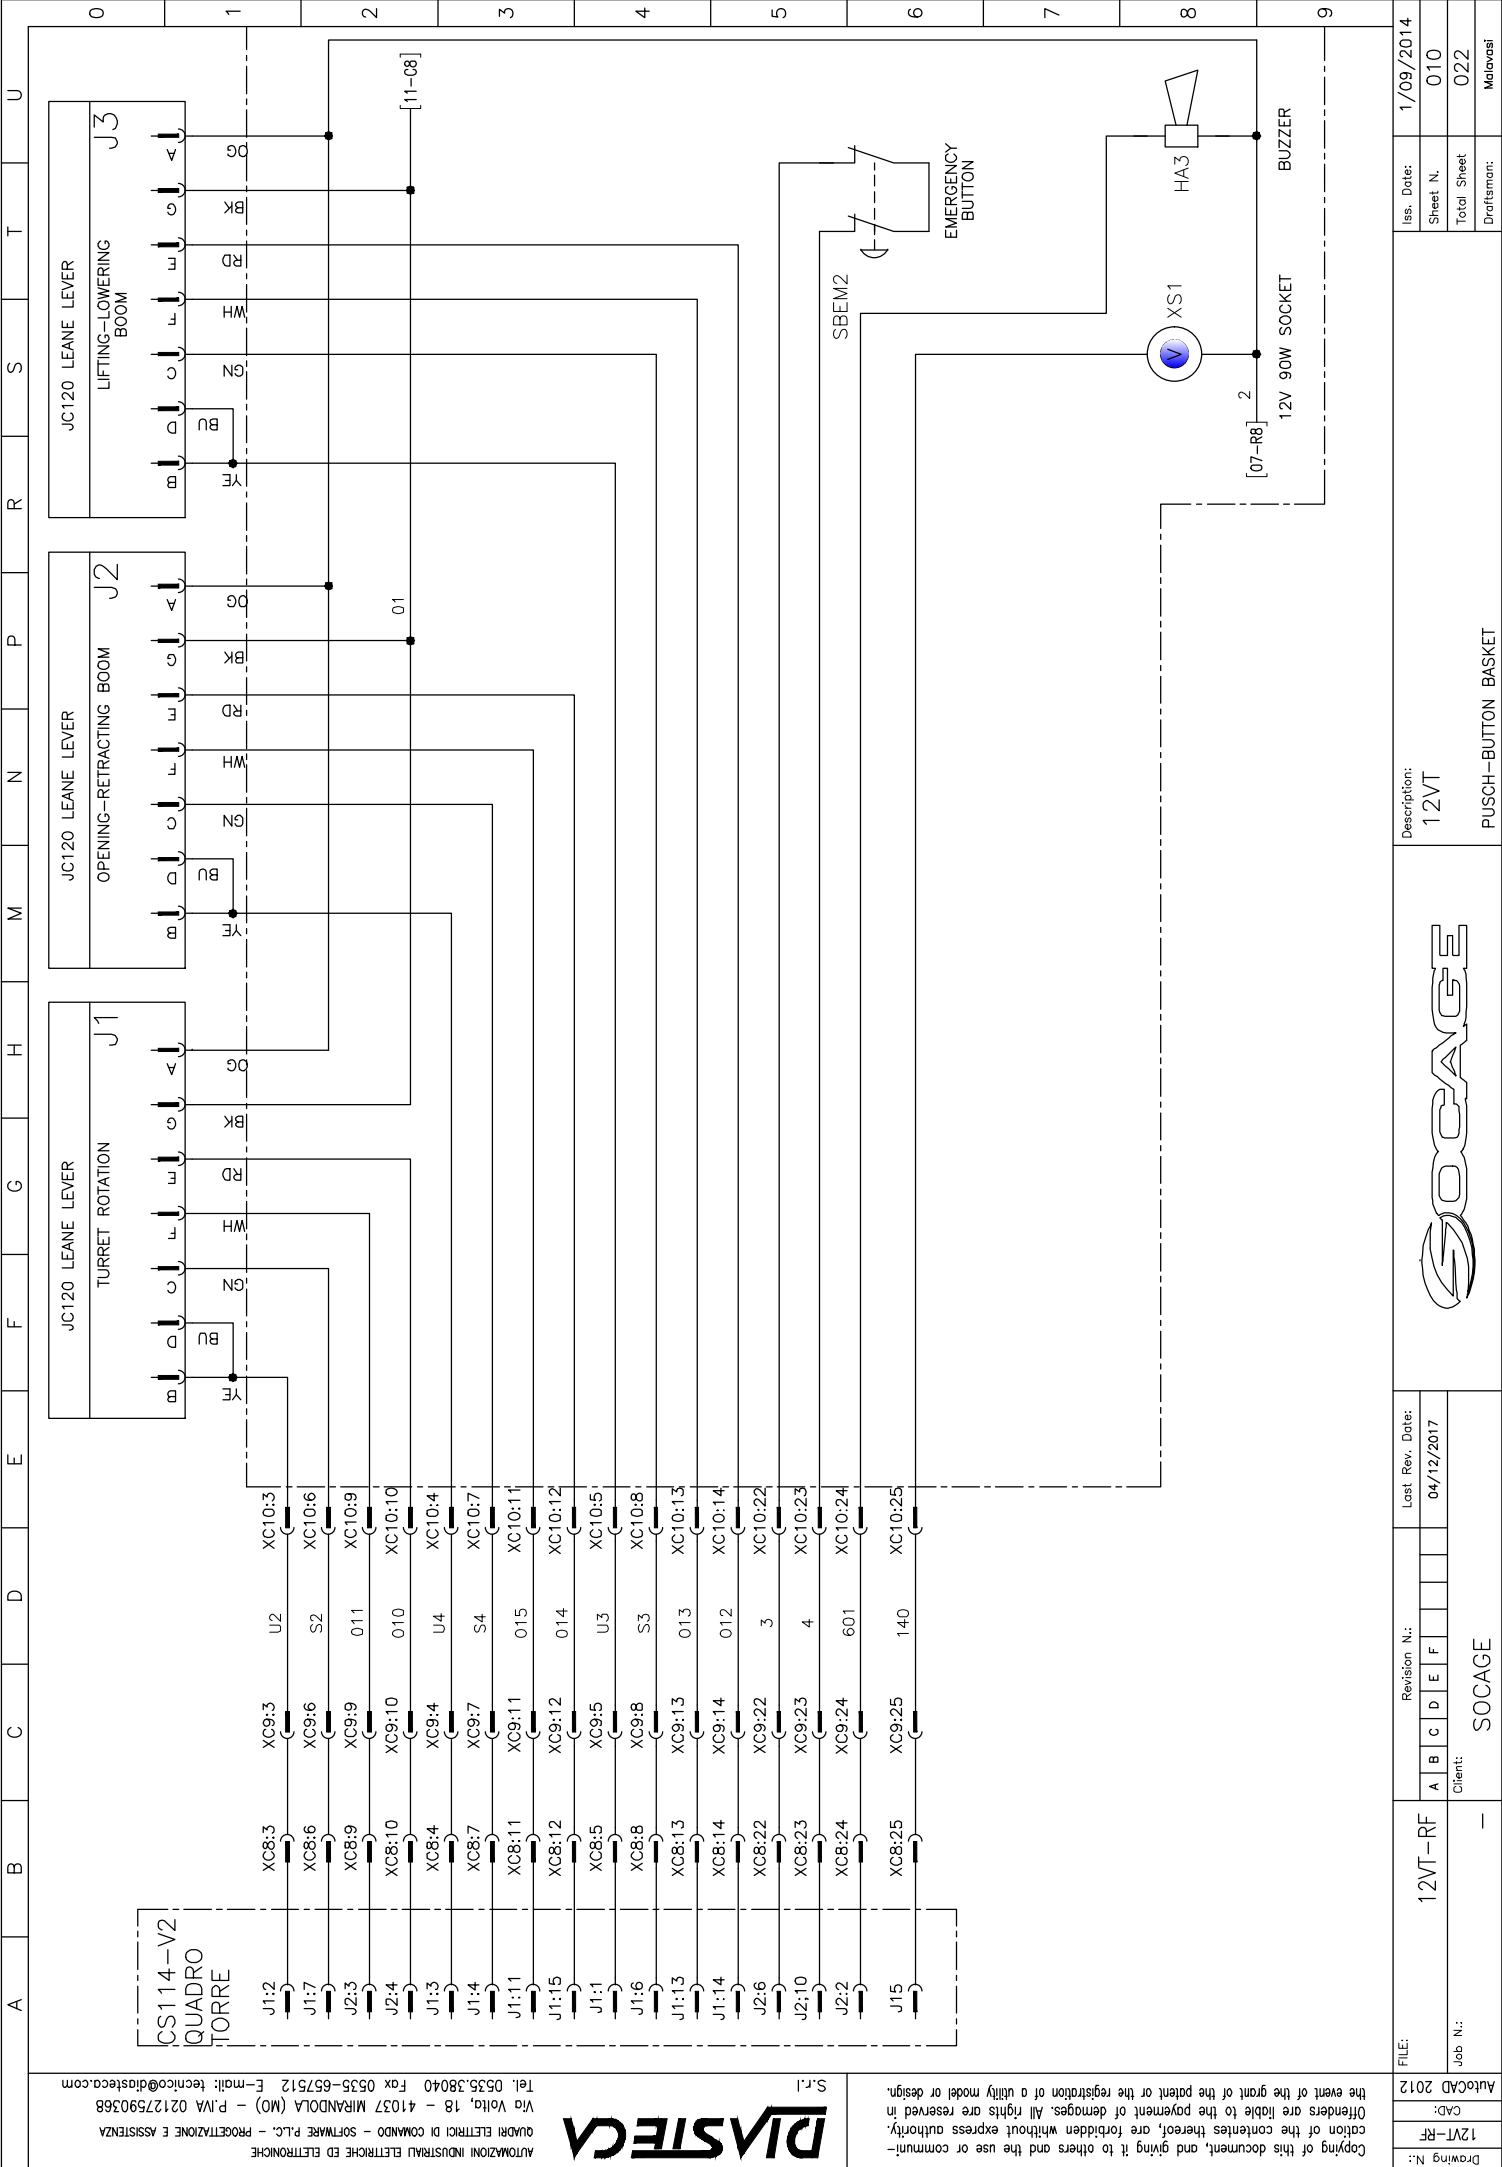


QUADRI ELETTRICI DI COMANDO - SOFTWARE P.L.C. - PROGETTAZIONE E ASSISTENZA
AUTOMAZIONI INDUSTRIALI ELETTRICHE ED ELETTRONICHE
Via Voito, 18 - 41037 MIRANDOLA (MO) - P.IVA 02127590368
Tel. 0535.38040 Fax 0535-657512 E-mail: tecnico@diasteca.com

DIASTECA
S.r.l.

Copying of this document, and giving it to others and the use or communication of the contents thereof, are forbidden without express authority. Offenders are liable to the payment of damages. All rights are reserved in the event of the grant of the patent or the registration of a utility model or design.

Drawing N.:		12VT-RF		CAD:		AutoCAD 2012		FILE:										12VT-RF										Revision N.:										Last Rev. Date:										04/12/2017																				Description: 12VT										Iss. Date: 1/09/2014																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																															
Job N.:		—						A		B		C		D		E		F														Sheet N.:		010		Total Sheet		022																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																							
																																				Draftsman:		Malvasi																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																																							

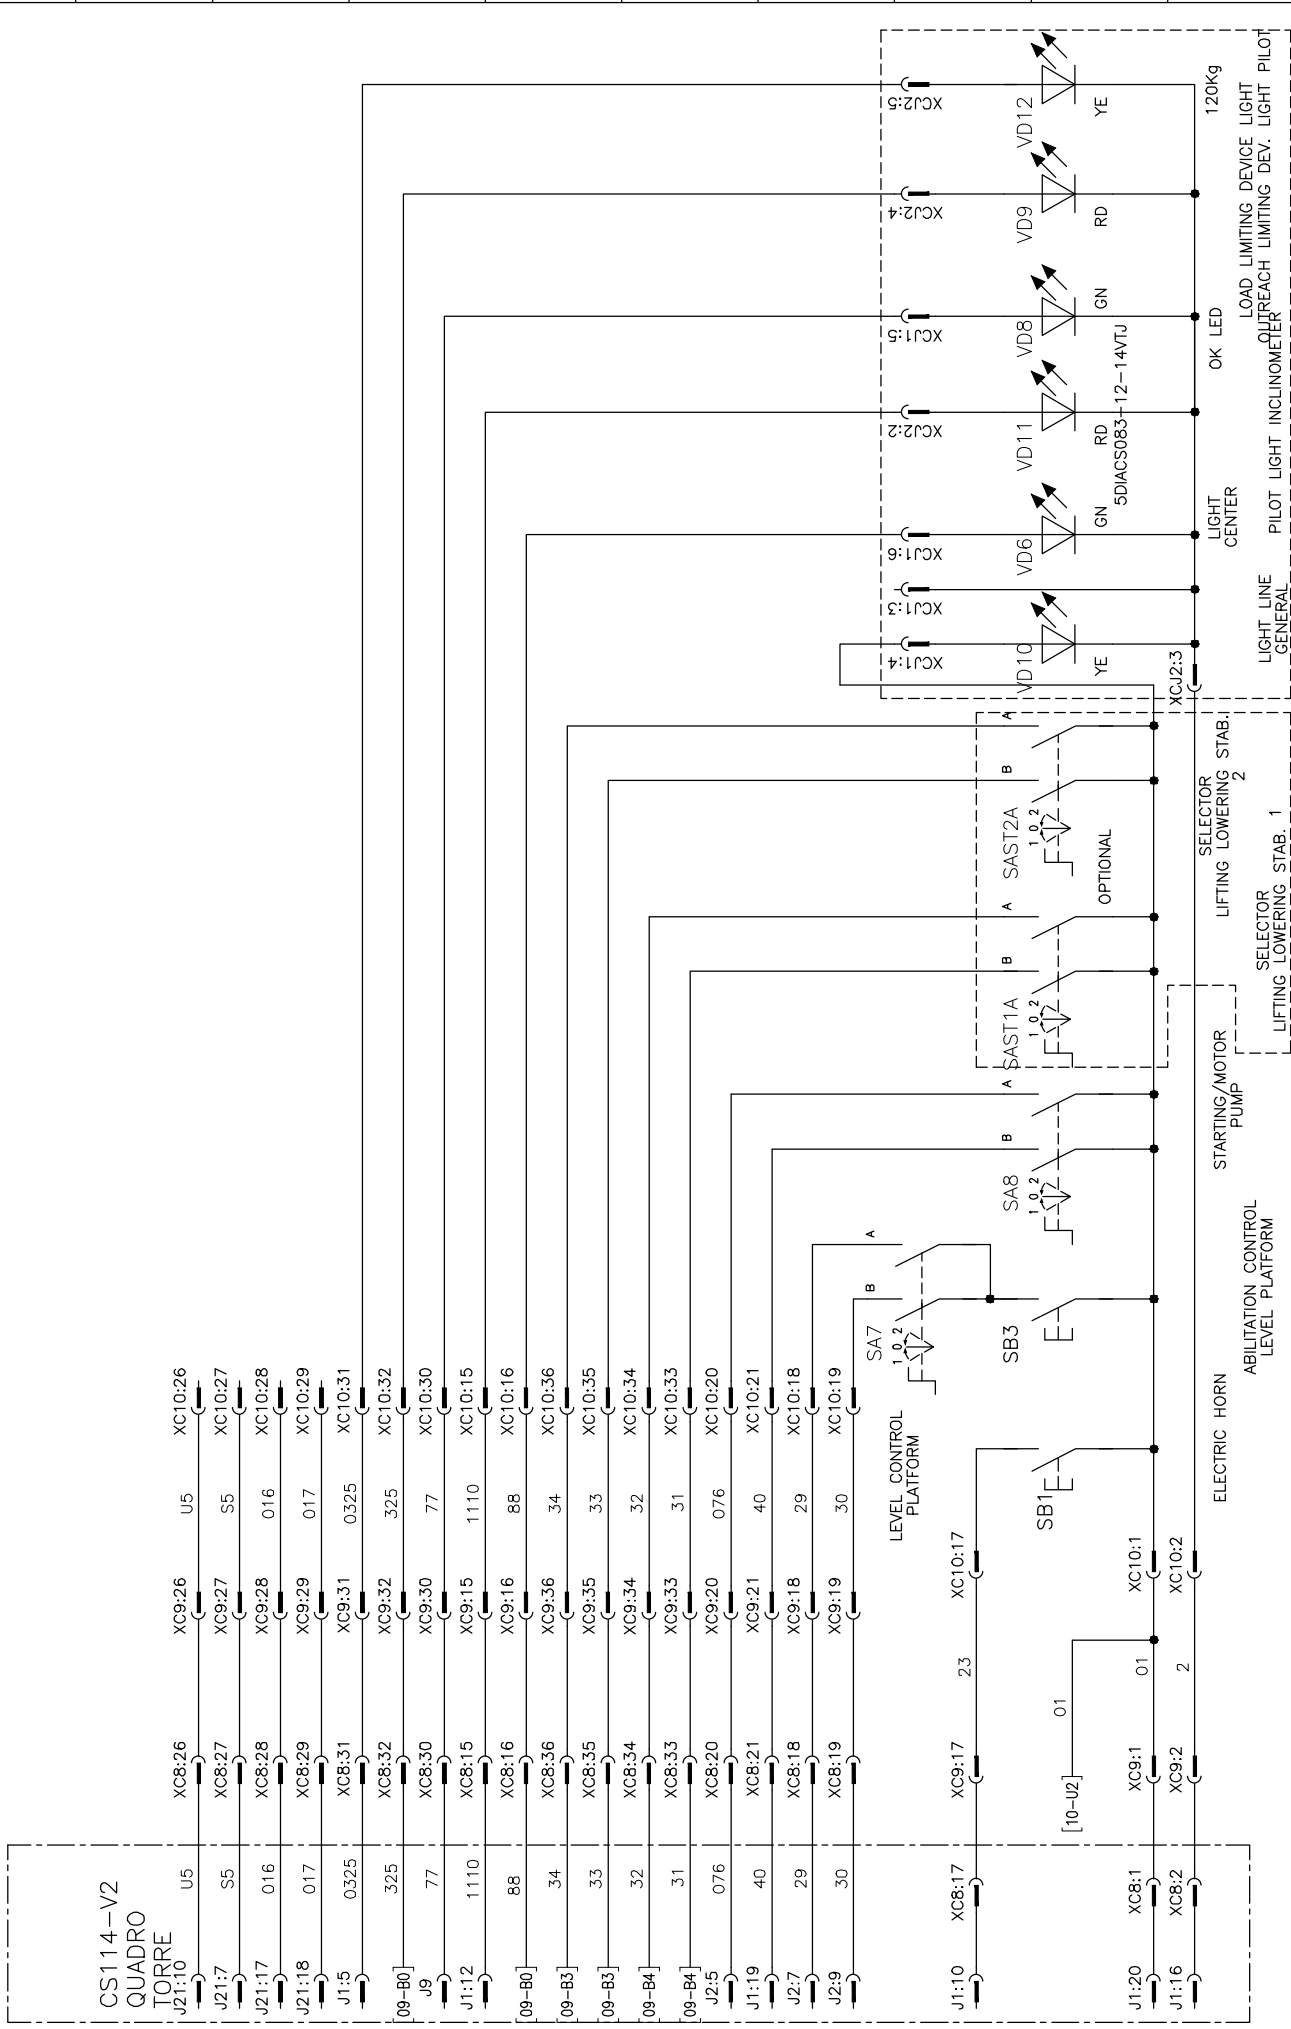


AUTOMAZIONI INDUSTRIALI ELETTRICHE ED ELETTRONICHE QUADRI ELETTRICI DI COMANDO - SOFTWARE P.L.C. - PROGETTAZIONE E ASSISTENZA Via Volta, 18 - 41037 MIRANDOLA (MO) - P.IVA 02127590368 Tel. 0535.38040 Fax 0535-657512 E-mail: tecnico@diasteca.com										S.r.l DIASTECA										AutocAD 2012 CAD: 12VT-RF Drawing N.: - Client: SOCAGE 12VT-RF Last Rev. Date: 04/12/2017 Revision N.: A B C D E F FILE: 12VT-RF										Description: 12VT CONNECTORS 1/09/2014 Iss. Date: Sheet N. 012 Total Sheet 022 Draftsman: Malvasi										U T S R P N M H G F E D C B A																																																																																																																																																															
XC1 <table><tr><td>Pin</td><td>Wire</td><td>Description</td><td>Pos.</td></tr><tr><td>1</td><td>76</td><td>B+</td><td>4-T1</td></tr><tr><td>2</td><td>97</td><td>TRANSPORT POSITION SIGNAL</td><td>4-T1</td></tr><tr><td>3</td><td>40</td><td>ENGINE START</td><td>4-T2</td></tr><tr><td>4</td><td>53</td><td>ENGINE WT OUT</td><td>4-T7</td></tr><tr><td>5</td><td>02</td><td>ALTERNATOR D+</td><td>4-T6</td></tr><tr><td>6</td><td>76</td><td>B+</td><td>4-T2</td></tr></table>										Pin	Wire	Description	Pos.	1	76	B+	4-T1	2	97	TRANSPORT POSITION SIGNAL	4-T1	3	40	ENGINE START	4-T2	4	53	ENGINE WT OUT	4-T7	5	02	ALTERNATOR D+	4-T6	6	76	B+	4-T2	XC1A <table><tr><td>Pin</td><td>Wire</td><td>Description</td><td>Pos.</td></tr><tr><td>1</td><td>820</td><td>WARNING OPEN MACHINE</td><td>4-T6</td></tr><tr><td>2</td><td>12V</td><td>IGNITION</td><td>4-T0</td></tr><tr><td>3</td><td>23</td><td>ELECTRIC HORN</td><td>4-T3</td></tr><tr><td>4</td><td>2</td><td>NEGATIVE</td><td>4-T8</td></tr></table>										Pin	Wire	Description	Pos.	1	820	WARNING OPEN MACHINE	4-T6	2	12V	IGNITION	4-T0	3	23	ELECTRIC HORN	4-T3	4	2	NEGATIVE	4-T8	XC44 <table><tr><td>Pin</td><td>Wire</td><td>Description</td><td>Pos.</td></tr><tr><td>XC44:A</td><td>43</td><td>NOT USED</td><td>9-B9</td></tr><tr><td>XC44:B</td><td>5</td><td>EMERGENCY</td><td>9-B3</td></tr><tr><td>XC44:C</td><td>12V</td><td>IGNITION</td><td>9-B8</td></tr><tr><td>XC44:D</td><td>1110</td><td>PILOT LIGHT INCLINOMETER</td><td>9-B1</td></tr><tr><td>XC44:E</td><td>10</td><td>ROTAT.CKW TURRET</td><td>9-B7</td></tr><tr><td>XC44:F</td><td>11</td><td>ROTAT.ACKW TURRET</td><td>9-B6</td></tr><tr><td>XC44:G</td><td>12</td><td>LIFT BOOM</td><td>9-B6</td></tr><tr><td>XC44:H</td><td>13</td><td>LOWER BOOM</td><td>9-B6</td></tr><tr><td>XC44:J</td><td>14</td><td>OPENING BOOM</td><td>9-B7</td></tr><tr><td>XC44:K</td><td>15</td><td>RETRACTING BOOM</td><td>9-B7</td></tr><tr><td>XC44:L</td><td>29</td><td>LOWERING LEVEL</td><td>9-B5</td></tr><tr><td>XC44:M</td><td>30</td><td>LIFTING LEVEL</td><td>9-B6</td></tr><tr><td>XC44:N</td><td>001</td><td>ABULIT.TURRET CONTROL</td><td>9-B9</td></tr><tr><td>XC44:P</td><td>076</td><td>ELECTRIC-PUMP START</td><td>9-B5</td></tr><tr><td>XC44:R</td><td>40</td><td>TRUCK START</td><td>9-B5</td></tr><tr><td>XC44:S</td><td>3</td><td>EMERGENCY</td><td>9-B2</td></tr><tr><td>XC44:T</td><td>2</td><td>NEGATIVE</td><td>9-B2</td></tr><tr><td>XC44:U</td><td>16</td><td>LIFTING JIB</td><td>9-B3</td></tr><tr><td>XC44:V</td><td>17</td><td>LOWERING JIB</td><td>9-B3</td></tr><tr><td>XC44:W</td><td>77</td><td>OK LED</td><td>9-B0</td></tr><tr><td>XC44:X</td><td>0325</td><td>LOAD LIMITING DEVICE LIGHT</td><td>9-B0</td></tr><tr><td>XC44:Y</td><td>325</td><td>OUTREACH LIMITING DEV. LIGHT PILOT</td><td>9-B0</td></tr><tr><td>XC44:Z</td><td>31</td><td>STABILIZ.1 UP</td><td>9-B4</td></tr><tr><td>XC44:a</td><td>32</td><td>STABILIZ.1 DOWN</td><td>9-B4</td></tr><tr><td>XC44:b</td><td>33</td><td>STABILIZ.2 UP</td><td>9-B4</td></tr><tr><td>XC44:c</td><td>34</td><td>STABILIZ.2 DOWN</td><td>9-B3</td></tr><tr><td>XC44:d</td><td>88</td><td>LIGHT CENTER</td><td>9-B1</td></tr></table>										Pin	Wire	Description	Pos.	XC44:A	43	NOT USED	9-B9	XC44:B	5	EMERGENCY	9-B3	XC44:C	12V	IGNITION	9-B8	XC44:D	1110	PILOT LIGHT INCLINOMETER	9-B1	XC44:E	10	ROTAT.CKW TURRET	9-B7	XC44:F	11	ROTAT.ACKW TURRET	9-B6	XC44:G	12	LIFT BOOM	9-B6	XC44:H	13	LOWER BOOM	9-B6	XC44:J	14	OPENING BOOM	9-B7	XC44:K	15	RETRACTING BOOM	9-B7	XC44:L	29	LOWERING LEVEL	9-B5	XC44:M	30	LIFTING LEVEL	9-B6	XC44:N	001	ABULIT.TURRET CONTROL	9-B9	XC44:P	076	ELECTRIC-PUMP START	9-B5	XC44:R	40	TRUCK START	9-B5	XC44:S	3	EMERGENCY	9-B2	XC44:T	2	NEGATIVE	9-B2	XC44:U	16	LIFTING JIB	9-B3	XC44:V	17	LOWERING JIB	9-B3	XC44:W	77	OK LED	9-B0	XC44:X	0325	LOAD LIMITING DEVICE LIGHT	9-B0	XC44:Y	325	OUTREACH LIMITING DEV. LIGHT PILOT	9-B0	XC44:Z	31	STABILIZ.1 UP	9-B4	XC44:a	32	STABILIZ.1 DOWN	9-B4	XC44:b	33	STABILIZ.2 UP	9-B4	XC44:c	34	STABILIZ.2 DOWN	9-B3	XC44:d	88	LIGHT CENTER	9-B1	CABLE CABLE									
Pin	Wire	Description	Pos.																																																																																																																																																																																																				
1	76	B+	4-T1																																																																																																																																																																																																				
2	97	TRANSPORT POSITION SIGNAL	4-T1																																																																																																																																																																																																				
3	40	ENGINE START	4-T2																																																																																																																																																																																																				
4	53	ENGINE WT OUT	4-T7																																																																																																																																																																																																				
5	02	ALTERNATOR D+	4-T6																																																																																																																																																																																																				
6	76	B+	4-T2																																																																																																																																																																																																				
Pin	Wire	Description	Pos.																																																																																																																																																																																																				
1	820	WARNING OPEN MACHINE	4-T6																																																																																																																																																																																																				
2	12V	IGNITION	4-T0																																																																																																																																																																																																				
3	23	ELECTRIC HORN	4-T3																																																																																																																																																																																																				
4	2	NEGATIVE	4-T8																																																																																																																																																																																																				
Pin	Wire	Description	Pos.																																																																																																																																																																																																				
XC44:A	43	NOT USED	9-B9																																																																																																																																																																																																				
XC44:B	5	EMERGENCY	9-B3																																																																																																																																																																																																				
XC44:C	12V	IGNITION	9-B8																																																																																																																																																																																																				
XC44:D	1110	PILOT LIGHT INCLINOMETER	9-B1																																																																																																																																																																																																				
XC44:E	10	ROTAT.CKW TURRET	9-B7																																																																																																																																																																																																				
XC44:F	11	ROTAT.ACKW TURRET	9-B6																																																																																																																																																																																																				
XC44:G	12	LIFT BOOM	9-B6																																																																																																																																																																																																				
XC44:H	13	LOWER BOOM	9-B6																																																																																																																																																																																																				
XC44:J	14	OPENING BOOM	9-B7																																																																																																																																																																																																				
XC44:K	15	RETRACTING BOOM	9-B7																																																																																																																																																																																																				
XC44:L	29	LOWERING LEVEL	9-B5																																																																																																																																																																																																				
XC44:M	30	LIFTING LEVEL	9-B6																																																																																																																																																																																																				
XC44:N	001	ABULIT.TURRET CONTROL	9-B9																																																																																																																																																																																																				
XC44:P	076	ELECTRIC-PUMP START	9-B5																																																																																																																																																																																																				
XC44:R	40	TRUCK START	9-B5																																																																																																																																																																																																				
XC44:S	3	EMERGENCY	9-B2																																																																																																																																																																																																				
XC44:T	2	NEGATIVE	9-B2																																																																																																																																																																																																				
XC44:U	16	LIFTING JIB	9-B3																																																																																																																																																																																																				
XC44:V	17	LOWERING JIB	9-B3																																																																																																																																																																																																				
XC44:W	77	OK LED	9-B0																																																																																																																																																																																																				
XC44:X	0325	LOAD LIMITING DEVICE LIGHT	9-B0																																																																																																																																																																																																				
XC44:Y	325	OUTREACH LIMITING DEV. LIGHT PILOT	9-B0																																																																																																																																																																																																				
XC44:Z	31	STABILIZ.1 UP	9-B4																																																																																																																																																																																																				
XC44:a	32	STABILIZ.1 DOWN	9-B4																																																																																																																																																																																																				
XC44:b	33	STABILIZ.2 UP	9-B4																																																																																																																																																																																																				
XC44:c	34	STABILIZ.2 DOWN	9-B3																																																																																																																																																																																																				
XC44:d	88	LIGHT CENTER	9-B1																																																																																																																																																																																																				

Copying of this document, and giving it to others and the use or communication of the contents thereof, are forbidden without express authority. Offenders are liable to the payment of damages. All rights are reserved in the event of the grant of the patent or the registration of a utility model or design.

S.r.l

DLVSTEC

AUTOMAZIONI INDUSTRIALI ELETTRICHE ED ELETTRONICHE
QUADRI ELETTRICI DI COMANDO - SOFTWARE P.L.C. - PROGETTAZIONE E ASSISTENZA
VIA VOLTA, 18 - 41037 MIRANDOLA (MO) - P.IVA 02127590368
Tel. 0535.38040 Fax 0535-657512 E-mail: tecnico@diasteca.com

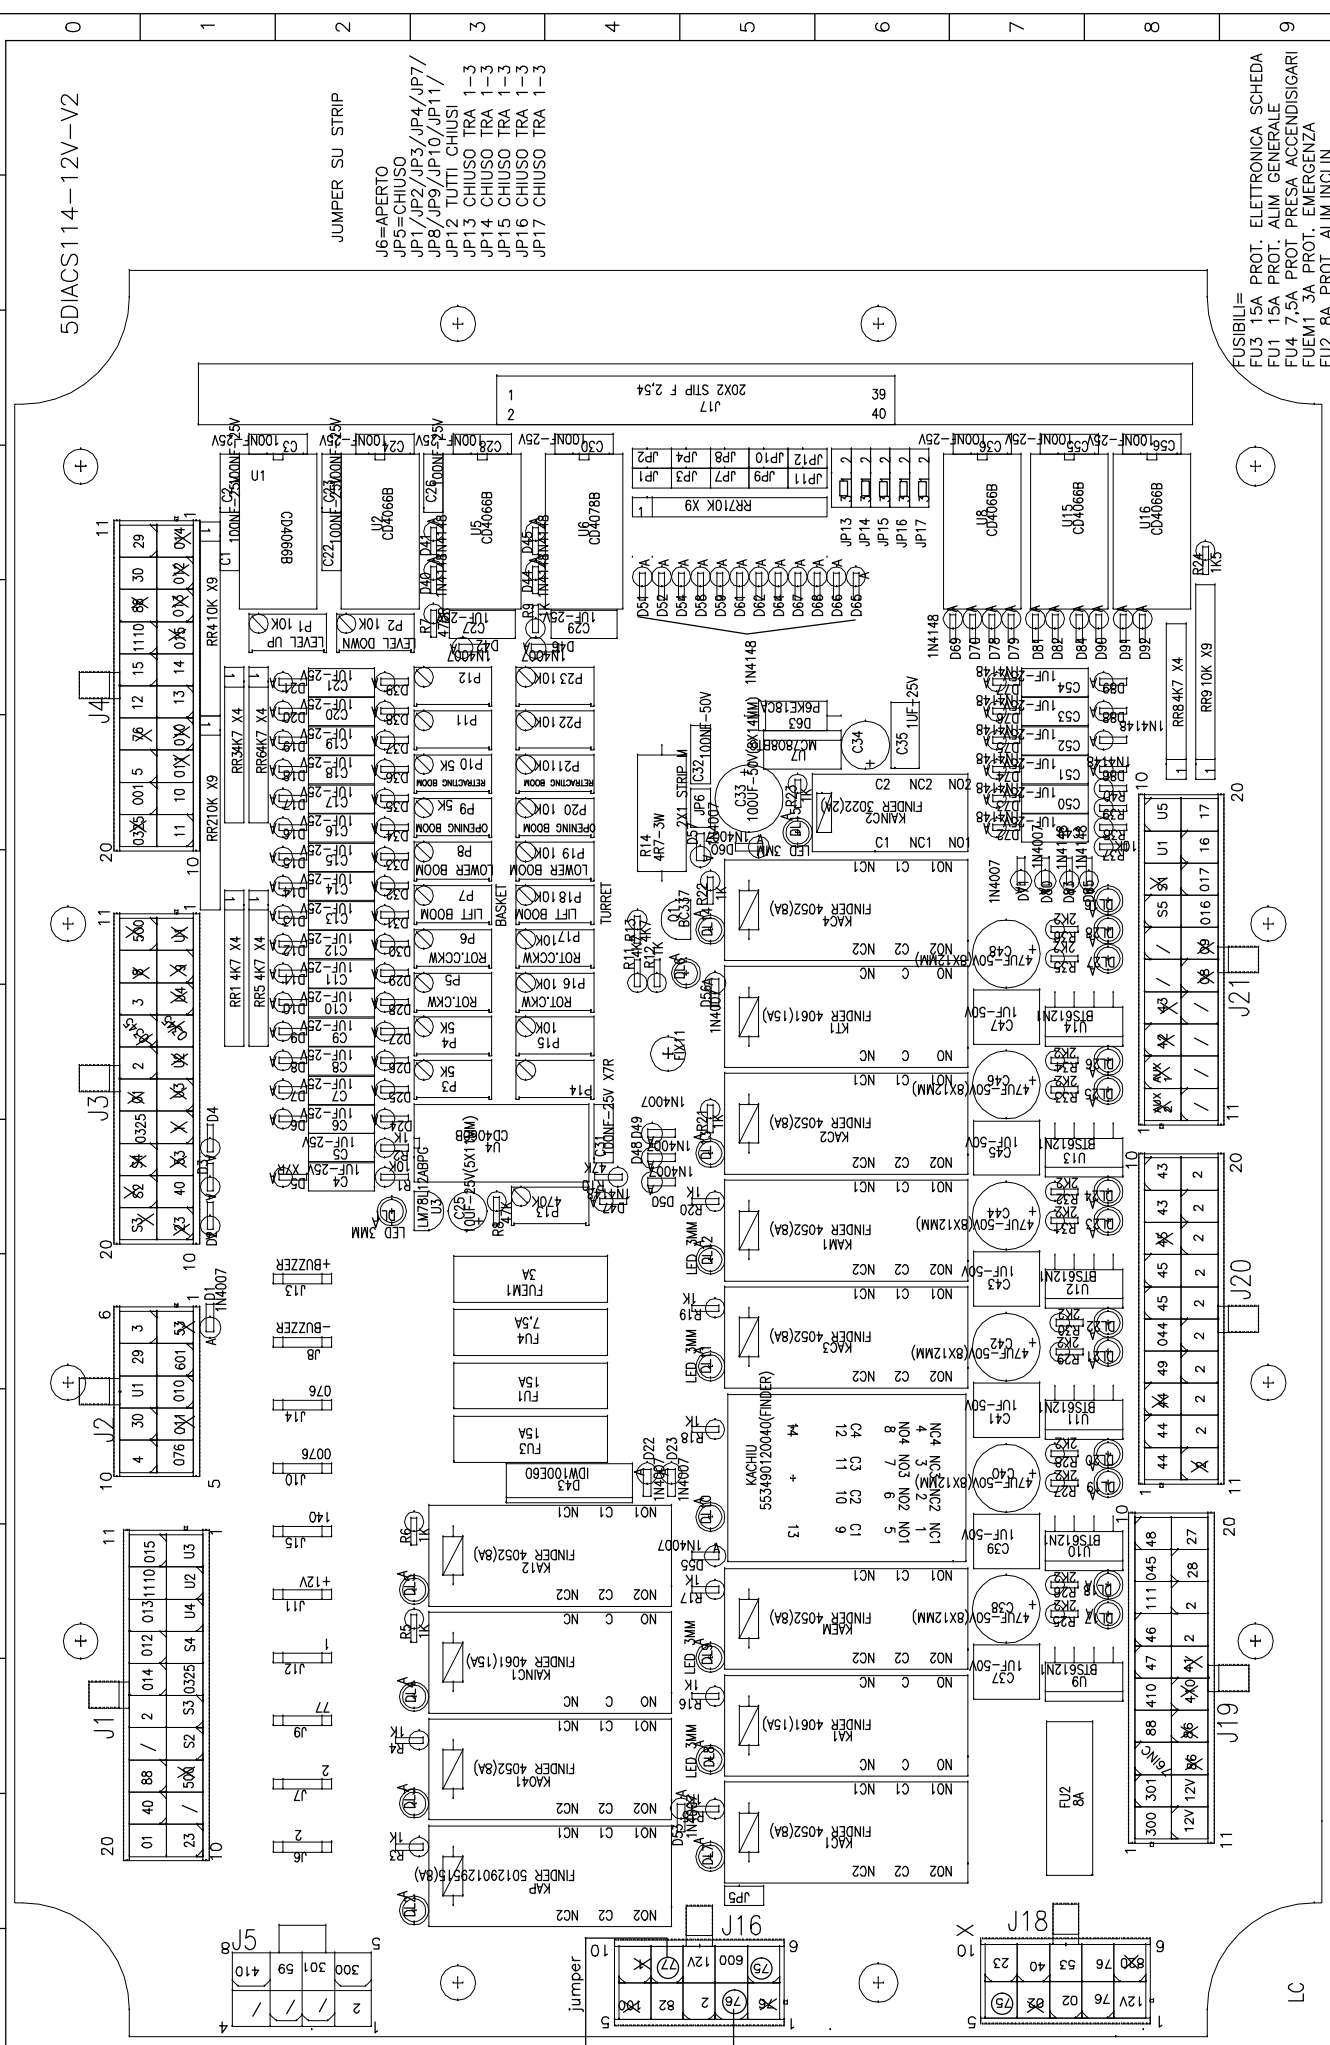

A B C D E F G H M N P R S T U														
0														
1														
2														
3														
4														
5														
6														
7														
8														
9														
Tag	Pos.	Locat.	Q.ty	Code	Italian Description	English Description	Type	Factory						
HA1	4-T7		1	1CMPNBH06610	CICALINO MONOTONO (INTERMITTENZA LENTA)	3-28VCC	NBH06610							
SA2	4-C2		1	1TELZB5AD2	TESTA X SELETTORE A LEVA NERA 2POS.FISSE	HEAD X BK LEVER SELECTOR,2FIXED POS	ZB5AD2							
KACIC	5-S2		1	1UPE289677.30CS	RELAIS 12V 10/20A IVECO		289677.30CS	UPEM						
SR23	5-H6		1	1TELXCMN2115L1	FINECO/LEVA ROTELLA IN PLA 1N01NC CAV1M	LEVER LimitSWITCH+PLAST WHEEL,1N01NC C1M	XCMN2115L1							
SR24	5-F6		1	1TELXCMN2115L1	FINECO/LEVA ROTELLA IN PLA 1N01NC CAV1M	LEVER LimitSWITCH+PLAST WHEEL,1N01NC C1M	XCMN2115L1							
SR42B	5-O6		1	1TELXCMN2115L1	FINECO/LEVA ROTELLA IN PLA 1N01NC CAV1M	LEVER LimitSWITCH+PLAST WHEEL,1N01NC C1M	XCMN2115L1							
SR43B	5-D6		1	1TELXCMN2115L1	FINECO/LEVA ROTELLA IN PLA 1N01NC CAV1M	LEVER LimitSWITCH+PLAST WHEEL,1N01NC C1M	XCMN2115L1							
KA041	6-B2		1	1UPE289677.30CS	RELAIS 12V 10/20A IVECO		289677.30CS	UPEM						
KA1D	6-R3		1	1UPE289677.30CS	RELAIS 12V 10/20A IVECO		289677.30CS	UPEM						
KA1S	6-P3		1	1UPE289677.30CS	RELAIS 12V 10/20A IVECO		289677.30CS	UPEM						
KA2D	6-T3		1	1UPE289677.30CS	RELAIS 12V 10/20A IVECO		289677.30CS	UPEM						
KA2S	6-S3		1	1UPE289677.30CS	RELAIS 12V 10/20A IVECO		289677.30CS	UPEM						
KACHIU	6-P3		1	1UPE289677.30CS	RELAIS 12V 10/20A IVECO		289677.30CS	UPEM						
YV1	6-A7	+P2	1	1DELS18209TC321	CONNETT.ELETTROV.TRASP.24VCC C3DIODO+LED	TRASP.CONNEC -ELEC FAN,24VCC C3DIODE+LED	S18209TC321	DELCO						
YV1D	6-G7	+P2	1	1DELS18209TC321	CONNETT.ELETTROV.TRASP.24VCC C3DIODO+LED	TRASP.CONNEC -ELEC FAN,24VCC C3DIODE+LED	S18209TC321	DELCO						
YV1S	6-E7	+P2	1	1DELS18209TC321	CONNETT.ELETTROV.TRASP.24VCC C3DIODO+LED	TRASP.CONNEC -ELEC FAN,24VCC C3DIODE+LED	S18209TC321	DELCO						
YV2D	6-M7	+P2	1	1DELS18209TC321	CONNETT.ELETTROV.TRASP.24VCC C3DIODO+LED	TRASP.CONNEC -ELEC FAN,24VCC C3DIODE+LED	S18209TC321	DELCO						
YV2S	6-H7	+P2	1	1DELS18209TC321	CONNETT.ELETTROV.TRASP.24VCC C3DIODO+LED	TRASP.CONNEC -ELEC FAN,24VCC C3DIODE+LED	S18209TC321	DELCO						
YVEM1	6-D7	+P2	1	1DELS18209TC321	CONNETT.ELETTROV.TRASP.24VCC C3DIODO+LED	TRASP.CONNEC -ELEC FAN,24VCC C3DIODE+LED	S18209TC321	DELCO						
SQ1	7-S7	+A3	1	1DEL12FA4N2550S	CONNETTORE 4 POLI 90 GRADI + CAVO		12FA4N2550S	DELCO						
SQR2	7-N7		1	10MRE2A-M18KN16-WP-B	SENSORE PROSSIMITA' M18 CAVO 2MT	PROXIMITY SENSOR M18 CABLE 2M	E2A-M18KN16-WP-B	OMRON						
VPOL	7-F7		1	1FABVPOL	REGOLATORE ELETTRONICO PER CONTROLLO VP		PVPOL	FABER						
			1	1FN9026SMA	ZOCOLO CON MORSETTI A PIASTRA (OCTAL)	BASE WITH PLATE TERMINAL (OCTAL)	9026SMA	FINDER						
XC3	7-N8	+B2	1	1AMP282106/1	CONNETTORE PORTA MASCHI 4 POLI SUPER SEA	L	282106/1	AMP						
		+B2	1	1AMP282088/1	CONNETTORE PORTA FEMMINA 4 POLI SUPER SE	AL	282088/1	AMP						
		+B2	1	1AMPCOP75554	CUFFIA 4 POLI SUPER SEAL		COP75554	AMP						
YVB1	8-E6		1	1DELS18209TC321	CONNETT.ELETTROV.TRASP.24VCC C3DIODO+LED	TRASP.CONNEC -ELEC FAN,24VCC C3DIODE+LED	S18209TC321	DELCO						
YVB2	8-G6		1	1DELS18209TC321	CONNETT.ELETTROV.TRASP.24VCC C3DIODO+LED	TRASP.CONNEC -ELEC FAN,24VCC C3DIODE+LED	S18209TC321	DELCO						
YVBEM	8-R6		1	1DELS18209TC321	CONNETT.ELETTROV.TRASP.24VCC C3DIODO+LED	TRASP.CONNEC -ELEC FAN,24VCC C3DIODE+LED	S18209TC321	DELCO						
YVEM	8-T6		1	1DELS18209TC321	CONNETT.ELETTROV.TRASP.24VCC C3DIODO+LED	TRASP.CONNEC -ELEC FAN,24VCC C3DIODE+LED	S18209TC321	DELCO						

Drawing N.:	12VT-RF	Revision N.:										Last Rev. Date:			Description:			Iss. Date:	1/09/2014
	CAD:	A	B	C	D	E	F								12VT			Sheet N.:	019
	Client:	SOCAGE													LIST OF MATERIAL			Total Sheet	022
	Job N.:	-																Draftsman:	Malovasi

A B C D E F G H M N P R S T U														
0														
1														
2														
3														
4														
5														
6														
7														
8														
9														
Tag	Pos.	Locat.	Q.ty	Code	Italian Description	English Description	Type	Factory						
YVL1	8-M6		1	1DELS18209TC321	CONNETT.ELETTROV.TRASP.24VCC C3DIODO+LED	TRASP.CONNEC -ELEC FAN.24VCC C3DIODE+LED	S18209TC321	DELCO						
YVL2	8-N6		1	1DELS18209TC321	CONNETT.ELETTROV.TRASP.24VCC C3DIODO+LED	TRASP.CONNEC -ELEC FAN.24VCC C3DIODE+LED	S18209TC321	DELCO						
YVPIS	8-S6		1	1DELCT18309N21	CONNETTORE ELETTROVALVOLA 3P+T	CONNECTOR -ELECTRIC FAN.3P+H	C18309N21	DELCO						
YVR1	8-D6		1	1DELS18209TC321	CONNETT.ELETTROV.TRASP.24VCC C3DIODO+LED	TRASP.CONNEC -ELEC FAN.24VCC C3DIODE+LED	S18209TC321	DELCO						
YVR2	8-C6		1	1DELS18209TC321	CONNETT.ELETTROV.TRASP.24VCC C3DIODO+LED	TRASP.CONNEC -ELEC FAN.24VCC C3DIODE+LED	S18209TC321	DELCO						
YVT1	8-A6		1	1DELS18209TC321	CONNETT.ELETTROV.TRASP.24VCC C3DIODO+LED	TRASP.CONNEC -ELEC FAN.24VCC C3DIODE+LED	S18209TC321	DELCO						
YVT2	8-H6		1	1DELS18209TC321	CONNETT.ELETTROV.TRASP.24VCC C3DIODO+LED	TRASP.CONNEC -ELEC FAN.24VCC C3DIODE+LED	S18209TC321	DELCO						
SA1	9-C8		1	1APE637H	COMMUTATORE LEVA 1 SCAMBI FASTON		637H	APEM						
			1	10MEIU0600	MEZZA PROTEZIONE DADO 600H/660/1000 NEOP	RENE NERO+DADO NERO	IU0600							
SA2	9-E8		1	1APE637H	COMMUTATORE LEVA 1 SCAMBI FASTON		637H	APEM						
			1	10MEIU0600	MEZZA PROTEZIONE DADO 600H/660/1000 NEOP	RENE NERO+DADO NERO	IU0600							
SA3	9-F8		1	1APE647H	COMMUTATORE LEVA 2 SCAMBI FASTON 1-O-2(C	F.DA 25PZ)	647H	APEM						
SA4	9-M8		1	1APE637H	COMMUTATORE LEVA 1 SCAMBI FASTON		637H	APEM						
			1	10MEIU0600	MEZZA PROTEZIONE DADO 600H/660/1000 NEOP	RENE NERO+DADO NERO	IU0600							
SA5	9-H8		1	1APE637H	COMMUTATORE LEVA 1 SCAMBI FASTON		637H	APEM						
			1	10MEIU0600	MEZZA PROTEZIONE DADO 600H/660/1000 NEOP	RENE NERO+DADO NERO	IU0600							
SA6	9-S8		1	1APE637H	COMMUTATORE LEVA 1 SCAMBI FASTON		637H	APEM						
			1	10MEIU0600	MEZZA PROTEZIONE DADO 600H/660/1000 NEOP	RENE NERO+DADO NERO	IU0600							
SAST1	9-N8		1	1APE637H	COMMUTATORE LEVA 1 SCAMBI FASTON		637H	APEM						
			1	10MEIU0600	MEZZA PROTEZIONE DADO 600H/660/1000 NEOP	RENE NERO+DADO NERO	IU0600							
SAST2	9-R8		1	1APE637H	COMMUTATORE LEVA 1 SCAMBI FASTON		637H	APEM						
			1	10MEIU0600	MEZZA PROTEZIONE DADO 600H/660/1000 NEOP	RENE NERO+DADO NERO	IU0600							
SB4	9-U6		1	1TELZB6Y009	BASE FLANGIA PER PULSANteria DIAMETRO 16	BASE FLANGE FOR BUTTON STRIP D.16	ZB6Y009							
			1	1TELZB6AGC	SELETTORE A CHIAVE DIAMETRO 16	KEY SELECTOR D. 16	ZB6AGC							
			1	1TELZB6E1B	ELEMENTO DI CONTATTO NO	CONTACT'S ELEMENT NO	ZB6E1B							
SB5	9-T7		1	1TELZB6AGL	SELET. A CHIAVE 2 POS. CON RITORNO AL		ZB6AGL							
			1	1TELZB6Y009	BASE FLANGIA PER PULSANteria DIAMETRO 16	BASE FLANGE FOR BUTTON STRIP D.16	ZB6Y009							
			1	1TELZB6E1B	ELEMENTO DI CONTATTO NO	CONTACT'S ELEMENT NO	ZB6E1B							
SBEM2	9-T3		1	1APE-A01ES	PULSANTE EMERGENZA A FUNGO DIAM.24 - FIX		A01ES	APEM						
			1	1APE-AC15-1.5A	INTERRUTTORE A PULSANTE X PULS.		AC15-1.5A							

Iss. Date:	1/09/2014
Sheet N.	020
Total Sheet	022
Draftsman:	Malavasi

Description:	
12VT	
LIST OF MATERIAL	



FILE:	12VT-RF	Revision N.:							Last Rev. Date:	
		A	B	C	D	E	F		04/12/2017	
Job N.:	—	Client:							SOCAGE	

Copying of this document, and giving it to others and the use or communication of the contents thereof, are forbidden without express authority. Offenders are liable to the payment of damages. All rights are reserved in the event of the grant of the patent or the registration of a utility model or design.



AUTOMAZIONI INDUSTRIALI ELETTRICHE ED ELETTRONICHE
 QUADRI ELETTRICI DI COMANDO - SOFTWARE P.L.C. - PROGETTAZIONE E ASSISTENZA
 VIA Volto, 18 - 41037 MIRANDOLA (MO) - P.IVA 02127590368
 Tel. 0535.38040 Fax 0535-657512 E-mail: tecnico@diasteca.com

A B C D E F G H M N P R S T U														
0														
1														
2														
3														
4														
5														
6														
7														
8														
9														
Tag	Pos.	Locat.	Q.ty	Code	Italian Description	English Description	Type	Factory						
HA3	10-U8		1	1CMPNBH06610	CICALINO MONOTONO (INTERMITTENZA LENTA)	3-28VCC	NBH06610							
SBEW2	10-T6		1	1TELZB4BS834	PULSANTE FUNGO EMERGENZA DIAM 30 METALLO	RD EMERGENCY MUSHROOM-HEAD PUSH BUT.D.30	ZB4BS834							
			1	1TELZB4BZ102	CORPO COMPLETO(FLANGIA+CONTATTO)1NC MET	COMPLETE CASING(FLANGE+CONTACT 1NC)METAL	ZB4BZ102							
			1	1TELZBE102	ELEM.CONTA.NC+COLLEG.VITE_SERRAFILO NC	CONTACT'S ELEM.NC+CONN.WITH CLAMP.SCREW	ZBE102							
XS1	10-S8		1	1MTA6811	PRESA MEMBERS ACCENDISIGARI C/COPIERCHIO	ELECTRIC LIGHTER MEMBERS TAP WITH CAP	6811	MTA						
SA7	11-F7		1	1NAIT115GA	COMMUTAT.LEVA 1 SC.FASTON 1-0-2 IMPULSO	LEVER COMMUTATOR 1-0-2IMPULSE	T115GA	NAIS						
			1	1NAITWD1911	CAPPUCCIO IN GOMMA PROTETTIVO X LEVE	CAP IN PROTECTIVE GUM FOR LEVER	TWD1911	NAIS						
SA8	11-G8		1	1NAIT115GA	COMMUTAT.LEVA 1 SC.FASTON 1-0-2 IMPULSO	LEVER COMMUTATOR 1-0-2IMPULSE	T115GA	NAIS						
			1	1NAITWD1911	CAPPUCCIO IN GOMMA PROTETTIVO X LEVE	CAP IN PROTECTIVE GUM FOR LEVER	TWD1911	NAIS						
SAST1A	11-M8		1	1APE637H	COMMUTATORE LEVA 1 SCAMBI FASTON		637H	APEM						
			1	1OMEIU0600	MEZZA PROTEZIONE DADO 600H/660/1000 NEOP	RENE NERO+DADO NERO	IU0600							
SAST2A	11-N8		1	1APE637H	COMMUTATORE LEVA 1 SCAMBI FASTON		637H	APEM						
			1	1OMEIU0600	MEZZA PROTEZIONE DADO 600H/660/1000 NEOP	RENE NERO+DADO NERO	IU0600							
XC1	12-A4		1	1AMPCOP76320	CUFFIA 6 POLI SUPER SEAL		COP76320	AMP						
			1	1AMP282090/1	CONNETTORE PORTA FEMMINE 6 POLI SUPER SE	AL	282090/1	AMP						
XC1A	12-C4		1	1AMPCOP75554	CUFFIA 4 POLI SUPER SEAL		COP75554	AMP						
			1	1AMP282088/1	CONNETTORE PORTA FEMMINA 4 POLI SUPER SE	AL	282088/1	AMP						
XC44	12-F4		1	1WDM1896800000	HDC4A16FT FEMMINA 16P+T MOLLA		1896800000	WEIDMULLER						
			1	1WDM1664690000	HDC16ATSLU1PG16G CUST.MOB. OUT.OR.		1664690000	WEIDMULLER						
			1	1WDM16507700000	HDC4A16MT MASCHIO 16+T (VITE)		16507700000	WEIDMULLER						
			1	1WDM1664920000	CUSTODIA FISSA 16 P. CHIUS.A SING.		1664920000	WEIDMULLER						
XC42	13-B4		1	1ILMGDDF42	FRUITTO FEMMINA 42P(CONTATTI A CRIMPARE)	FEMALE CONNECTOR 42P	CDDF42	ILME						
			1	1WDM1205000000	HB10AVU BASE		1205000000	WEIDMULLER						
			1	1ILMCDMM42	FRUITTO MASCHIO 42P (CONTATTI A CRIMPARE)	MALE CONNECTOR 42P	CDDM42	ILME						
			1	1WDM1654070000	HDC4B10TSVU1/16 CUST.MOB.OUT OR.PG16		1654070000	WEIDMULLER						
XC8	14-C4		1	1AMP182923/1	CONNETTORE VOLANTE 37 POLI FEMMINA CPC		182923/1	AMP						
			1	1AMP182926/1	CONNETTORE VOLANTE 37 POLI MASCHIO CPC		182926/1	AMP						
			36	1AMP66098/7/4K	CONTATTO MASCHIO ST. SEZ. 0,6-1,6MMQ(B)		66098/7/4K	AMP						
			36	1AMP66100/7/4K	CONTATTI FEMMINA STAGNATO SEZ.0,6-1,6MMQ	(B)	66100/7/4K	AMP						
			1	1AMP182652/1	CALOTTA 24-37 POLI BLOCCO SERRACAVO DIAM	.23 CPC	182652/1	AMP						

AUTOMAZIONI INDUSTRIALI ELETTRICHE ED ELETTRONICHE
 QUADRI ELETTRICI IN COMANDO - SOFTWARE P.L.C. - PROGETTAZIONE E ASSISTENZA
 Via Volto, 18 - - 41037 MIRANDOLA (MO) - P.IVA 02127590368
 Tel. 0535.38040 Fax 0535-657512 E-mail: tecnico@diasteca.com



Copying of this document, and giving it to others and the use or communi-
 cation of the contents thereof, are forbidden without express authority.
 Offenders are liable to the payment of damages. All rights are reserved in
 the event of the grant of the patent or the registration of a utility model or design.

Revision N.:										Last Rev. Date:			
A		B		C		D		E		F		04/12/2017	
Client:												SOCAGE	
12VT - RF												-	
Job N.:													
C/D:													
12VT - RF													
AutoCAD 2012													
													
Description: 12VT													
Iss. Date:													
Sheet N.													
Total Sheet													
Draftsman:													
LIST OF MATERIAL													
1/09/2014													
Malovasi													




***** CHAPTER 7 *****

MARKING

The documentation contained in this chapter is composed of
n° 8 pages, this included..

THIS CHAPTER CONTAINS MACHINE IDENTIFICATION, SAFETY AND UTILIZATION INSTRUCTION PLATES. IT IS COMPULSORY TO CHECK IF THESE PLATES ARE INTEGRAL AND CLEAR. Following to bringing up to date, some drawings, colours or text expressions could be modified; however, message meaning remains unchanged.

Marcatura

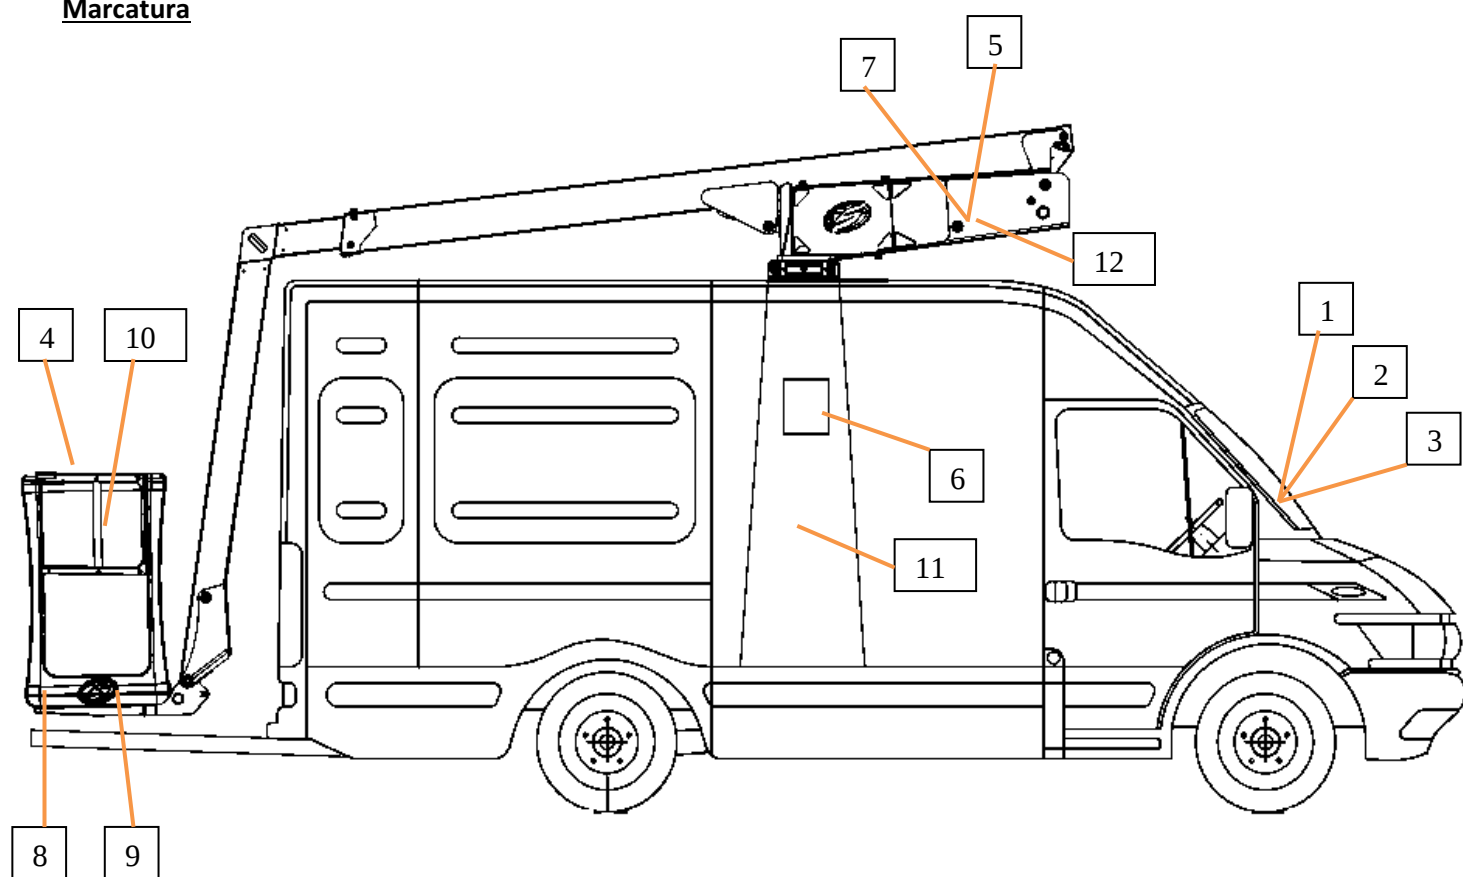



1




5

2


DISINSERIRE LA PRESA DI FORZA PRIMA DELLA MESSA IN MARCIA
 DECONNECTER LA PRISE DE FORCE AVANT DE LA MISE EN ROUTE
 DISCONNECT THE P.T.O. BEFORE STARTING UP
 SCHALTEN SIE DEN ABTRIEB AUS VOR DEN INBETRIEBNAHME
 DESACTIVAR LA TOMA DE FUERZA ANTES DE LA PUESTA EN MARCHA

N8900327

3

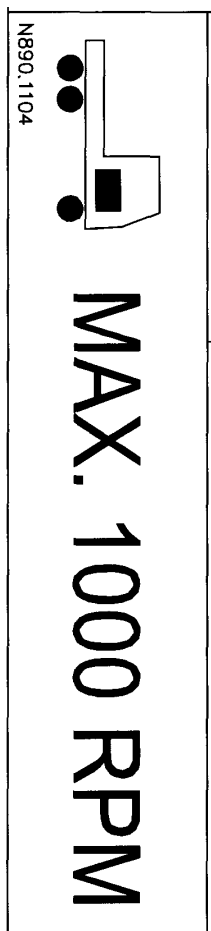

6

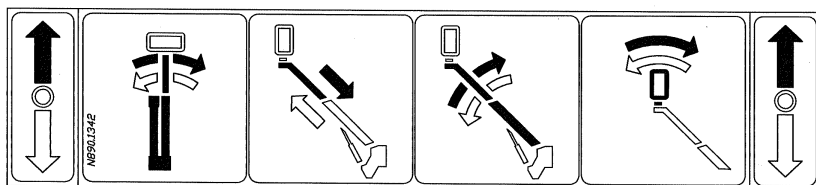

12

7



9


7



9 opt.




4

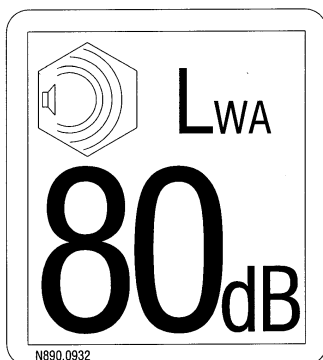

7



8

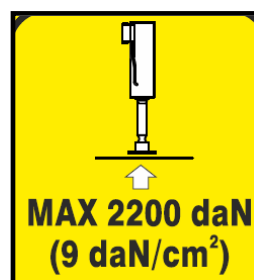

13opt

DISCESA D'EMERGENZA - EMERGENCY LOWERING - АВАРИЙНОЕ ОПУСКАНИЕ
DESCIDA DE EMERGENCIA - DESCENTE DE SECOURS - BAJADA DE EMERGENCIA - NOTSINKEN

DISCESA DI EMERGENZA
EMERGENCY LOWERING

N890.2109_A

11

Azionare contemporaneamente
Move alltogether
Støttebænkjøring
Actionner en même temps
Accionar simultáneamente
bedienen gleichzeitig
Нажимать одновременно

N8901977

14opt

N8902127

forSte 12VT

MAX 20 daN

**PORTATA MASSIMA
MAXIMUM CAPACITY
CHARGE MAXIMALE
CARGA MAXIMA
МАКСИМАЛЬНАЯ
ГРУЗОПОДЪЕМНОСТЬ
200 KG**

socage.it

10

OPTIONAL PRESCRIPTION FOR INSULATED BASKET

!!!ATTENTION - DANGER!!! <u>PRESCRIPTIONS TO GUARANTEE INSULATION</u> ● DON'T MODIFY OR TAKE ANY PART RELATING TO INSULATION AWAY FROM THE BASKET (INSULATORS, BLACK PROTECTION, CONTROL PUSH-BUTTON, DISTRIBUTOR LEVELS, ETC.). ● DON'T PAINT NOR GET DIRTY THE INSULATING COMPONENTS (INSULATORS, BLACK PROTECTION, CONTROL PUSH-BUTTON, DISTRIBUTOR LEVELS, ETC.). ● IN CASE OF BREAKING OR SERIOUS DAMAGES DON'T USE THE EQUIPEMENT NEAR ELECTRIC LINES BEFORE HAVING DONE THE SUITABLE MAINTENTION AT THE SOCAGE OR ANOTHER AUTHORIZED WORKSHOP. ● USE THE EQUIPEMENT NEAR ELECTRIC LINES ONLY IN DRY CONDITIONS. NB902107 !!!ATTENTION - DANGER!!!	!!!ATTENTION - DANGER!!! BASKET INSULATION IS GUARANTEED ONLY FOR INVOLUNTARY CONTACTS WITH ELECTRIC LINES WORKING AT $\leq 1000V$ IN ALTERNATE OR CONTINUOUS CURRENT. INSULATION IS VALID ONLY IN DRY CONDITIONS. !!!ATTENTION - DANGER!!! !!!ATTENTION - DANGER!!! NOT INSULATED SOCKET: DON'T USE IT WHEN THERE IS THE RISK OF TOUCHING ELECTRIC LINE ABSOLUTELY. !!!ATTENTION - DANGER!!!
--	--

***** CHAPTER 8 *****

INTEGRATION FOR INSULATED BASKET
(OPTIONAL)

The documentation contained in this chapter is composed of
n° 4 pages, this included..

WORKERS-CARRYING INSULATED BASKET

Polyethylene structure equipped with a lateral opening to enter and protected from a bar.
The basket dimensions are the following: mm. 700/1400x700x1150h..

This basket prevents persons and things from **INVOLUNTARY** contacts with electric lines and it has not to be used for live working.

After the assembly of the isolation the basket is tested with a standard test in which a discharge of 3 times stronger compared to the isolation value for 60 seconds, with the control of the lack of discharges or connection points.

It is advisable that the workers use shoes and gloves made of an insulated material together with a insulated cover to put on the controls before doing some electric maintenance works.

.

ALWAYS REMEMBER:



BASKET INSULATION IS GUARANTEED ONLY FOR INVOLUNTARY CONTACTS WITH ELECTRIC LINES WORKING AT $\leq$ _____ V IN ALTERNATE OR CONTINUOUS CURRENT



INSULATION IS VALID ONLY IN DRY CONDITIONS.



DON'T MODIFY OR TAKE ANY PART RELATING TO INSULATION AWAY FROM THE BASKET (INSULATORS, BLACK PROTECTION, CONTROL PUSH-BUTTON, DISTRIBUTOR LEVELS, ETC.).



DON'T PAINT NOR GET DIRTY THE INSULATING COMPONENTS (INSULATORS, BLACK PROTECTION, CONTROL PUSH-BUTTON, DISTRIBUTOR LEVELS, ETC.).



IN CASE OF BREAKING OR SERIOUS DAMAGES DON'T USE THE EQUIPMENT NEAR ELECTRIC LINES BEFORE HAVING DONE THE SUITABLE MAINTENANCE AT THE SOCAGE - OR ANOTHER AUTHORIZED WORKSHOP.



IF IT IS PRESENT, SOCKET IS NOT INSULATED. SO IT HAS NOT TO BE USED WHEN THERE IS THE RISK OF TOUCHING ELECTRIC LINES

***** CHAPTER 9 *****

INSPECTION REGISTER

The documentation contained in this chapter is composed of
n° 10 pages, this included..


CUSTOMER SERVICE



Service and Spare Parts
+39 059 8348000
www.socage.it




Socage Customer Service S.r.l.
Via O. Respighi n° 113/115 - 41022 Modena (MO) - Italy
Tel. +39 059 8348000 - Fax +39 059 8348001
vendite@cs.socage.it - tecnico@cs.socage.it

REFERENCE REGULATIONS

This inspection register is given by Messrs. SOCAGE to the user of this platform, in compliance with 2006/42/EC directive.

PRESERVATION INSTRUCTIONS

This register is to be considered an integral part of the platform and should accompany this equipment during its whole working life up to final scrapping.

ATTENTION!!!

According to the regulation 2006/42/CE together with this register also the certificates of the replaced components must be recorded (motor, mechanisms, structural elements, safety devices and as well as the dedicated components) as well as the reports of important repairs.

COMPILATION INSTRUCTIONS

The following instructions are given according to provisions known at the date of the lifter's putting into the stream of commerce. New provisions could modify the user's obligations.

IMP.: THE FREQUENCY AND IMPORTANCE OF THE TESTS MAY ALSO DEPEND ON THE NATIONAL REGULATIONS.

This register has been conceived to write down, according to proposed charts, the following events related to the useful life of the machine:

- periodic inspections (Max every six months) to be carried out by the person in charge of safety at the company which owns the platform
- transfers of title
- replacement of motor, mechanisms, structural components, safety devices and relevant components
- breakdowns of some importance and appropriate repairs

PERIODIC INSPECTIONS

Inspection date	Date of next inspection	Name of inspector	Comments	Signature

PERIODIC INSPECTIONS

Inspection date	Date of next inspection	Name of inspector	Comments	Signature

DELIVERY OF TO THE FIRST OWNER

This platform, serial number....., manufactured in
as indicated in this inspection register was delivered by SOCAGE , on..... to:
.....
.....

according to the conditions set forth by the agreement, with technical, dimension and functional specifications indicated in the instruction manual and in the summary contained in this Register.

MESSRS.

SUBSEQUENT TRANSFERS OF TITLE

On title of the platform in question was transferred to :
.....
.....

We certify that, on the above mentioned date, technical, dimension and functional specifications of the lifter in question are in accordance to original specifications and that changes, if any, have been written down in this Register.

The seller

The buyer

.....

.....

SUBSEQUENT TRANSFERS OF TITLE

On title of the platform in question was transferred to :
.....
.....

We certify that, on the above mentioned date, technical, dimension and functional specifications of the lifter in question are in accordance to original specifications and that changes, if any, have been written down in this Register.

The seller

The buyer

.....

.....

REPLACEMENT OF STRUCTURAL COMPONENTS

Date:

component description
.....

manufacturer: supplied by:

reason for the replacement:
.....
.....
.....The person in charge of the replacement
.....The user
.....

REPLACEMENT OF STRUCTURAL COMPONENTS

Date:

component description
.....

manufacturer: supplied by:

reason for the replacement:
.....
.....
.....The person in charge of the replacement
.....The user
.....

REPLACEMENT OF STRUCTURAL COMPONENTS

Date:

component description
.....

manufacturer: supplied by:

reason for the replacement:
.....
.....
.....The person in charge of the replacement
.....The user
.....

REPLACEMENT OF MECHANISMS

Date:

component description
.....

manufacturer: supplied by:

reason for the replacement:
.....
.....
.....The person in charge of the replacement
.....The user
.....

REPLACEMENT OF MECHANISMS

Date:

component description
.....

manufacturer: supplied by:

reason for the replacement:
.....
.....
.....The person in charge of the replacement
.....The user
.....

REPLACEMENT OF MECHANISMS

Date:

component description
.....

manufacturer: supplied by:

reason for the replacement:
.....
.....
.....The person in charge of the replacement
.....The user
.....

REPLACEMENT OF SAFETY DEVICES AND RELEVANT COMPONENTS

Date:

component description
.....

manufacturer: supplied by:

reason for the replacement:
.....
.....
.....The person in charge of the replacement
.....The user
.....

REPLACEMENT OF SAFETY DEVICES AND RELEVANT COMPONENTS

Date:

component description
.....

manufacturer: supplied by:

reason for the replacement:
.....
.....
.....The person in charge of the replacement
.....The user
.....

REPLACEMENT OF SAFETY DEVICES AND RELEVANT COMPONENTS

Date:

component description
.....

manufacturer: supplied by:

reason for the replacement:
.....
.....
.....The person in charge of the replacement
.....The user
.....

[illegible]

EMPTY PAGE FOR FURTHER INFORMATION